

Acer TravelMate 8472/8472G/8472T/8472TG

Service Guide

Service guide files and updates are available on the ACER/CSD web; for more information, please refer to <http://csd.acer.com.tw>

Revision History

Please refer to the table below for the updates made on this service guides.

Date	Chapter	Updates

Copyright

Copyright © 2010 by Acer Incorporated. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of Acer Incorporated.

Disclaimer

The information in this guide is subject to change without notice.

Acer Incorporated makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties of merchantability or fitness for any particular purpose. Any Acer Incorporated software described in this manual is sold or licensed "as is". Should the programs prove defective following their purchase, the buyer (and not Acer Incorporated, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software.

Acer is a registered trademark of Acer Corporation.

Intel is a registered trademark of Intel Corporation.

Other brand and product names are trademarks and/or registered trademarks of their respective holders.

Conventions

The following conventions are used in this manual:

SCREEN MESSAGES	Denotes actual messages that appear on screen.
NOTE	Gives bits and pieces of additional information related to the current topic.
WARNING	Alerts you to any damage that might result from doing or not doing specific actions.
CAUTION	Gives precautionary measures to avoid possible hardware or software problems.
IMPORTANT	Reminds you to do specific actions relevant to the accomplishment of procedures.



NOTE: This symbol where placed in the Service Guide designates a component that should be recycled according to the local regulations.

Preface

Before using this information and the product it supports, please read the following general information.

1. This Service Guide provides you with all technical information relating to the BASIC CONFIGURATION decided for Acer's "global" product offering. To better fit local market requirements and enhance product competitiveness, your regional office MAY have decided to extend the functionality of a machine (e.g. add-on card, modem, or extra memory capability). These LOCALIZED FEATURES will NOT be covered in this generic service guide. In such cases, please contact your regional offices or the responsible personnel/channel to provide you with further technical details.
2. Please note WHEN ORDERING FRU PARTS, that you should check the most up-to-date information available on your regional web or channel. If, for whatever reason, a part number change is made, it will not be noted in the printed Service Guide. For ACER-AUTHORIZED SERVICE PROVIDERS, your Acer office may have a DIFFERENT part number code to those given in the FRU list of this printed Service Guide. You MUST use the list provided by your regional Acer office to order FRU parts for repair and service of customer machines.

System Specifications	1
Features	1
Optional Items	3
System Block Diagram	4
Your Acer Notebook tour	5
Top View	5
Closed Front View	6
Left View	6
Right View	7
Bottom View	7
Indicators	8
TouchPad Basics	9
Using the Keyboard	10
Windows Keys	11
Hot Keys	12
Hardware Specifications and Configurations	13
System Utilities	21
BIOS Setup Utility	21
Navigating the BIOS Utility	21
Information	22
Main	23
Security	24
Boot	27
Exit	28
BIOS Flash Utility	29
DOS Flash Utility	30
WinFlash Utility	31
Remove HDD/BIOS Password Utilities	32
Removing BIOS Passwords:	33
Miscellaneous Utilities	34
Machine Disassembly and Replacement	37
Disassembly Requirements	37
General Information	38
Pre-disassembly Instructions	38
Disassembly Process	38
External Module Disassembly Process	39
External Modules Disassembly Flowchart	39
Removing the Battery Pack	40
Removing the SD dummy card	41
Removing the Lower Cover	42
Removing the HDD Module	43
Removing the DIMM Modules	45
Removing the 3G Module	46
Removing the WLAN Module	47
Removing the Optical Drive Module	48
Removing the Keyboard	50
Main Unit Disassembly Process	52
Main Unit Disassembly Flowchart	52
Removing the Upper Cover	53
Removing the Function Board	56
Removing the Touchpad Board	58
Removing the Fingerprint Board	60

Table of Contents

Removing the USB Board	60
Removing the Modem Module	62
Removing the Bluetooth Module	63
Removing the 3G Module	65
Removing the Speaker FFC	67
Removing the Mainboard	68
Removing the RTC Battery	70
Removing the PCH Heatsink	71
Removing the Thermal Module	72
Removing the CPU	73
Removing the LCD Module	75
LCD Module Disassembly Process	77
LCD Module Disassembly Flowchart	77
Removing the LCD Bezel	78
Removing the Camera Module	80
Removing the LCD Panel	81
Removing the LVDS Cable	82
Remove the LCD Hinges	83
LCD Module Assembly Process	85
Replacing the LVDS Cable	86
Replacing the LCD Panel	87
Replacing the Camera Module	89
Replacing the LCD Bezel	89
Main Unit Assembly Process	92
Replacing the LCD Module	92
Replacing the CPU	94
Replacing the Thermal Module	95
Replacing the PCH Heatsink	96
Removing the RTC Battery	97
Replacing the Mainboard	97
Replacing the Speaker FFC	100
Replacing the 3G Module	100
Replacing the Bluetooth Module	102
Replacing the Modem Module	103
Replacing the USB Board	105
Replacing the Fingerprint Board	106
Replacing the Touchpad Board	106
Replacing the Function Board	108
Replacing the Upper Cover	109
External Module Disassembly Process	113
Replacing the Keyboard	113
Replacing the Optical Drive Module	114
Replacing the WLAN Module	115
Replacing the 3G Module	117
Replacing the DIMM Modules	118
Replacing the HDD Module	118
Replacing the Lower Cover	121
Replacing the SD dummy card	122
Replacing the Battery Pack	122

Troubleshooting

123

Common Problems	123
Power On Issue	124
No Display Issue	125
Random Loss of BIOS Settings	126

Table of Contents

LCD Failure	127
Built-In Keyboard Failure	127
TouchPad Failure	127
Internal Speaker Failure	127
HDD Not Operating Correctly	129
ODD Failure	130
Wireless Function Failure	133
Thermal Unit Failure	133
External Mouse Failure	133
Other Failures	133
Intermittent Problems	134
Undetermined Problems	134
Post Codes	135
Jumper and Connector Locations	137
Top View	137
Bottom View	137
Clearing Password Check and BIOS Recovery	138
Clearing Password Check	138
BIOS Recovery by Crisis Disk	139
FRU (Field Replaceable Unit) List	141
ZQ3 Exploded Diagrams	142
LCD Assembly	142
ZQ3 FRU List	144
Screw List	153
Model Definition and Configuration	154
Test Compatible Components	155
Online Support Information	161
Index	163

Table of Contents

System Specifications

Features

Below is a brief summary of the computer's many features:

NOTE: Items denoted with an (*) are only available for selected models.

Operating System

- Genuine Windows® 7 Home Basic 64-bit
- Genuine Windows® 7 Home Premium 64-bit

Platform

- **Intel® Core™ i7-620M** processor (4 MB L3 cache, 2.66 GHz with Turbo Boost up to 3.33 GHz, DDR3 1066 MHz, 35 W), supporting Intel® 64 architecture, Intel® Smart Cache
- **Intel® Core™ i5-430M/i5-520M/i5-540M** processor (3 MB L3 cache, 2.26/2.40/2.53 GHz with Turbo Boost up to 2.53/2.93/3.06 GHz, DDR3 1066 MHz, 35 W), supporting Intel® 64 architecture, Intel® Smart Cache
- **Intel® Core™ i3-330M/i3-350M** processor (3 MB L3 cache, 2.13/2.26 GHz, DDR3 1066 MHz, 35 W), supporting Intel® 64 architecture, Intel® Smart Cache
- Mobile Intel® HM55 Express Chipset

System Memory

- Dual-channel DDR3 SDRAM support:
 - Up to 4 GB of DDR3 system memory, upgradable to 8 GB using two soDIMM modules (for 64-bit OS)
 - Up to 2 GB of DDR3 system memory, upgradable to 4 GB using two soDIMM modules (for 32-bit OS)

Display

- 14.0" HD 1366 x 768 pixel resolution, high-brightness LED backlit TFT LCD
- Mercury free, environment friendly
- Super-slim design
- Anti-glare coating
- NVIDIA® GeForce® GT 330M with switchable graphics technology, up to 4606 MB of TurboCache™ (1024 MB of dedicated DDR3 VRAM, up to 3582 MB of shared system memory), supporting NVIDIA® CUDA™, PhysX™, PureVideo® HD technology, OpenEXR High Dynamic-Range (HDR) technology, Shader Model 4.0, Microsoft® DirectX® 10.1
- NVIDIA® GeForce® GT 310M with switchable graphics technology, up to 4094 MB of TurboCache™ (512 MB of dedicated DDR3 VRAM, up to 3582⁸ MB of shared system memory), supporting NVIDIA® CUDA™, PhysX™, PureVideo® HD technology, OpenEXR High Dynamic-

Range (HDR) technology, Shader Model 4.0, Microsoft® DirectX® 10.1

- Dual independent display support
- 16.7 million colors
- External resolution / refresh rates:
- VGA port up to 2048 x 1536: 85 Hz
- MPEG-2/DVD decoding
- WMV9 (VC-1) and H.264 (AVC) decoding

Audio

- Two built-in stereo speakers
- High-definition audio support
- Built-in microphone
- MS-Sound compatible

Storage

- Hard disk drive
 - 160/250/320/500/640 GB or larger, with enhanced Acer DASP (Disk Anti-Shock Protection)
- Solid state drive
 - 160 GB Intel® X25-M
- Multi-in-1 card reader, supporting:
 - Secure Digital™ (SD) Card, MultiMediaCard (MMC), Memory Stick™ (MS), Memory Stick PRO™ (MS PRO), xD-Picture Card™ (xD)
- Optical disc drive
- 8X DVD-Super Multi double-layer drive:
 - Read: 24X CD-ROM, 24X CD-R, 24X CD-RW, 8X DVD-ROM, 8X DVD-R, 8X DVD+R, 6X DVD-ROM DL, 6X DVD-R DL, 6X DVD+R DL, 6X DVD-RW, 6X DVD+RW, 5X DVD-RAM
 - Write: 24X CD-R, 16X CD-RW, 8X DVD-R, 8X DVD+R, 4X DVD-R DL, 4X DVD+R DL, 6X DVD-RW, 8X DVD+RW, 5X DVD-RAM

Communication

- Webcam
- Acer Video Conference, featuring:
 - Integrated Acer Crystal Eye webcam with 1280 x 1024 resolution
 - Acer Video Conference Manager software, featuring Video Quality Enhancement (VQE) technology, supporting 1280 x 1024 resolution online video calls
 - Acer PureZone technology
- Wireless and networking
- WLAN:
 - Acer InViLink™ Nplify™ 802.11b/g/n Wi-Fi CERTIFIED™
 - Acer InViLink™ Nplify™ 802.11b/g Wi-Fi CERTIFIED™
 - Supporting Acer SignalUp™ wireless technology
- WPAN:

-
- Bluetooth® 3.0+HS
 - Bluetooth® 2.1+EDR
 - LAN: Gigabit Ethernet, Wake-on-LAN ready
 - Modem: 56K V.92 , Wake-on-Ring ready
 - WWAN: UMTS/HSPA at 850/900/1900/2100 MHz and quad-band GSM/GPRS/EDGE at 850/900/1800/1900 MHz upgradable to 7.2 Mb/s HSDPA and 5.7 Mb/s HSUPA

Privacy control

- Enhanced Acer DASP (Disk Anti-Shock Protection)
- Acer Bio-Protection fingerprint solution, featuring Pre-Boot Authentication (PBA), computer protection, Acer FingerLaunch
- BIOS user, supervisor, HDD passwords
- Kensington lock slot

Dimensions and weight

- 345 (W) x 249 (D) x 26.8/32.1 (H) mm (13.58 x 9.8 x 1.05/1.26 inches)
- 2.4 kg (5.29 lbs.)¹¹ with 6-cell battery pack

Power subsystem

- ACPI 3.0 CPU power management standard: supports Standby and Hibernation power-saving modes
- 3-pin 90 W AC adapter:
 - 133 (W) x 59 (D) x 31 (H) mm (5.23 x 2.32 x 1.22 inches)
 - 390 g (0.86 lbs.) with 180 cm DC cable
- 66 W 6000 mAh 6-cell Li-ion standard battery pack
- Battery life:
 - 8 hours
- ENERGY STAR®

Special keys and controls

- 88-/89/93-key keyboard

I/O interface

- Acer EasyPort IV connector
- Acer Bio-Protection fingerprint reader
- Multi-in-1 card reader (SD™, MMC, MS, MS PRO, xD)
- Three USB 2.0 ports
- External display (VGA) port
- Headphone/speaker/line-out jack
- Microphone-in jack
- Ethernet (RJ-45) port
- Modem (RJ-11) port

-
- DC-in jack for AC adapter

Software

- Productivity
 - Acer Backup Manager
 - Acer ePower Management
 - Acer eRecovery Management
 - Microsoft® Office Trial (Service Pack 2)
 - Microsoft® Works SE 9
 - Microsoft® Works 9
 - Microsoft® Works 8.5
 - Adobe® Flash® Player 10
 - Adobe® Reader® 9.1
 - eSobi™
 - Google™ Setup
 - Google Toolbar™
 - Norton™ Online Backup
- Security
 - Acer Arcade™ Deluxe
 - Acer InstantOn Arcade
 - McAfee® Internet Security Suite 2009 Trial
 - McAfee® Virus Definitions
 - MyWinLocker®
- Multimedia
 - Cyberlink® PowerDVD™
 - NTI Media Maker™
- Gaming
 - Oberon GameZone Acer Edition
 - WildTangent® Acer Edition
- Communication and ISP
 - Acer Video Conference Manager
 - Microsoft® Silverlight™
 - Windows Live™ Essentials - Wave 3.2 (Mail, Photo Gallery, Live™ Messenger, Movie Maker, Writer)
- Utilities and tools
 - Acer Accessory Store
 - Acer Assist
 - Acer Identity Card
 - Acer Registration
 - Acer Updater
 - eBay® shortcut 2009
- Netflix shortcut

Optional Items

- Acer EasyPort IV
- 1 GB / 2 GB DDR3 1066 MHz soDIMM module
- 6-cell Li-ion battery pack
- 3-pin 90 W AC adapter

Warranty


- One-year International Travelers Warranty (ITW)

Environment

- Temperature:
 - Operating: 5°C to 35°C
 - Non-operating: -20°C to 65°C
- Humidity (non-condensing):
 - Operating: 20% to 80%
- Non-operating: 20% to 80%


NOTE: The specifications listed above are for reference only. The exact configuration of the PC depends on the model purchased.

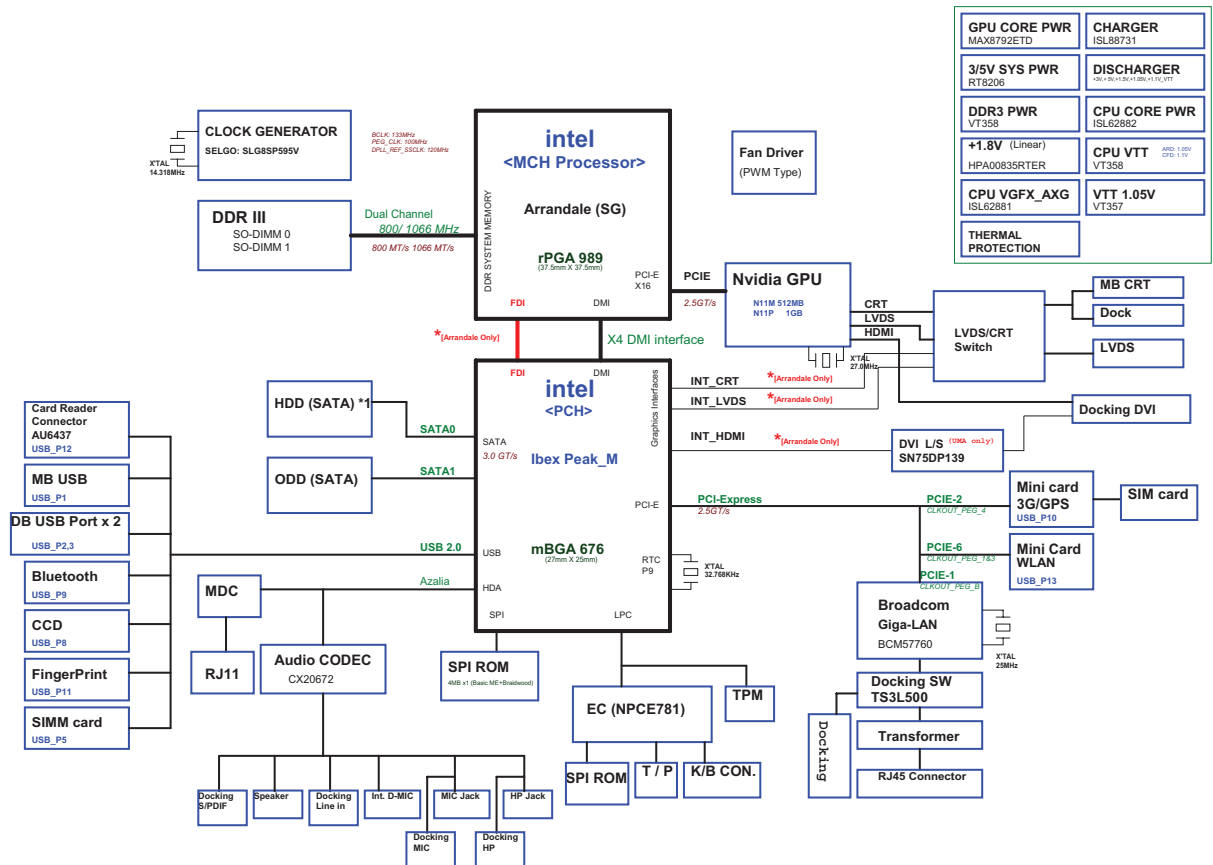

System Block Diagram



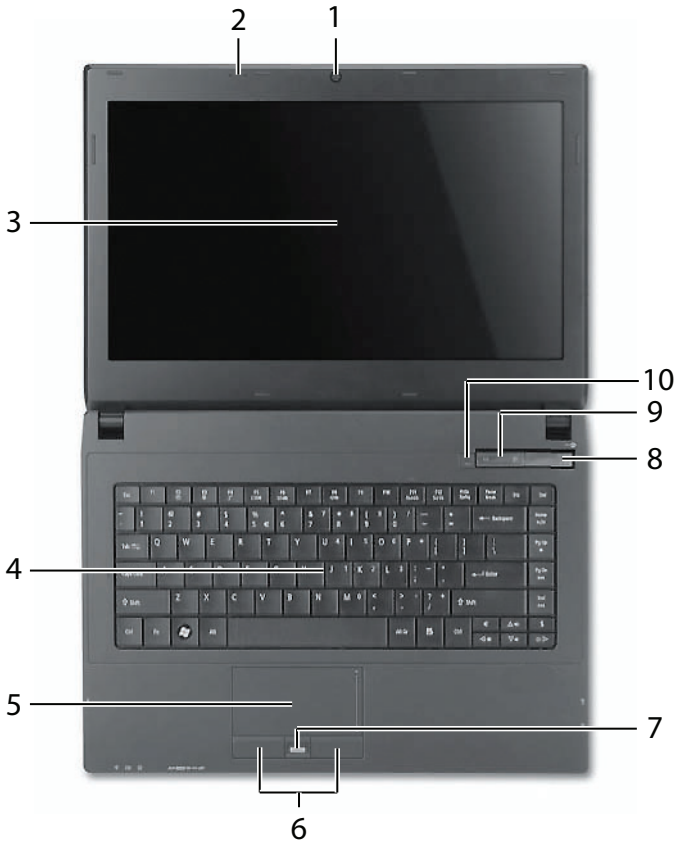

Your Acer Notebook tour


Top View






#	Icon	Item	Description
1		Acer Crystal Eye webcam	Web camera for video communication. (only for certain models)
2		Microphone	Stereo internal microphones for sound recording.
3		Display screen	Also called Liquid-Crystal Display (LCD), displays computer output (configuration may vary by model).
4		Keyboard	For entering data into your computer
5		Touchpad	Touch-sensitive pointing device which functions like a computer mouse.
6		Click buttons (left, and right)	The left and right buttons function like the left and right mouse buttons.
7		Acer Bio-Protection fingerprint reader	The center button serves as the Acer Bio-Protection fingerprint reader, supporting Pre-Boot Authentication (PBA) computer protection, Acer FingerLaunch.
8		Power button	Turns the computer on and off.


#	Icon	Item	Description
9		Communication indicator	Indicates the computer's wireless connectivity status.
	P	Programmable key	User-programmable (only for certain models).
		PowerSmart key	Puts your computer into power-saving mode (only for certain models).
10		Optical drive eject button	Ejects the optical disk from the drive.

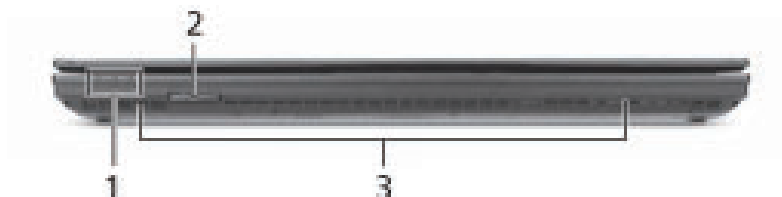

Closed Front View





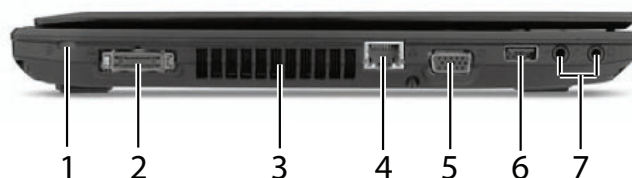


No.	Icon	Item	Description
1		Power Indicator	Indicates the computer's power status.
		Battery Indicator	Indicates the computer's battery status. 1. Charging: The light shows amber when the light is charging. 2. Fully charged: the light shows blue when in AC mode.
		HDD indicator	Indicates when the hard disk drive is active.
2		Multi-in-one Card Slot	Accepts multiple storage card formats.
3		Ventilation Slots	Allows air circulation through the computer

Left View






No.	Icon	Item	Description
1		Kensington lock slot	Connects to a Kensington-compatible computer security lock.
2		Acer EasyPort connector	Connects to the Acer EasyPort.
3		Ventilation slots	Enable the computer to stay cool, even after prolonged use.


No.	Icon	Item	Description
4		Ethernet RJ-45) port	Connects to an Ethernet 10/100/1000-based network.
5		External display (VGA) port	Connects to a display device (e.g. external, LCD monitor, LCD projector).
6		USB 2.0 port	Connects to USB 2.0 devices (e.g., USB mouse, USB camera).
7		Microphone jack	Accepts inputs from external microphones.
		Headphones/speaker/line-out jack with S/PDIF support.	Connects to audio line-out devices (e.g., speakers, headphones).





Right View

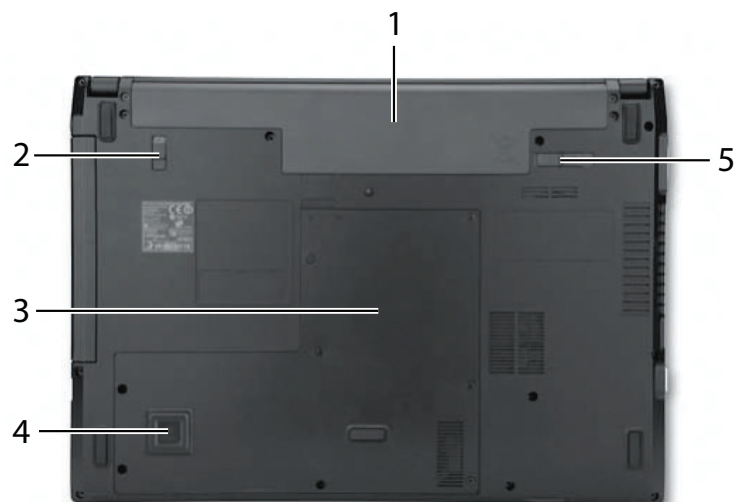

No.	Icon	Item	Description
1		USB 2.0 ports	Connect to USB 2.0 devices (e.g., USB mouse, USB camera).
2		Modem (RJ-11) port	Connects to a phone line.
3		Optical drive	Internal optical drive; accepts CDs or DVDs.
4		Optical disk access indicator	Lights up when the optical drive is active.
5		Emergency eject hole	Ejects the optical drive tray when the computer is turned off. Note: Insert a paper clip to the emergency eject hole to eject the optical drive tray when the computer is off.
6		DC-in jack	Connects to an AC adapter.





Bottom View



No.	Icon	Item	Description
1		Battery bay	Houses the computer's battery pack.
2		Battery lock	Locks the battery in position.
3		Hard disk bay	Houses the computer's hard disk (secured with screws).
		Memory compartment	Houses the computer's main memory.
4		Acer DASP (Disk Anti-Shock Protection)	Protects the hard disk from shocks and bumps.
5		Battery release latch	Releases the battery for removal.


Indicators

The computer has several easy-to-read status indicators.

Icon	Function	Description
	Power	Indicates the computer's power status.
	Battery	Indicates the computer's battery status. NOTE: 1. Charging: The light shows amber when the battery is charging. 2. Fully charged: The light shows green when in AC mode.
	HDD	Indicates when the hard disk drive is active.
	Communication indicator	Indicates the computer's wireless connectivity device status.

TouchPad Basics

The following items show you how to use the TouchPad:

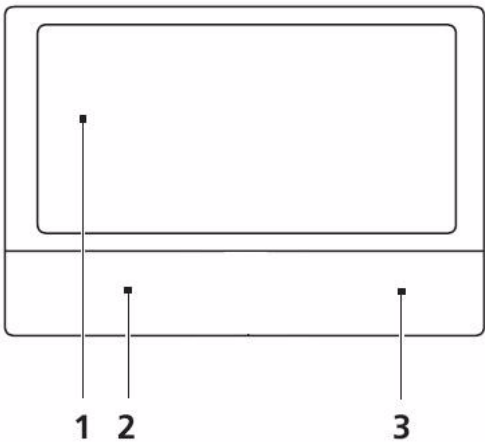


- Move your finger across the TouchPad (1) to move the cursor.
- Press the left (2) and right (3) buttons located beneath the TouchPad to perform selection and execution functions. These two buttons are similar to the left and right buttons on a mouse. Tapping on the TouchPad is the same as clicking the left button.

Function	Left Button (2)	Right Button (3)	Main TouchPad (1)
Execute	Quickly click twice.		Tap twice (at the same speed as double-clicking a mouse button).
Select	Click once.		Tap once.
Drag	Click and hold, then use finger on the TouchPad to drag the cursor.		Tap twice (at the same speed as double-clicking a mouse button); rest your finger on the TouchPad on the second tap and drag the cursor.
Access context menu		Click once.	

NOTE: When using the TouchPad, keep it - and your fingers - dry and clean. The TouchPad is sensitive to finger movement; hence, the lighter the touch, the better the response. Tapping too hard will not increase the TouchPad's responsiveness.

Using the Keyboard

The keyboard has full-sized keys and an embedded numeric keypad, separate cursor, lock, Windows, function and special keys.

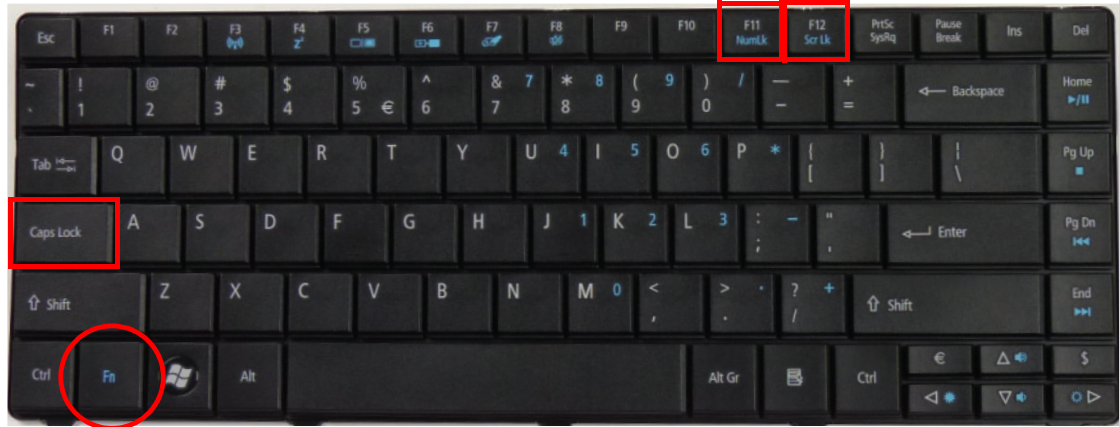



















Lock Keys and embedded numeric keypad

The keyboard has two lock keys which you can toggle on and off.

Lock key	Description
Caps Lock	When Caps Lock is on, all alphabetic characters typed are in uppercase.
Num Lock <Fn> + <F11>	When Num Lock is on, the embedded keypad is in numeric mode.
Scroll Lock <Fn> + <F12>	When Scroll Lock is on, the screen moves one line up or down when you press the up or down arrow keys respectively. Scroll Lock does not work with some applications.

Windows Keys


The keyboard has two keys that perform Windows-specific functions.









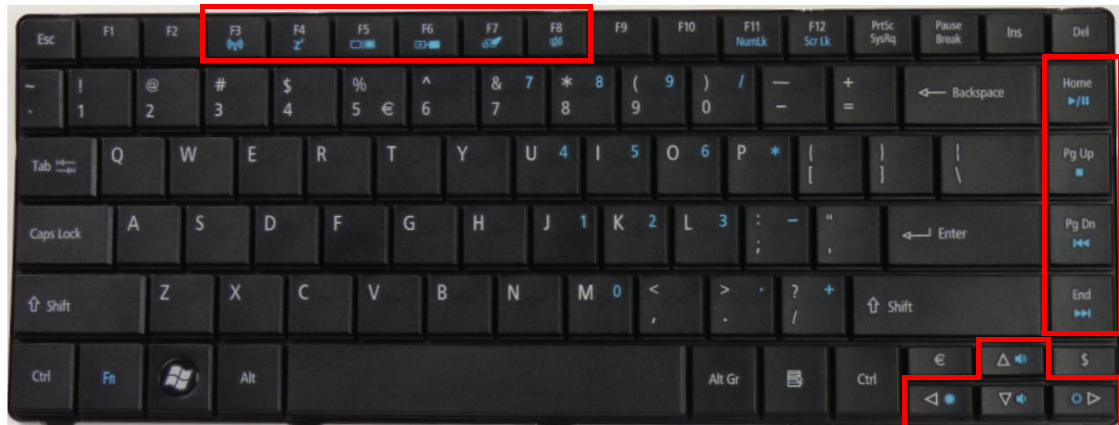

Key	Description
 Windows key	<p>Pressed alone, this key has the same effect as clicking on the Windows Start button; it launches the Start menu. It can also be used with other keys to provide a variety of functions:</p> <p><  >: Open or close the Start menu</p> <p><  > + <D>: Display the desktop</p> <p><  > + <E>: Open Windows Explore</p> <p><  > + <F>: Search for a file or folder</p> <p><  > + <G>: Cycle through Sidebar gadgets</p> <p><  > + <L>: Lock your computer (if you are connected to a network domain), or switch users (if you're not connected to a network domain)</p> <p><  > + <M>: Minimizes all windows</p> <p><  > + <R>: Open the Run dialog box</p> <p><  > + <T>: Cycle through programs on the taskbar</p> <p><  > + <U>: Open Ease of Access Center</p> <p><  > + <X>: Open Windows Mobility Center</p> <p><  > + <BREAK>: Display the System Properties dialog box</p> <p><  > + <SHIFT+M>: Restore minimized windows to the desktop</p> <p><  > + <TAB>: Cycle through programs on the taskbar</p> <p><  > + <SPACEBAR>: Bring all gadgets to the front and select Windows Sidebar</p> <p><CTRL> + <  > + <F>: Search for computers (if you are on a network)</p> <p><CTRL> + <  > + <TAB>: Use the arrow keys to cycle through programs on the taskbar</p> <p>Note: Depending on your edition of Windows, some shortcuts may not function as described.</p>

Hot Keys

The computer employs hotkeys or key combinations to access most of the computer's controls like screen brightness, volume output and the BIOS utility.

To activate hot keys, press and hold the <Fn> key before pressing the other key in the hotkey combination.



Hotkey	Icon	Function	Description
<Fn> + <F3>		Communication key	Enables / disables the computer's communication devices. (Communication devices may vary by configuration.)
<Fn> + <F4>		Sleep	Puts the computer in Sleep mode.
<Fn> + <F5>		Display toggle	Switches display output between the display screen, external monitor (if connected) and both.
<Fn> + <F6>		Display Off	Turns the display screen backlight off to save power. Press any key to return.
<Fn> + <F7>		Touchpad toggle	Turns the internal touchpad on and off.
<Fn> + <F8>		Speaker toggle	Turns the speakers on and off.
<Fn> + <▷>		Brightness up	Increases the screen brightness.
<Fn> + <◁>		Brightness down	Decreases the screen brightness.
<Fn> + <△>		Volume up	Increases the sound volume.
<Fn> + <▽>		Volume down	Decreases the sound volume.

Hardware Specifications and Configurations

Processor

Item	Specification
CPU	<ul style="list-style-type: none">Intel Calpella (Discrete/UMA: Arrandale with Gfx)Intel PCH: HM55 (4MB SPI ROM)
Type	<ul style="list-style-type: none">MCP (Multi-Chip Package) CPU
CPU Package	989 pins-rPGA socket
Power	65 Watts
On-die Cache	<ul style="list-style-type: none">32-KB instruction and 32 -KB data first-level cache (L1) for each core256-KB shared instruction/data second -level cache (L2) for each coreUp to 8-MB shared instruction/data last -level cache (L3), shared among all cores
Front Side Bus	800/1066M/1333Hz

Processor Specifications

Item	CPU Speed	Cores	Bus Speed	Cache Size	Package	Core Voltage
Ci3330M	2.13	2	330 M	3 MB	PGA988	35W
Ci5430M	2.26	2	430 M	3 MB	PGA988	35W
Ci5520M	2.24	2	520 M	3 MB	PGA988P	35W
Ci7620M	2.66	2	620 M	4 MB	PGA988P	35W

CPU Fan True Value Table (UMA)

CPU Temperature (Celsius)	Fan Speed (RPM)	SPL Spec (dBA)
45	2500	31
55	3100	34
65	3500	38
75	3900	40
85	4200	42

Throttling 50%: On= 100°C; OFF=85°C

OS shut down at 105°C; H/W shut down at 110°C

CPU Fan True Value Table (SG)

CPU Temperature (Celsius)	Fan Speed (RPM)	SPL Spec (dBA)
40	2500	31
50	3100	34
60	3500	38
70	3900	40
80	4200	42

Throttling 50%: On= 100°C; OFF=85°C

OS shut down at 105°C; H/W shut down at 110°C

Core Logic Specifications

Item	Specification
Chipset	Intel Ibex-Peak (HM55)
Package	1071-pins FCBGA 27mm x 25mm
Features	<ul style="list-style-type: none">• PCI Express* Base Specification, Revision 2.0 support for up to eight ports.• PCI Local Bus Specification, Revision 2.3 support for 33 MHz PCI operations (supports up to four Req/Gnt pairs).• ACPI Power Management Logic Support, Revision 3.0b• Enhanced DMA controller, interrupt controller, and timer functions• Integrated Serial ATA host controllers with independent DMA operation on up to six ports.• FIS-based Port Multiplier support on SATA Ports 4 and 5 in AHCI/RAID mode.• USB host interface with support for up to twelve USB ports; two EHCI high-speed USB 2.0 Host controllers, 2 rate matching hubs, six UHCI host controllers;• System Management Bus (SMBus) Specification, Version 2.0 with additional support for I2C devices• Supports Intel® High Definition Audio• Supports Intel® Matrix Storage Technology• Supports Intel® Active Management Technology• Supports Intel® Virtualization Technology for Directed I/O• Supports Intel® Trusted Execution Technology• Supports buffered through mode generating extra clocks from a clock chip.• Analog and Digital Display ports<ul style="list-style-type: none">• Analog CRT• HDMI• DisplayPort 1.1 (dGPU only)• LVDS• Low Pin Count (LPC) interface• Serial Peripheral Interface (SPI) support• Intel® Anti-Theft Technology• JTAG Boundary Scan support

System Memory

Item	Specification
Maximum Memory size	16GB (For i7 CPU only)
DIMM socket number	2 (Standard JEDEC 20 4-pin DDR3-SODIMM)
Supports memory size per socket	4GB
Supports DIMM type	DDR3
Supports DIMM Speed	800 MT/s (PC3-6400) and 1066 MT/s (PC3-8500)
Supports DIMM voltage	1.5V ± 0.075V

Memory Combinations

Slot 1	Slot 2	Total Memory
0MB	1024MB	1024MB
0MB	2048MB	2048MB
0MB	4096MB	4096MB
1024MB	0MB	1024MB
1024MB	512MB	1536MB
1024MB	1024MB	2048MB
1024MB	2048MB	3072MB
2048MB	0MB	2048MB
2048MB	512MB	2560MB
2048MB	1024MB	3072MB
2048MB	2048MB	4096MB
2048MB	4096MB	6144MB
4096MB	4096MB	8192MB
8192MB	8192MB	16384MB

LAN Interface

Item	Specification
Part Name	AR8151 , integrated 10/100/1000 Base-T Ethernet
Package	40-pin QFN packages
Features	Supports 10/100/1000BASE-T Mb/s
Interface	PCI-Express

Bluetooth 2.1

Item	Specification
Chipset	<ul style="list-style-type: none">Foxconn Bluetooth BRM 2046 BT2.1 (T60H928.33)Foxconn Bluetooth ATH AR3011
Radio Technology	FHSS
Operating Frequency	2402 ~ 2480MHz ISM band
Channel Numbers	79 channels with 1MHz BW
Transmitter Output Power	-4~4dBm output power for class2 operation
Receiver Sensitivity	-78dBm @ 0.1% BER(Max)
Maximum Receiver Signal	-10dBm
Operating Voltage	3.3V+/-0.3V
Interface	USB 2.0

Fan

Item	Specification
Chipset	PWM controllable fans as cooling system, the speed can be controlled by WPC781
Pin number	4 pins
Speed	TBD
Air delivery	TBD
Power	5V Max

Speaker

Item	Specification
Vendor	NEW JIALIAN
Module No.	YDD1851F-70
Power Rating	2.0 W
Output Sound Pressure Level	80±3dB
Response F0	950 Hz±20%
Distortion	10% MAX

Hard Disk Drive Interface

Item	Specification			
Vendor & Model Name	Seagate	HGST	Toshiba	Western Digital
Capacity (MB)	160, 250, 320, 500	160, 250, 320, 500	160, 250, 320, 500	160, 250, 320, 500, 640
Bytes per sector	512			
Data heads	2-4			
Drive Format				
Disks	1-2			
Spindle speed (RPM)	5400			
Performance Specifications				
Buffer size	8 MB			
Interface	SATA			
DC Power Requirements				
Voltage tolerance	5V ±5%	5V ±5%	5V ±5%	5V ±5%

USB Port

Item	Specification
Chipset	Intel Ibex-Peak (HM55)
USB compliance level	2.0
OHCI	
Number of USB port(s)	3
Location	2 Rightside, 1 Leftside
Serial port function control	N/A

Super-Multi Drive Module

Item	Specification			
Vendor & model name	HLDS GT20N		Sony AD7580S	
Performance Specification	With CD Diskette	With DVD Diskette	With CD Diskette	With DVD Diskette
Transfer rate (MB/ sec)	Sustained: 3,600 KB/s (24x) max.	Sustained: 11.08 Mbytes/s (8x) max.	Sustained: 1,571 (typical)	Sustained: 10,993 (typical)
Buffer Memory	2 MB			
Interface	SATA			
Applicable disc formats	DVD-ROM: 4.7GB (Single Layer) 8.5GB (Dual Layer) DVD-R: 3.95GB (Ver. 1.0: read only) 4.7GB (Ver. 2.0 for Authoring: read only) 4.7GB (Ver. 2.1 for General: read & write) (DL) 8.5GB (Ver. 3.0) DVD-RW: 4.7GB (Ver. 1.2/ Rev 1.0, 2.0, 3.0) DVD-RAM: 1.46GB/side, 4.7GB/side (Ver. 2.2) DVD+R: 4.7GB (Ver. 1.3) (DL) 8.5GB (Ver. 1.1) DVD+RW: 4.7GB (Vol.1 Ver.1.3) CD-ROM Mode-1 data disc CD-ROM Mode-2 data disc CD-ROM XA, CD-I, Photo-CD Multi-Session, Video CD CD-Audio Disc Mixed mode CD-ROM disc (data and audio) CD-Extra CD-Text CD-R (Conforming to “Orange Book Part 2”: read & write) CD-RW (Conforming to “Orange Book Part 3”: read & write)		DVD Read: DVD-ROM (DVD-5, DVD-9, DVD-10, DVD-18), DVD-Video, DVD-Audio, SACD (Hybrid), UDF DVD, DVD-R, DVD-R DL, DVD-R 3.95 GB, DVD-R Authoring, DVD-R Multi-Border, DVD-RW, DVD+R, DVD+R DL, DVD+R Multi-Session, DVD+RW, DVD-RAM V1.0, DVD-RAM V2.0 & 2.1 & 2.2. CD Read: CD-DA, CD-ROM Mode-1, CD-ROM/XA Mode-2 Form-1 and Mode-2 Form-2, CD-i, CD-i Bridge, Video-CD (MPEG-1), Karaoke CD, Photo-CD, Enhanced CD, CD Plus, CD Extra, itrax CD, CD-Text, UDF CD, CD-R, and CD-RW DVD Write: DVD Data & Video CD Read: CD-DA, CD-ROM Mode-1, CD-ROM/XA Mode-2 Form-1 and Mode-2 Form-2, CD-i, Video-CD, CD-Text	
Loading mechanism	Drawer (Solenoid Open) Tact SW (Open) Emergency Release (draw open hole)			
Power Requirement				
Input Voltage	DC 5 V +/- 5%			

Audio Interface

Item	Specification
Chipset	CX20672-11Z
Package	40-QFN
Features	<ul style="list-style-type: none">• 24-bit, two pairs of independent DACs and three pairs of independent ADCs• ProCoustic headphone driver, which delivers 50 mW into 32 Ω load with no pop, eliminating the need for an external amplifier and DC-blocking capacitors• Integrated 5 V to 3.3 V low-dropout voltage regulator for improved audio performance, eliminating need for external regulator or power transistor• Integrated 3.3 V to 1.8 V low-dropout voltage regulator, used to power digital blocks• Integrated 2 WRMS (per channel) class-D stereo speaker amplifier with Spread Spectrum and 10-kV ESD withstand capability• Digital Microphone interface with internal MIC boost supporting up to two multiplexed digital element array microphones (contact Conexant Sales/FAE for a list of qualified microphones and vendors).• Independent Sony Philips Digital Interface (SPDIF) Output supporting sample rates 44.1 kHz, 48 kHz, and 96 kHz, 16, 20, and 24-bit resolution

Video Interface

Item	Specification
Chipset	Madison / Park for TM7740ZG
Package	962 FCBGA
Interface	PCI Express x16
Internal microphone	N/A
Internal speaker/ quantity	N/A

Video Memory

Item	Specification
Chipset	SAMSUNG or HYNIX
Memory size	1024 Mbit / 2048 Mbit
Interface	GDDR3

HDMI Port

Item	Specification
Compliance level	1.3 compliant
Throughput	Up to 2.5Gbps per lane (250MHz pixel clock)
Number of HDMI port(s)	1
Location	One of the left side

System Board Major Chips

Item	Specification
Core logic	Intel Ibex-Peak (HM55)
VGA	Madison/Park
LAN	AR8151
USB(version)	USB 2.0
Super I/O controller	NPCE781
Modem(If any,delete if not)	N/A
Bluetooth	BRM 2046 BT2.1/BT3.0, BRM 2070, ATH AR3011/ATH AR3011 (BT3.0)
Wireless	Atheros HB93/HB95/HB97, Broadcom 43225
PCMCIA	N/A
Audio codec	CX20672-11Z
Card reader	AU6437

Keyboard

Item	Specification
Controller	NPCE781
Total number of keypads	88 keys
Hotkeys	Standby, wireless/BT enable/disable, brightness up/down, LCD/CRT. See “Hot Keys” on page 15.

I/O Ports

Item	Specification
I/O support	<ul style="list-style-type: none">• Multi-in-1 card reader (SD™, MMC, MS, MS PRO, xD)• Three USB 2.0 ports• HDMI™ port with HDCP support• External display (VGA) port• Headphone/speaker/line-out jack• Microphone-in jack• Ethernet (RJ-45) port• DC-in jack for AC adapter

Main Battery

Item	Specification
	6 Cell
Vendor	SIMPLO
Part name	AS10D73
Battery Type	Li-ion
Pack capacity	4400 mAh
Normal voltage	11.1V
Charge voltage	12.6V
Fast charge current	3520 mA

RTC Battery

Item	Specification
Part name	CR2032
Pack capacity	220 mAh
Normal voltage	3V

LCD Resolution

Resolution	24 bits	30 bits	36 bits	48 bits
640X480p/60Hz 4:3	Yes	NA	NA	NA
720X480p/60Hz 4:3	NA	NA	NA	NA
640X480p/60Hz 16:9	NA	NA	NA	NA
1280X720p/60Hz 16:9	Yes	NA	NA	NA
1920X1080p/60Hz 16:9	Yes	NA	NA	NA
1440X480p/60Hz 4:3	NA	NA	NA	NA
1440X480p/60Hz 16:9	NA	NA	NA	NA
1920X1080p/50Hz 16:9	Yes	NA	NA	NA
720X576p/50Hz 4:3	Yes	NA	NA	NA
720X576p/50Hz 16:9	NA	NA	NA	NA
1280X720p/50Hz 16:9	Yes	NA	NA	NA
1920X1080i/50Hz 16:9	Yes	NA	NA	NA
1440X576i/50Hz 4:3	NA	NA	NA	NA
1440X576i/50Hz 16:9	NA	NA	NA	NA
1920X1080p/50Hz 16:9	Yes	NA	NA	NA

LCD

Item	Specification
Vendor/model name	LTN173KT01-A01
Screen Diagonal (mm)	17.3 "diagonal mm
Display Area (mm)	382.08 (H) x 214.92 (V) mm
Display resolution (pixels)	1600 x 900
Pixel Pitch	0.0796 (H) x 0.2388 (V) (TYP.) mm
Display Mode	Normally white
Typical White Luminance (cd/m ²) (also called Brightness)	220 cd/m2
Contrast Ratio	600
Response Time (Optical Rise Time/Fall Time) msec	8 ms
Weight	540g
Physical Size (mm)	398.1(H) x 232.8 (V) x 5.7 (D) mm
Electrical Interface	
Support Color	16.7 million colors
Viewing Angle (up/down/right/ left)	40 Degrees (L+R), 15 Degrees (H), 30 Degrees (L)
Temperature Range (°C) Operating Storage (shipping)	0 Min - 60 Max -20 Min - 50 Max

Camera

Item	Specification	Specification
Vendor and model	Chicony 1.3M CH9665SN (CNF9157) Chicony 1.3M CH9665AL(CNF9155)	Liteon 09P2BF127 Liteon 09P2SF119
Type	CMOS image sensor with SXGA	CMOS image sensor with SXGA
Interface	USB 2.0	USB 2.0
Focusing range	31.4cm ~ ?	32cm ~ ?
Dimensions(L x W x H mm)	65.0±0.3 X 8.0±0.1 X 3.69+0.11/-0.2 mm	65.0 x 8.0 x 3.53 ±0.2mm
Sensor type	SXGA CMOS sensor	CMOS Image Sensor
Pixel resolution	1280 x 1024,1280x800,640 X 480,352x288,320x240,176x144,160 x 120	1280 x 1024, 1024 x768, 640 x 480, 352x288, 320x240,176x144, 160 x 120
Pixel size	TBC	2 um x 2 um
Image size	TBC	TBC

Card Reader

Item	Specification
Chipset	AU6437
Features	Secure Digital™ (SD) Card, MultiMediaCard (MMC), Memory Stick™ (MS), Memory Stick PRO™ (MS PRO), xD-Picture Card™ (xD)

System LED Indicator

Item	Specification
Drive Activity	Power Led: Blue Suspend: Amber
Primary Battery charging state	Amber: Battery Charging

AC Adapter

Item	Specification
Input rating	100 Vac to 240 Vac
Maximum input AC current	100 Vac, 240 Vac / 3.42A load 1.5A
Inrush current	240 Vac; (Cold Start) No damage
Efficiency	100 Vac / 120W load 85% 240 Vac / 120W load 85%

System Power Management

Item	Initial	On	Standby	Suspend	Hibernate	Soft Off
Initial		1				
On(S0)			2	3	4	5
Standby(S1)		6				
Suspend(S3)		7				
Hibernate(S4)		8				
Soft Off(S5)		9				

Mechanical off is a condition where all power except the RTC battery has been removed from the system.

1. Initial to On state: When the AC adapter or Battery pack has been plugged into the system, the I WPC781 will be reset and initial all output pins then the system goes into Initial state and waiting for power on event. If the power button is pressed then the system will go into the ON state.
2. ON to Standby state: The system will go into the Standby state when HM55 receives the POS command.
3. ON to Suspend state: The system will go into Suspend state when HM55 receives the S2R command.
4. ON to Hibernate state: The system will go into Hibernate state when HM55 receives the S2D command.
5. ON to Soft Off state: The system will go into Soft Off state when HM55 receives the Soft off command.
6. Standby to ON state: The system will go into ON state when the system receives any wake up events, for example, keyboard, mouse.
7. Suspend to ON state: The system will go into ON state when the power button is pressed.
8. Hibernate to ON state: The system will go into ON state when the power button is pressed.
9. Soft Off to ON state: The system will go into ON state when the power button is pressed.

System Utilities

BIOS Setup Utility

The BIOS Setup Utility is a hardware configuration program built into your computer's BIOS (Basic Input/Output System).

Your computer is already properly configured and optimized, and you do not need to run this utility. However, if you encounter configuration problems, you may need to run Setup. Please also refer to Chapter 4 Troubleshooting when problem arises.

To activate the BIOS Utility, press **F2** during POST (when **Press <F2> to enter Setup** message is prompted on the bottom of screen).

Press **F2** to enter setup. The default parameter of F12 Boot Menu is set to "disabled". If you want to change boot device without entering BIOS Setup Utility, please set the parameter to "enabled".

Press **<F12>** during POST to enter multi-boot menu. In this menu, user can change boot device without entering BIOS SETUP Utility.

Navigating the BIOS Utility

There are five menu options: Information, Main, Security, Boot, and Exit.


Follow these instructions:

- To choose a menu, use the left and right arrow keys.
- To choose an item, use the up and down arrow keys.
- To change the value of a parameter, press **F5** or **F6**.
- Press **Esc** while you are in any of the menu options to go to the Exit menu.
- In any menu, you can load default settings by pressing **F9**. You can also press **F10** to save any changes made and exit the BIOS Setup Utility.

NOTE: You can change the value of a parameter if it is enclosed in square brackets. Navigation keys for a particular menu are shown on the bottom of the screen. Help for parameters are found in the Item Specific Help part of the screen. Read this carefully when making changes to parameter values. **Please note that system information is subject to different models.**

Information

The Information screen displays a summary of your computer hardware information.

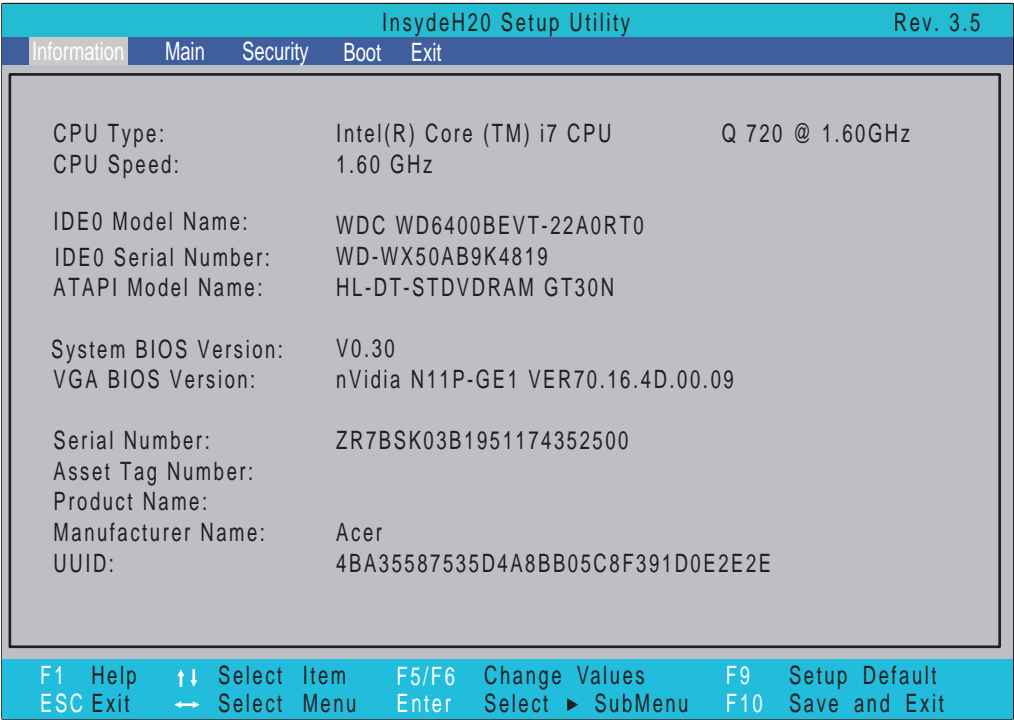


NOTE: The system information is subject to different models.

Parameter	Description
CPU Type	This field shows the CPU type and speed of the system.
CPU Speed	This field shows the speed of the CPU.
IDE0 Model Name	This field shows the model name of HDD installed in the system.
IDE0 Serial Number	This field displays the serial number of HDD installed in the system.
ATAPI Model Name	This field displays the model name of the installed ODD drive.
System BIOS Version	Displays system BIOS version.
VGA BIOS Version	This field displays the VGA firmware version of the system.
Serial Number	This field displays the serial number of this unit.
Asset Tag Number	This field displays the asset tag number of the system.
Product Name	This field shows product name of the system.
Manufacturer Name	This field displays the manufacturer of this system.
UUID Number	Universally Unique Identifier (UUID) is an identifier standard used in software construction, standardized by the Open Software Foundation (OSF) as part of the Distributed Computing Environment (DCE).

Main

The Main screen allows the user to set the system time and date as well as enable and disable boot option and recovery.

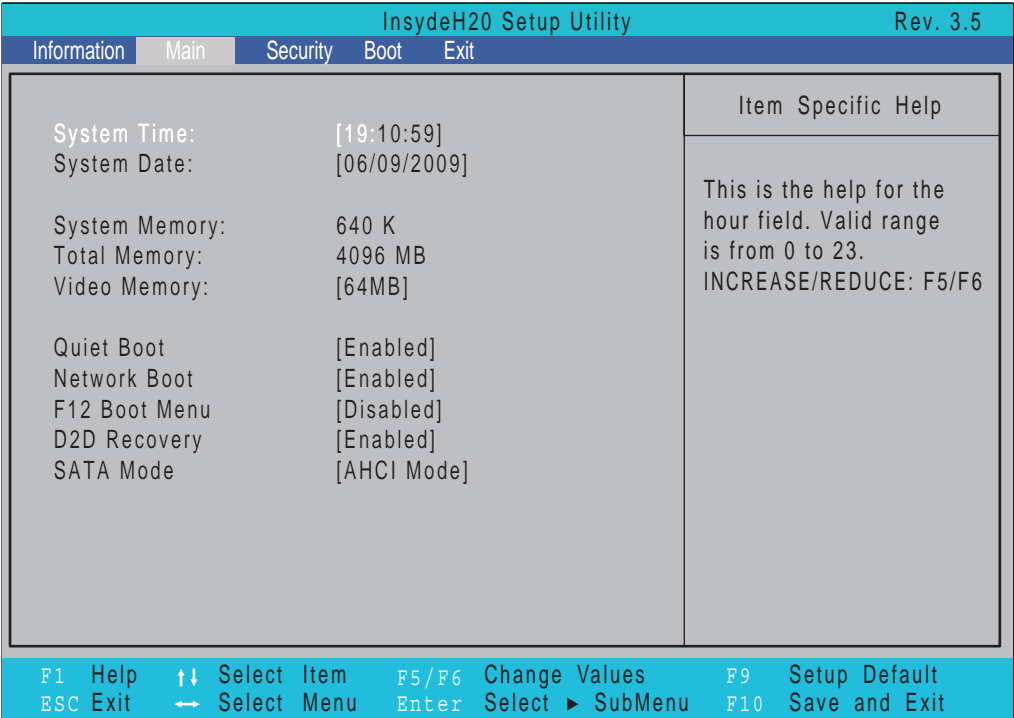


NOTE: The screen above is for your reference only. Actual values may differ.

The table below describes the parameters in this screen. Settings in **boldface** are the default and suggested parameter settings.

Parameter	Description	Format/Option
System Time	Sets the system time. The hours are displayed with 24-hour format.	Format: HH:MM:SS (hour:minute:second)
System Date	Sets the system date.	Format MM/DD/YYYY (month/day/year)
Total Memory	This field reports the memory size of the system. Memory size is fixed to 4096MB.	N/A
Video Memory	Shows the video memory size. VGA Memory size=32 MB	N/A
Quiet Boot	This will hide POST messages while booting.	Option: Enabled or Disabled
Network Boot	Enables, disables the system boot from LAN (remote server).	Option: Enabled or Disabled
F12 Boot Menu	Enables, disables Boot Menu during POST.	Option: Disabled or Enabled
D2D Recovery	Enables, disables D2D Recovery function. The function allows the user to create a hidden partition on hard disc drive to store operation system and restore the system to factory defaults.	Option: Enabled or Disabled
SATA Mode	Control the mode in which the SATA controller should operate.	Option: AHCI mode or IDE mode

Security

The Security screen contains parameters that help safeguard and protect your computer from unauthorized use.

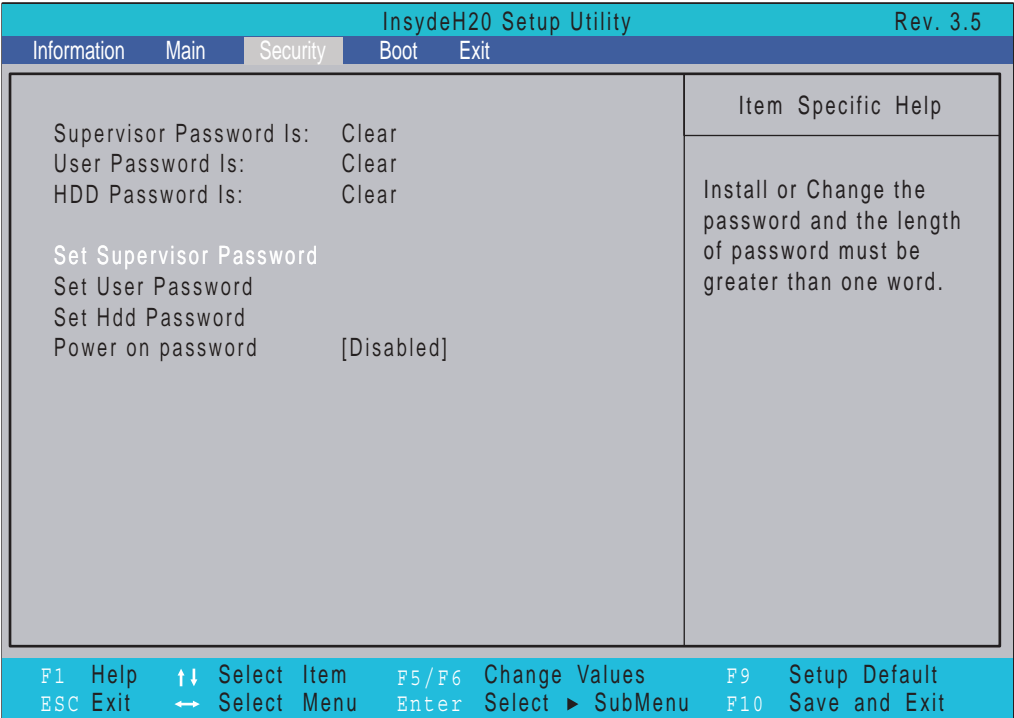

The table below describes the parameters in this screen. Settings in **boldface** are the default and suggested parameter settings.


Parameter	Description	Option
Supervisor Password Is	Shows the setting of the Supervisor password	Clear or Set
User Password Is	Shows the setting of the user password.	Clear or Set
IDE0 HDD Password Is	Shows the setting of the HDD password	Clear or Set
Set Supervisor Password	Press Enter to set the supervisor password. When set, this password protects the BIOS Setup Utility from unauthorized access. The user can not either enter the Setup menu nor change the value of parameters.	
Set User Password	Press Enter to set the user password. When user password is set, this password protects the BIOS Setup Utility from unauthorized access. The user can enter Setup menu only and does not have right to change the value of parameters.	
Set IDE0 Hdd Password	Press Enter to set the HDD password. When set this protects the HDD from unauthorized access.	
Power on password	Defines whether a password is required or not while the events defined in this group happened. The sub-options all require the Supervisor password for changes and should be grayed out if the user password was used to enter setup.	Disabled or Enabled

NOTE: When you are prompted to enter a password, you have three tries before the system halts. Don't forget the password. If you forget the password, you may have to reset the computer.

Setting a Password

Follow these steps as you set the user or the supervisor password:

1. Use the ↑ and ↓ keys to highlight the Set Supervisor Password parameter and press the **Enter** key. The Set Supervisor Password box appears:

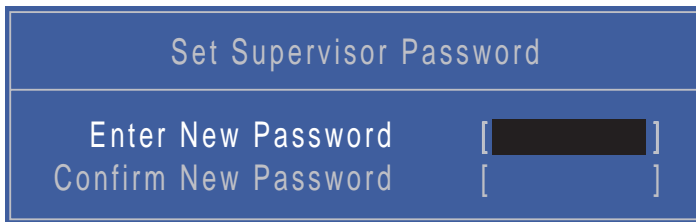A blue rectangular dialog box titled "Set Supervisor Password". It contains two input fields: "Enter New Password" and "Confirm New Password". The "Enter New Password" field has a black rectangular cursor bar at the end. Both fields are followed by a closing square bracket "]" on the right.

Set Supervisor Password	
Enter New Password	[<input type="password"/>]
Confirm New Password	[<input type="password"/>]

2. Type a password in the "Enter New Password" field. The password length can not exceeds 8 alphanumeric characters (A-Z, a-z, 0-9, not case sensitive). Retype the password in the "Confirm New Password" field.

IMPORTANT: Be very careful when typing your password because the characters do not appear on the screen.

3. Press **Enter**. After setting the password, the computer sets the User Password parameter to "Set".
4. If desired, you can opt to enable the Password on boot parameter.
5. When you are done, press F10 to save the changes and exit the BIOS Setup Utility.

Removing a Password

Follow these steps:

1. Use the ↑ and ↓ keys to highlight the Set Supervisor Password parameter and press the **Enter** key. The Set Password box appears:

A blue rectangular dialog box titled "Set Password". It contains three input fields: "Enter Current Password", "Enter New Password", and "Confirm New Password". The "Enter Current Password" field has a black rectangular cursor bar at the end. All three fields are followed by a closing square bracket "]" on the right.

Set Password	
Enter Current Password	[<input type="password"/>]
Enter New Password	[<input type="password"/>]
Confirm New Password	[<input type="password"/>]

2. Type the current password in the Enter Current Password field and press **Enter**.
3. Press **Enter** twice **without** typing anything in the Enter New Password and Confirm New Password fields. The computer then sets the Supervisor Password parameter to "Clear".

Changing a Password

- 1. Use the ↑ and ↓ keys to highlight the Set Supervisor Password parameter and press the **Enter** key. The Set Supervisor Password box appears.

Set Supervisor Password

Enter Current Password	[<input type="password"/>]
Enter New Password	[<input type="password"/>]
Confirm New Password	[<input type="password"/>]

- 2. Type the current password in the Enter Current Password field and press **Enter**.
- 3. Type a password in the Enter New Password field. Retype the password in the Confirm New Password field.
- 4. Press **Enter**. After setting the password, the computer sets the User Password parameter to “Set”.
- 5. If desired, you can enable the Password on boot parameter.
- 6. When you are done, press **F10** to save the changes and exit the BIOS Setup Utility.

If the verification is OK, the screen will display as following.

Setup Notice

Changes have been saved.

Continue

The password setting is complete after the user presses **Enter**.

If the current password entered does not match the actual current password, the screen will show you the Setup Warning.

Setup Warning

Invalid Password.

Continue

If the new password and confirm new password strings do not match, the screen displays the following message.

Setup Warning

Passwords do not match.
Re-enter password.

Continue


Boot

This menu allows the user to decide the order of boot devices to load the operating system. Bootable devices includes the USB diskette drives, the onboard hard disk drive and the DVD drive in the module bay.

InsydeH20 Setup Utility				Rev. 3.5	
Information	Main	Security	Boot	Exit	
Boot priority order: 1. IDE0 : Hitachi HTS545032B9A300 2. IDE1 : 3. Network Boot : Atheros Boot Agent 4. USB HDD 5. USB CDROM : 6. USB FDD :			Item Specific Help		
			Use <↑> or <↓> to select a device, then press <F5> to move it down the list, or <F6> to move it up the list. Press <Esc> to escape the menu		
F1 Help	↑↓ Select Item	F5/F6 Change Values	F9 Setup Default		
ESC Exit	↔ Select Menu	Enter Select ► SubMenu	F10 Save and Exit		

Exit

The Exit screen allows you to save or discard any changes you made and quit the BIOS Utility.

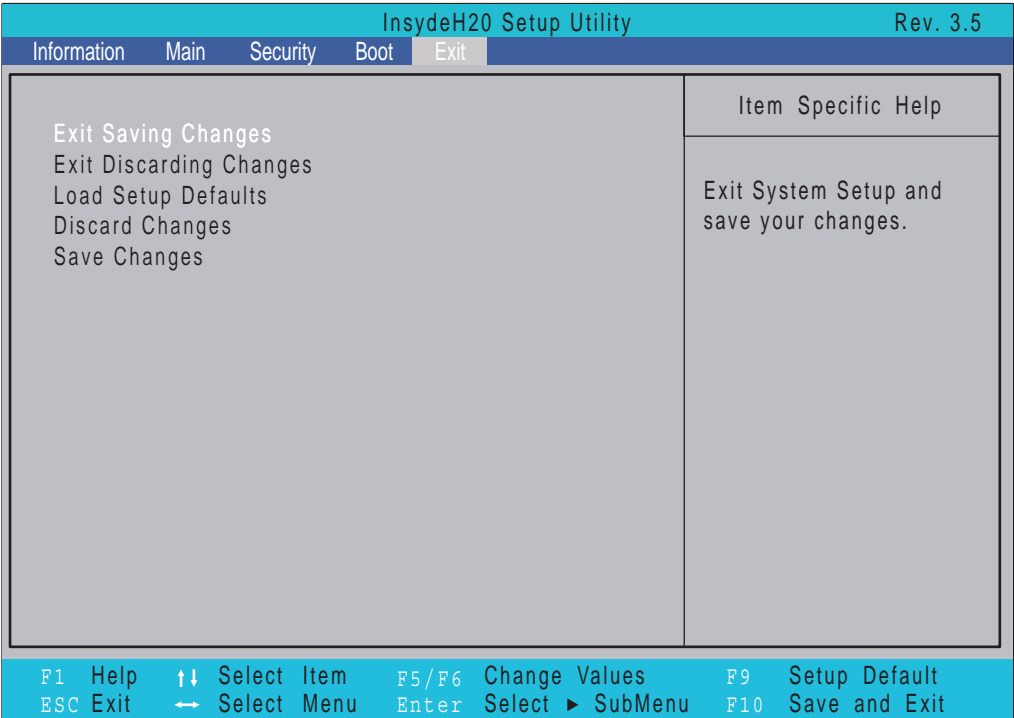

The table below describes the parameters in this screen.

Parameter	Description
Exit Saving Changes	Exit System Setup and save your changes to CMOS.
Exit Discarding Changes	Exit utility without saving setup data to CMOS.
Load Setup Default	Load default values for all SETUP item.
Discard Changes	Load previous values from CMOS for all SETUP items.
Save Changes	Save Setup Data to CMOS.

BIOS Flash Utility


The BIOS flash memory update is required for the following conditions:

- New versions of system programs
- New features or options
- Restore a BIOS when it becomes corrupted.

DOS Flash Utility


Perform the following steps to use the DOS Flash Utility:

1. Press F2 during boot to enter the Setup Menu.
2. Select **Boot Menu** to modify the boot priority order, for example, if using USB HDD to Update BIOS, move USB HDD to position 1.

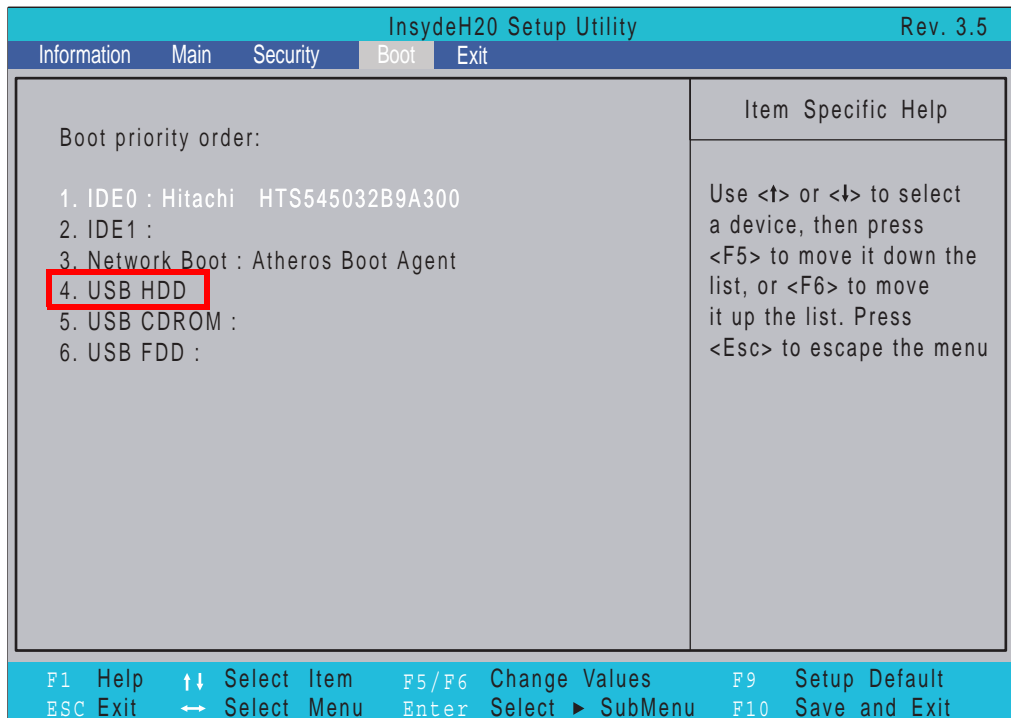


3. Execute the **FLASH.BAT** batch file to update BIOS. Or enter C:\ **Flash it bios ver.fd/dc**

The flash process begins as shown.

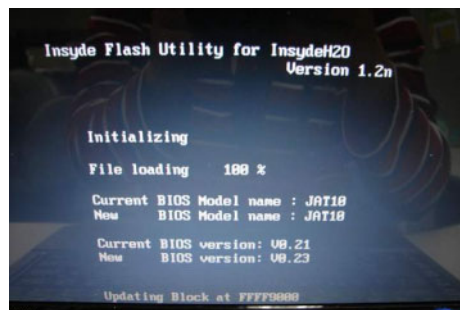

4. In flash BIOS, the message **Please do not remove AC Power Source** displays.

NOTE: If the AC power is not connected, the following message displays.

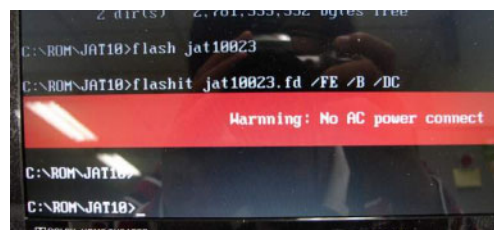

Plug in the AC power to continue.

5. Flash is complete when the message Flash programming complete displays.

WinFlash Utility

Perform the following steps to use the WinFlash Utility:

1. Double click the WinFlash executable.
2. Click **OK** to begin the update. A progress screen displays.




3. When the process is complete, close all programs and applications and reboot the system.

Remove HDD/BIOS Password Utilities

This section provide you with removing HDD/BIOS method:


Remove HDD Password:

When the user keys in the wrong password three times, the system reports the following error code to user.



To unlock the HDD password, perform the following steps:

1. Press **Enter** to display the Select Item screen.

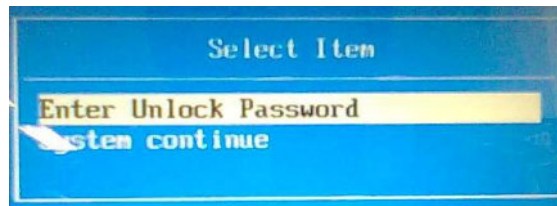

2. Select **Enter Unlock Password** and press **Enter**.


An Unlock Password displays.



3. Make a note of the key, **76943488** in the example.
4. Boot up the system to a removable bootable drive containing DOS and the UnlockHD.EXE program and open a DOS prompt. For instructions on changing boot priority see "Boot" on page 27.
5. From the DOS prompt, enter the **UnlockHD.EXE** command and input the key to create an unlock code. Make a note of the result, for example **46548274**.
6. Reboot to the hard disk and wait for the error code to reappear.
7. Press **Enter** to display the Select Item screen.
8. Select **Enter Unlock Password** and press **Enter**.
9. Enter the unlock code generated by UnlockHD.EXE.
10. Save and exit the BIOS to complete the process.

Removing BIOS Passwords:

If you key in the wrong Supervisor Password three times, System Disabled displays on the screen. See the image below.

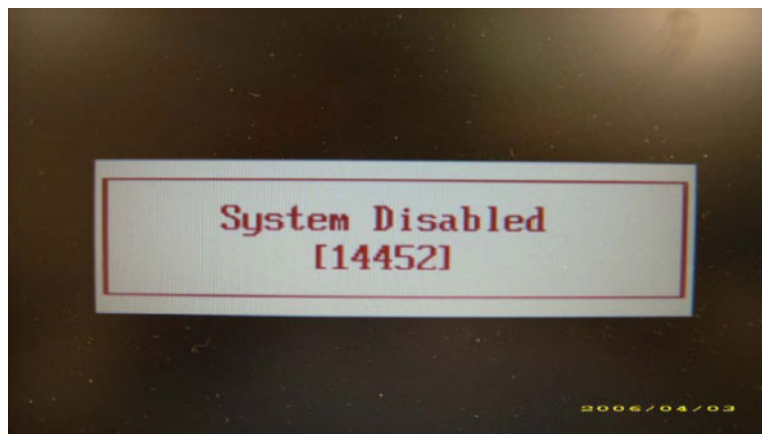

To reset the BIOS password, run clnpwd.exe as follows:

1. From a DOS prompt, Execute **clnpwd.exe**

```
d:\Clnpwd>clnpwd
ACER Clean Password Utility V1.00
Press 1 or 2 to clean any password shown as below
      1.User Password
      2.Supervisor Password

Clean User Password Successfully!
```

2. Press 1 or 2 to clean the desired password shown on the screen.

The on-screen message determines whether the function is successful or not.

Miscellaneous Utilities

Using Boot Sequence Selector

Boot Sequence Selector allows the boot order to be changes without accessing the BIOS. To use Boot Sequence Selector, perform the following steps:

1. Enter into DOS.
2. Execute BS.exe to display the usage screen.

```
d:\B00TSEQ>bs

*** Boot Sequence Selector Version 0.03 ***
Create by Rockwell Chuang 10/01/2005.

Usage:
      BS [ 1 | 2 | 3 | 4 ]

BS 1 : [ Floppy ] => [ HardDisk ] => [ CD-ROM ] => [ LAN   ]
BS 2 : [ HardDisk ] => [ CD-ROM ] => [ LAN   ] => [ Floppy ]
BS 3 : [ CD-ROM ] => [ HardDisk ] => [ LAN   ] => [ Floppy ]
BS 4 : [ LAN   ] => [ Floppy ] => [ HardDisk ] => [ CD-ROM ]

d:\B00TSEQ>
```

3. Select the desired boot sequence by entering the corresponding sequence, for example, enter BS2 to change the boot sequence to HDD|CD ROM|LAN|Floppy.

Using DMITools

The DMI (Desktop Management Interface) Tool copies BIOS information to eeprom to be used in the DMI pool for hardware management.

When the BIOS displays **Verifying DMI pool data** it is checking the table correlates with the hardware before sending to the operating system (Windows, etc.).

To update the DMI Pool, perform the following steps:

1. Enter into DOS.
2. Execute **dmitools.exe**. The following messages show dmitools usage:

```
*** Compal DMI String R/W Utility Ver1.40 for 2006/03/14 ***

Usage:

DMITOOLS [ /R | /WP | /WS | /WU ] [ STRING ]

[ /R ]   : Read DMI Information from Memory
[ /WM ]  : Write Manufacturer Name to EEPROM. (Max.= 16 characters)
[ /WP ]  : Write Product Name to EEPROM.      (Max.= 16 characters)
[ /WS ]  : Write Serial Number to EEPROM      (Max.= 22 characters)
[ /WU ]  : Write UUID to EEPROM.              (Ignore String   )
[ /WA ]  : Write Asset Tag to EEPROM.         (Max.= 32 characters)
```

IMPORTANT:The following write examples (2 to 5) require a system reboot to take effect

Example 1: Read DMI Information from Memory

Input:

```
dmitools /r
```

Output:

Manufacturer (Type1, Offset04h): Acer

Product Name (Type1, Offset05h): Aspire one xxxxx

Serial Number (Type1, Offset07h): 01234567890123456789

UUID String (Type1, Offset08h): xxxxxxxx-xxxx-xxxx-xxxx-xxxxxxxxxxxx

Asset Tag (Type3, Offset04h): Acer Asstag

Example 2: Write Product Name to EEPROM

Input:

```
dmitools /wp Acer
```

Example 3: Write Serial Number to EEPROM

Input:

```
dmitools /ws 01234567890123456789
```

Example 4: Write UUID to EEPROM

Input:

```
dmitools /wu
```

Example 5: Write Asset Tag to EEPROM


Input:

```
dmitools /wa Acer Asstag
```

Using the LAN MAC Utility

Perform the following steps to write MAC information to eeprom:

1. Use a text editor, for example Notepad, to edit the MAC.CFG file as shown:

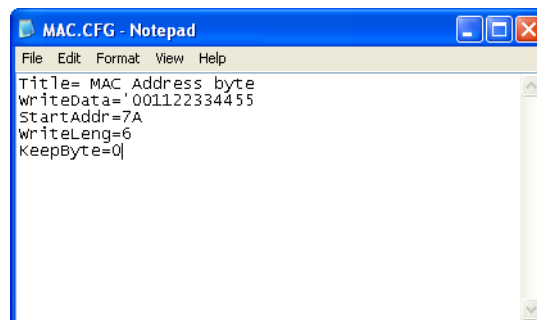

- WriteData= '001122334455' <----- MAC value
 - StartAddr=7A <----- MAC address
 - WriteLeng=6 <----- MAC value length
 - KeepByte=0 <----- can be any value
2. Boot into DOS.
 3. Execute **MAC.BAT** to write MAC information to eeprom.

Machine Disassembly and Replacement

IMPORTANT: The outside housing and color may vary from the mass produced model.

This chapter contains step-by-step procedures on how to disassemble the notebook computer for maintenance and troubleshooting.

Disassembly Requirements

To disassemble the computer, you need the following tools:

- Wrist grounding strap and conductive mat for preventing electrostatic discharge
- Flat screwdriver
- Philips screwdriver
- Plastic flat screwdriver
- Plastic tweezers

NOTE: The screws for the different components vary in size. During the disassembly process, group the screws with the corresponding components to avoid mismatch when putting back the components.

Pre-disassembly Instructions

Before proceeding with the disassembly procedure, make sure that you do the following:

1. Turn off the power to the system and all peripherals.
2. Unplug the AC adapter and all power and signal cables from the system.



3. Place the system on a flat, stable surface.

Disassembly Process

The disassembly process is divided into the following stages:

- External module disassembly
- Main unit disassembly
- LCD module disassembly

The flowcharts provided in the succeeding disassembly sections illustrate the entire disassembly sequence. Observe the order of the sequence to avoid damage to any of the hardware components. For example, if you want to remove the mainboard, you must first remove the keyboard, then disassemble the inside assembly frame in that order.

Main Screw List


Screw	Quantity	Part Number
M2.5*3.0 Ni	2	
M2.0*3.0	2	
M2.5*6.0	4	
M2.0*4.0	2	

External Module Disassembly Process

IMPORTANT:The outside housing and color may vary from the mass produced model.

External Modules Disassembly Flowchart

The flowchart below gives you a graphic representation on the entire disassembly sequence and instructs you on the components that need to be removed during servicing. For example, if you want to remove the mainboard, you must first remove the keyboard, then disassemble the inside assembly frame in that order.

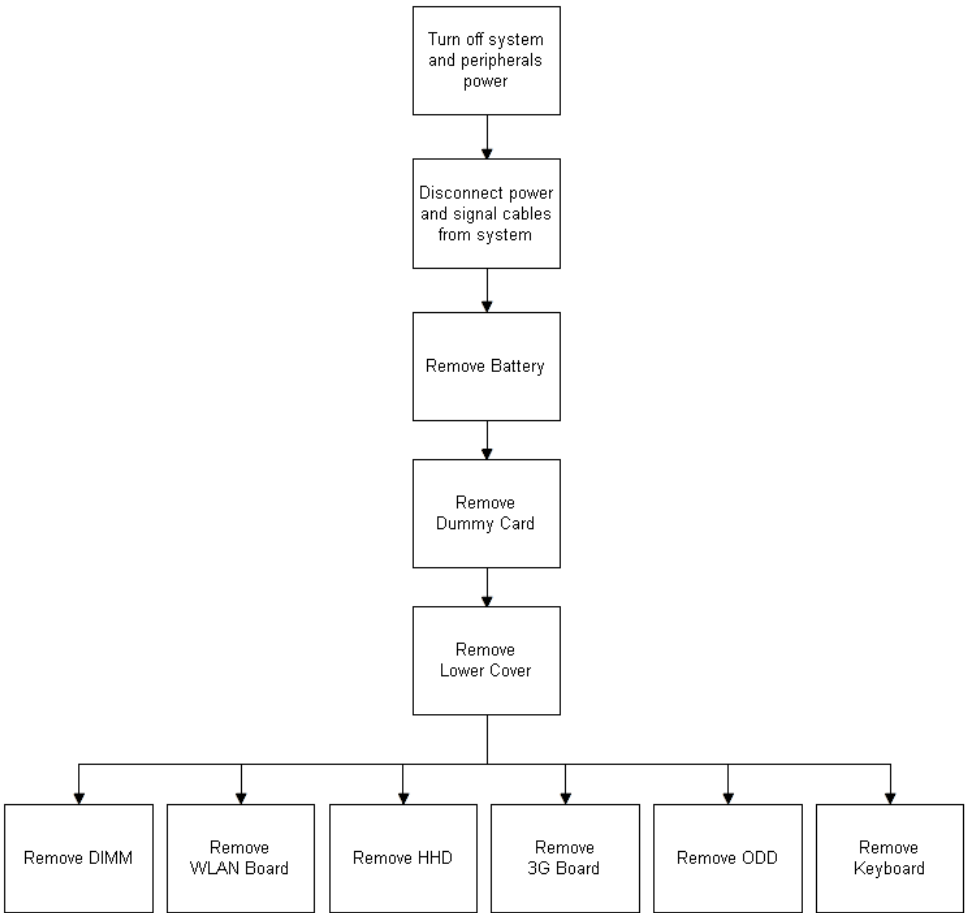


NOTE: 3G is available in selected models.

Screw List


Step	Screw	Quantity	Part No.
Lower Cover Disassembly	M2.5*6.0	4	
HDD Carrier Disassembly	M2.5*3.0 Ni	2	
WLAN Disassembly	M2.0*3.0	1	
3G Disassembly	M2.0*4.0	2	
ODD Bracket Disassembly	M2.0*3.0	2	

Removing the Battery Pack

1. Turn the computer over. Slide the battery lock in the direction shown.

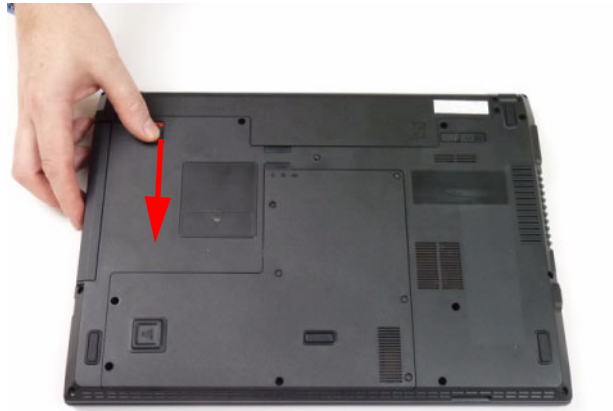

2. Slide and hold the battery release latch to the release position (1), then lift out the battery pack from the main unit (2).

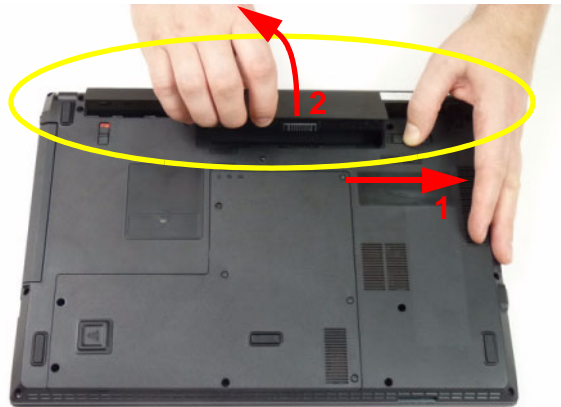

NOTE: Please detach the battery and follow local regulations for disposal.

Removing the SD dummy card

1. Push the SD dummy card all the way in to eject it.





2. Pull it out from the slot.



Removing the Lower Cover

- 1. See "Removing the Battery Pack" on page 45.
- 2. Loosen the four (4) captive screws (red callouts) and four (4) non-captive screws (green callouts) from the lower cover.

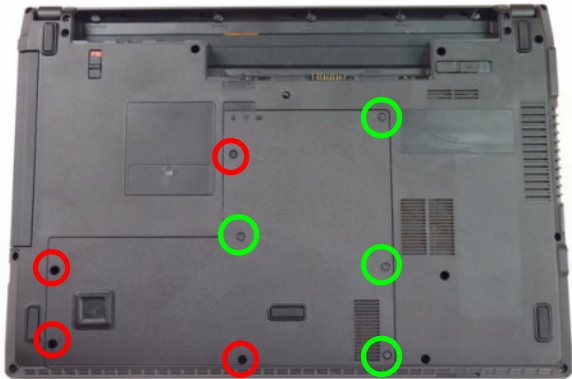


Step	Size	Quantity	Screw Type
Lower Cover Disassembly (green callout)	M2.5*6.0	4	

- 3. Remove the lower cover as shown.




Removing the HDD Module

1. See “Removing the Lower Cover” on page 47.
2. Using the pull-tab, slide the HDD module in the direction of the arrow to disconnect the interface.

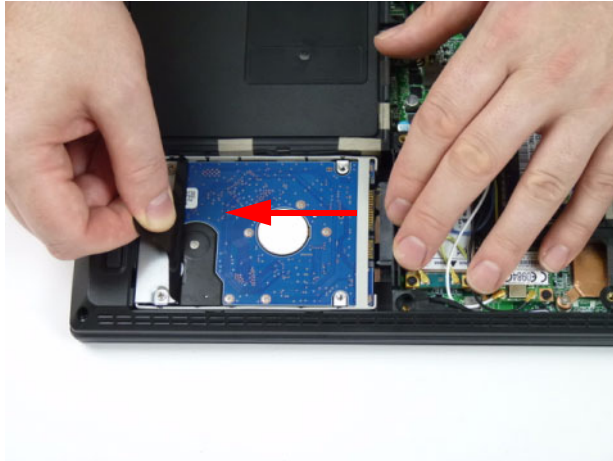


3. Tilt the HDD up as shown.

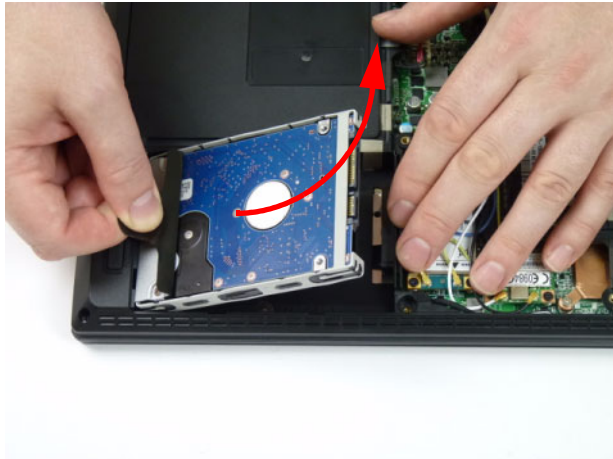


4. Remove HDD from the bay.




5. Remove the two (2) screws from the carrier.

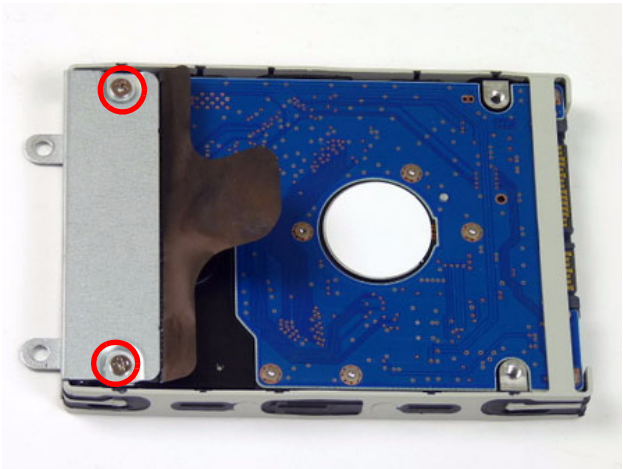


Step	Size	Quantity	Screw Type
HDD Carrier Disassembly	M2.5*3.0 Ni	2	


6. Remove the carrier from the HDD.

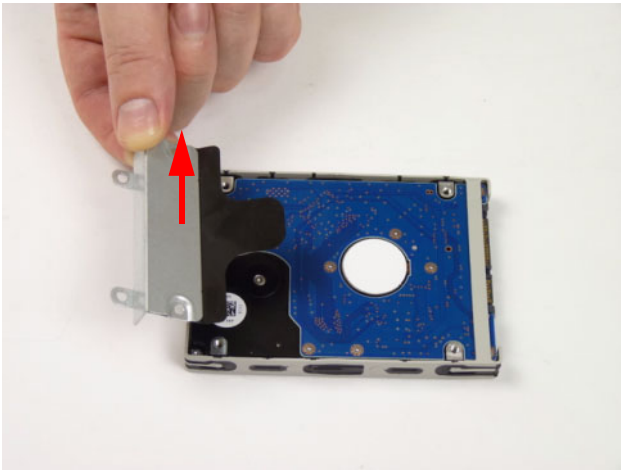

7. Pull the sides of the HDD housing to release the latches.

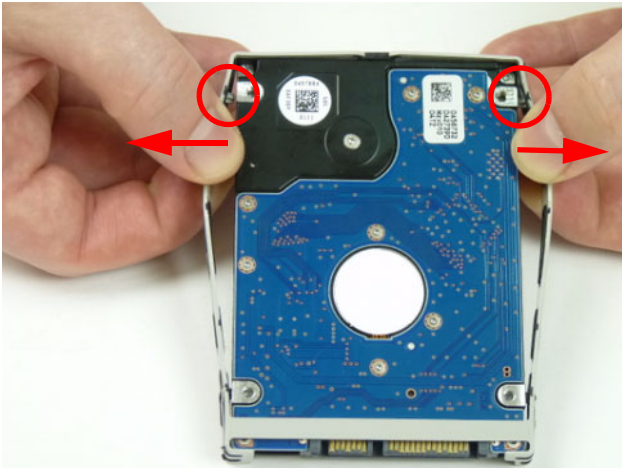


-
8. Lift the case from the HDD.

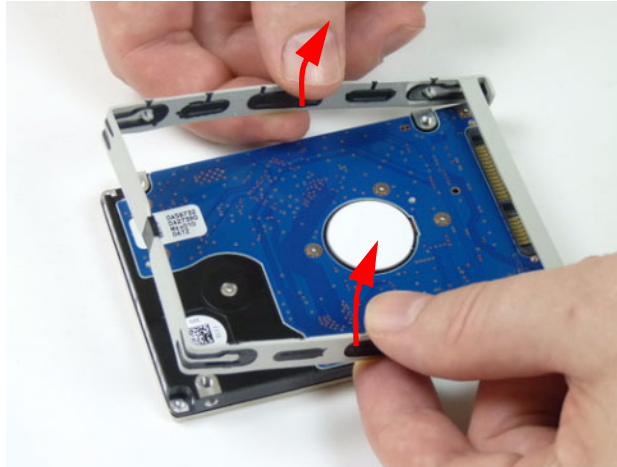


Removing the DIMM Modules

1. See “Removing the Lower Cover” on page 47.
2. Push out the release latches on both sides of the DIMM socket to release the DIMM module.

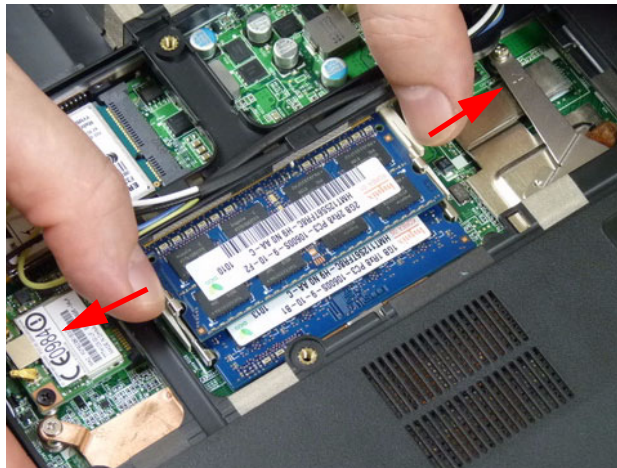


3. Remove the DIMM module.

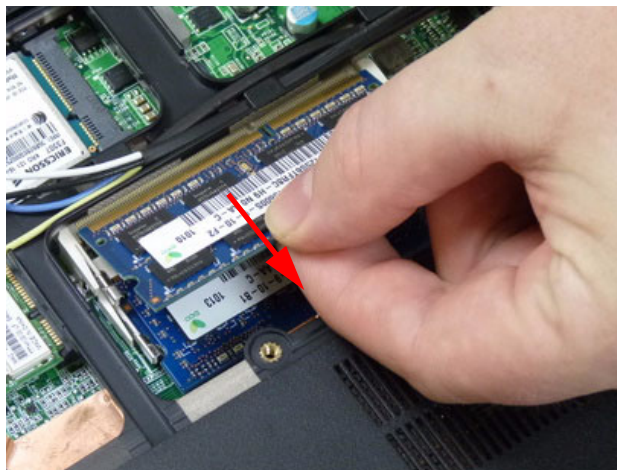


4. Repeat steps for the second DIMM module if present.

Removing the 3G Module

- 1. See “Removing the Lower Cover” on page 47.
- 2. Disconnect the two (2) antenna cables from the 3G board and remove the two (2) screws to release the 3G board.

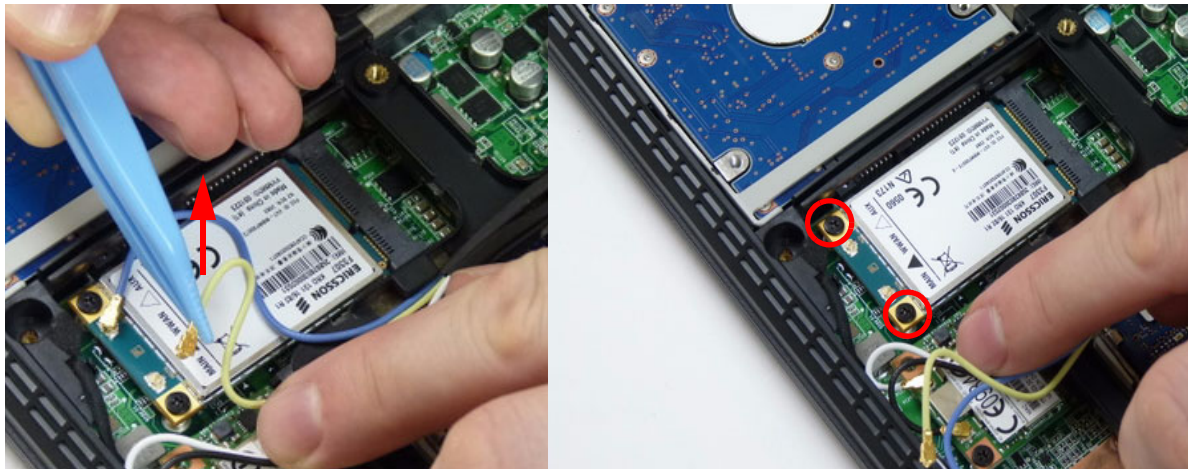

NOTE: Cable placement is as follows: Main (yellow) is closest to WLAN card, Aux (blue) is closest to HDD.


Step	Size	Quantity	Screw Type
3G Board Disassembly	M2.0*4.0	2	

- 3. Detach and remove the 3G board from the 3G socket.



Removing the WLAN Module


- 1. See “Removing the Lower Cover” on page 47.
- 2. Disconnect the two (2) cables from the WLAN board.

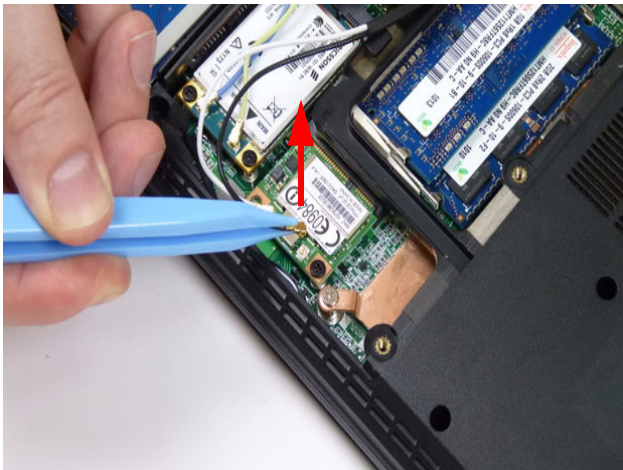


NOTE: Cable placement is as follows: White to J2, Black to J1.

- 3. Remove the one (1) screw.




Step	Size	Quantity	Screw Type
WLAN Board Disassembly	M2.0*3.0	1	

-
4. Detach and remove the WLAN board from the WLAN socket.

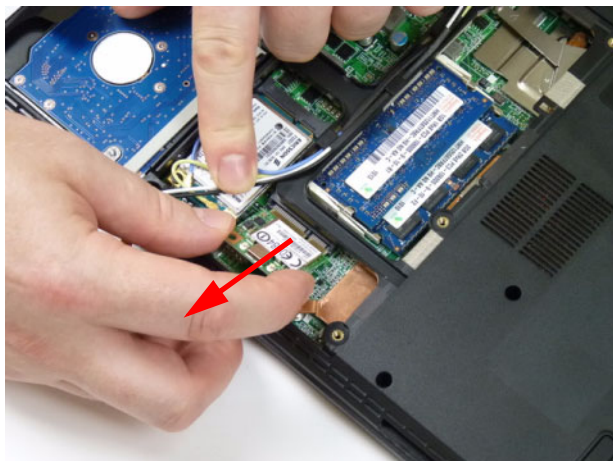


Removing the Optical Drive Module

1. See "Removing the Lower Cover" on page 47.
2. Using a screwdriver, apply gentle pressure to the exposed ODD bracket to disengage the ODD from the chassis.

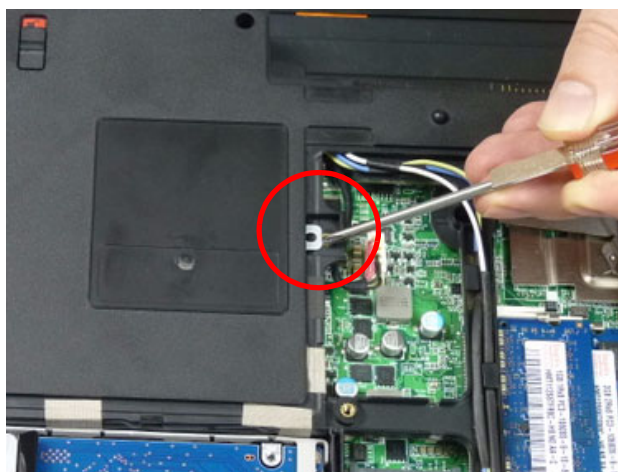

3. Grasp the ODD by the bezel and slide it out of the chassis.

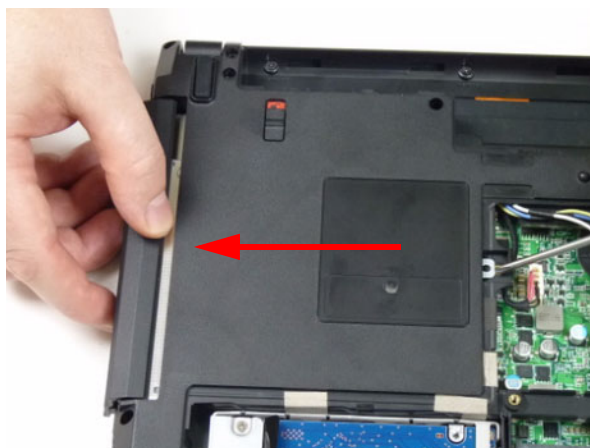


4. Remove the ODD bezel by rotating the top edge downward.



5. Remove the two screws securing the ODD bracket.




Step	Size	Quantity	Screw Type
ODD Bracket Disassembly	M2.0*3.0	2	

6. Remove it from the ODD.




Removing the Keyboard

1. Turn the computer over and fully open the lid. There are five (5) securing clips that must be released in order to remove the keyboard.

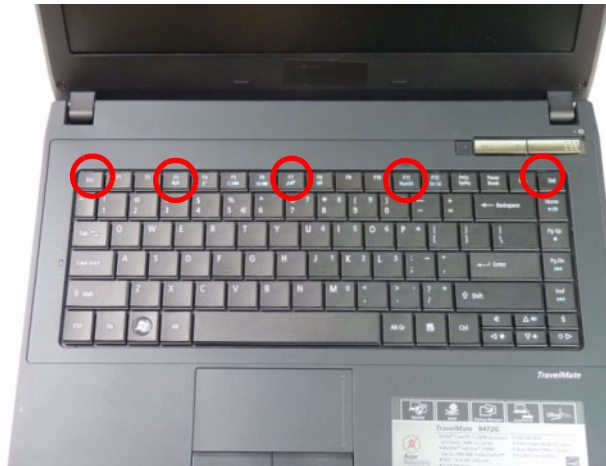


2. Release each clip, working from one side to the other.

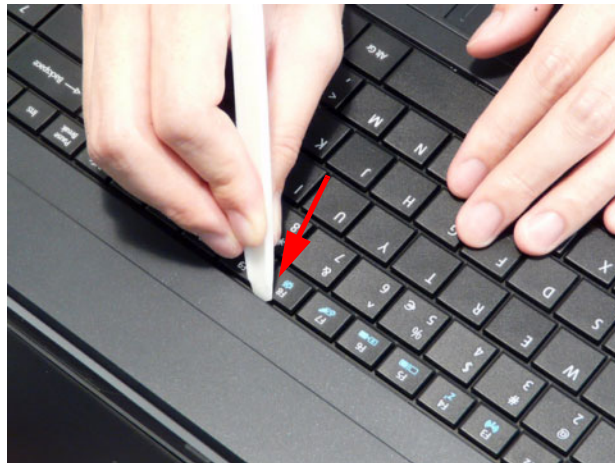

3. Using both hands, gently pry up the cover as shown and turn it over.




-
4. Unlock the keyboard FFC and disconnect the cable as shown.

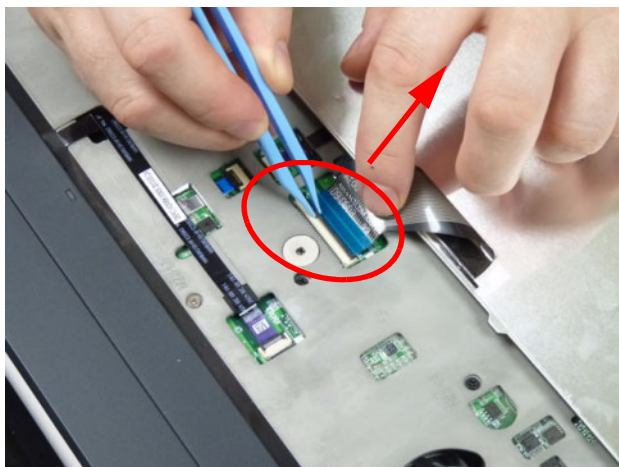

5. Lift the keyboard clear of the chassis.

Main Unit Disassembly Process

Main Unit Disassembly Flowchart

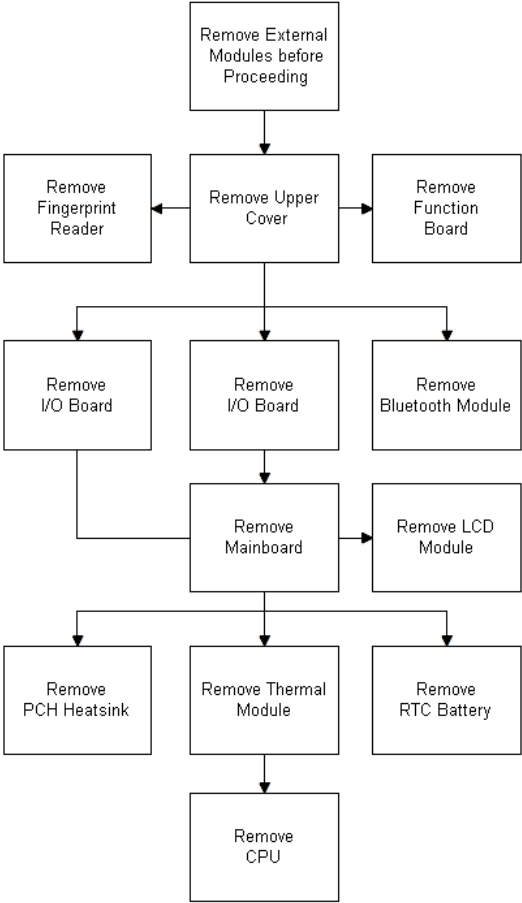


NOTE: Fingerprint reader only available in some models.





Screw List

Step	Screw	Quantity	Part No.
LCD Module	M2.5*6.0	2	
Lower Cover Disassembly	M2.5*5.0	15	
Battery Bay	M2.0*3.0	7	
ODD Bay	M2.0*2.0	2	
HDD Bay	M2.0*2.0	2	
Upper Cover Disassembly	M2.5*5.0	2	
Function Board	M2.0*1.0	3	
USB Board Disassembly	M2.0*2.0	2	
Modem Board Disassembly	M2.5*3.0	2	
Touchpad Board Disassembly	M2.0*3.0	4	
3G Module Disassembly	M2.5*2.0	2	
Mainboard Disassembly	M2.5*5.0 Ni	2	
Thermal Module Disassembly	M2.5*5.0Ni	1	

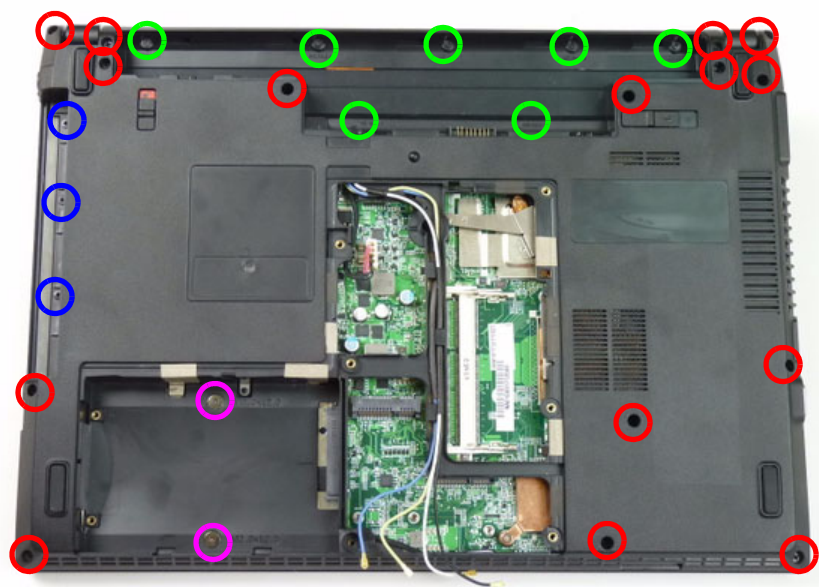Removing the Upper Cover


- 1. See “Removing the Keyboard” on page 55.
- 2. Remove the 27 securing screws from the lower cover.




Step	Size	Quantity	Screw Type
Lower Cover (red callout)	M2.0*6.0	15	
Battery Bay (green callout)	M2.0*3.0	7	
ODD Bay (blue callout)	M2.0*2.0	3	
HDD Bay (violet callout)	Flat Head M2.0*2.0	2	

3. Turn the computer over. Disconnect the following 2 cables from the mainboard:


- a. Function board FFC
- b. Touchpad FFC

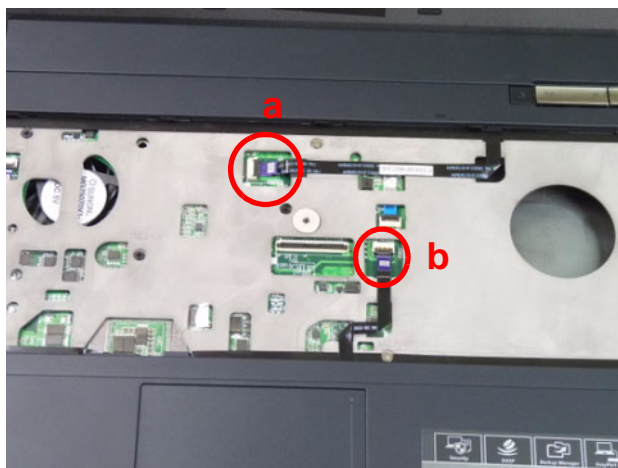


a) Unlock and disconnect the function board FFC from the mainboard.

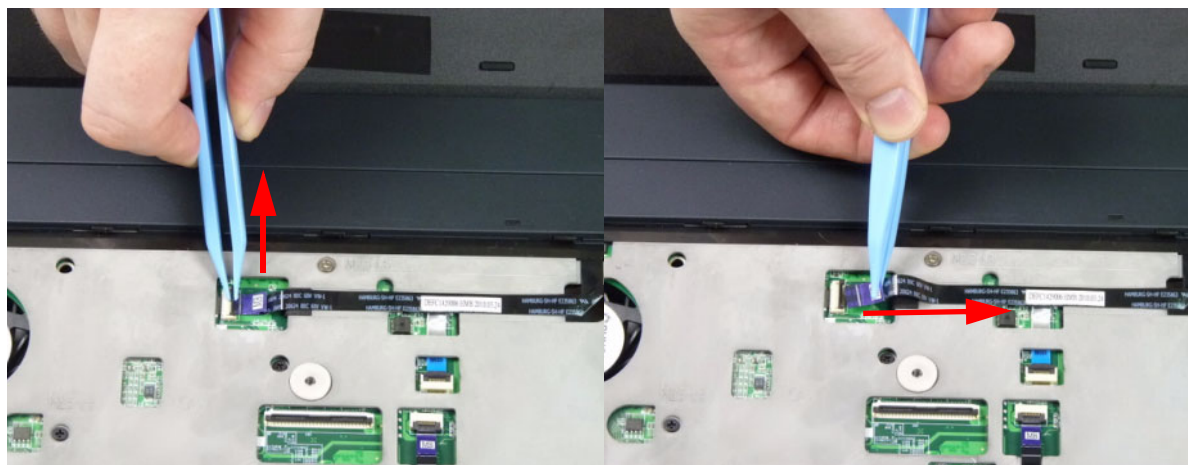

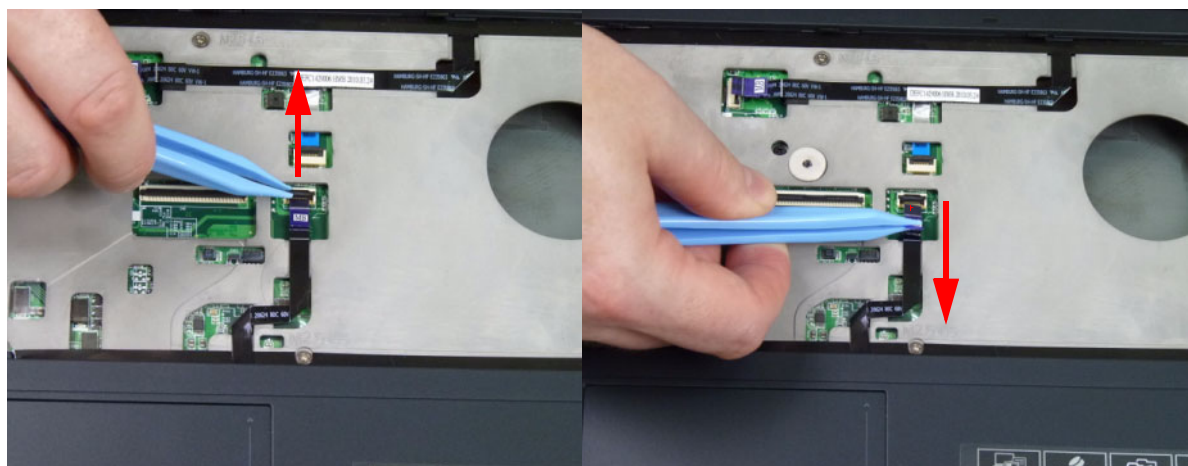

b) Unlock and disconnect the touchpad FFC from the mainboard.

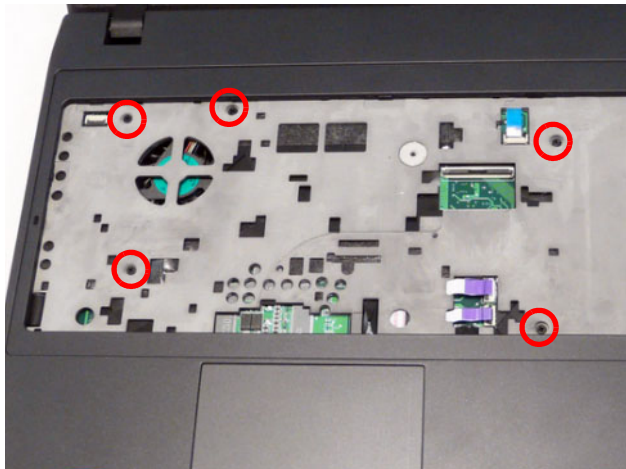

c) Remove the five (5) screws from the top cover.



Step	Size	Quantity	Screw Type
Upper Cover Disassembly	M2.5*5.0 Ni	2	
	M2.5*3.0	3	

4. Using a flat plastic tool, unlatch the clasps holding the upper cover to the chassis.




CAUTION: Do not insert the tool farther than is necessary to unlatch the clasps to prevent damage to internal components.

5. Work the tool around the edge of the upper cover to release the other clasps as shown.



6. Lift the upper cover from the chassis.

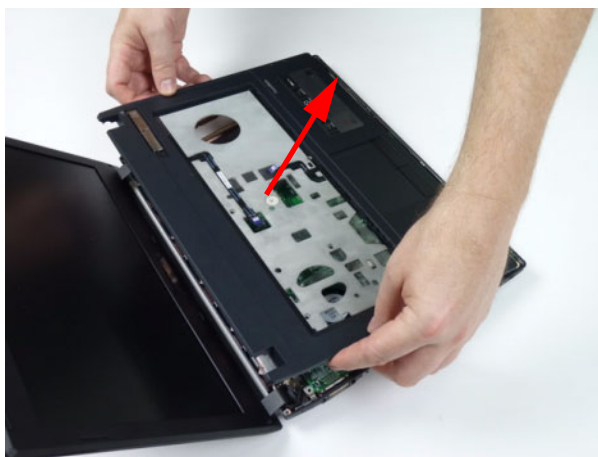



Removing the Function Board

1. See "Removing the Upper Cover" on page 58.
2. Locate the function board on the upper cover.




3. Remove the three (3) screws.

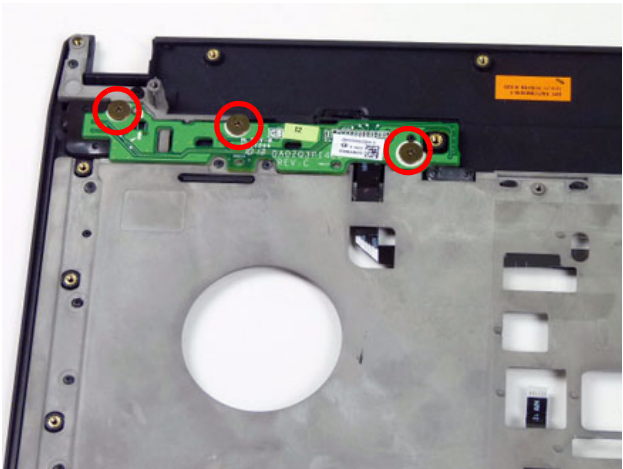


Step	Size	Quantity	Screw Type
Function Board Disassembly	Flat Head M2.0*1.0 Ni	3	


4. Lift the function board away from the upper cover.

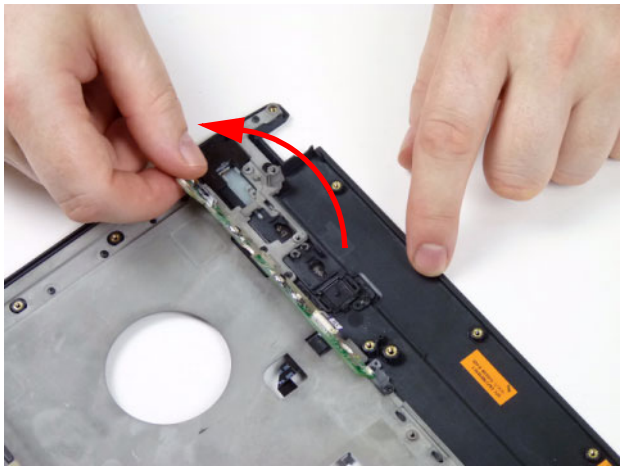

5. Unlock the FFC from the FFC connector.

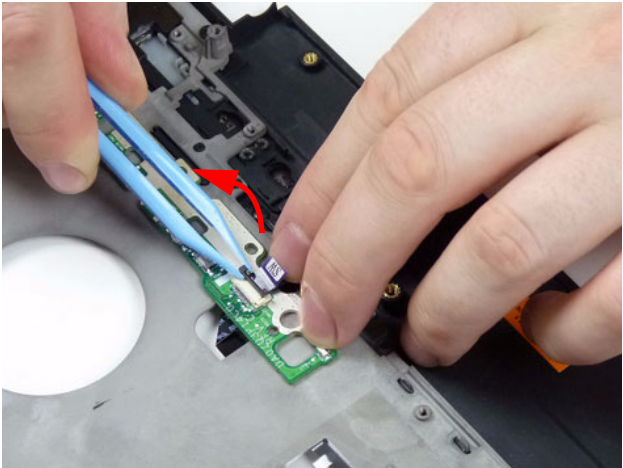

-
6. Disconnect the FFC from the FFC connector.

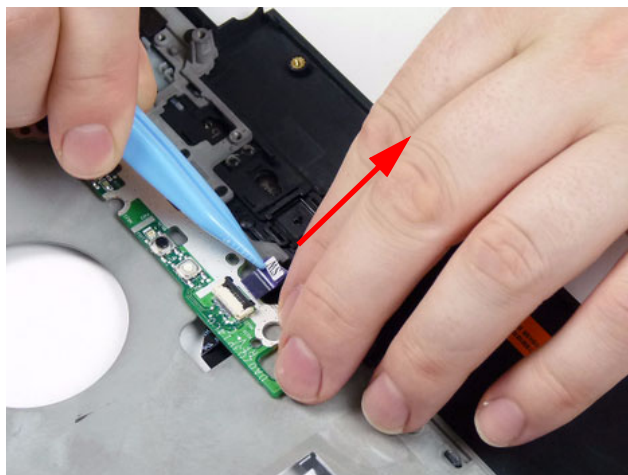


Removing the Touchpad Board


1. See "Removing the Upper Cover" on page 58.
2. Locate the touchpad board on the upper cover.




3. Remove the adhesive tape from the touchpad board.

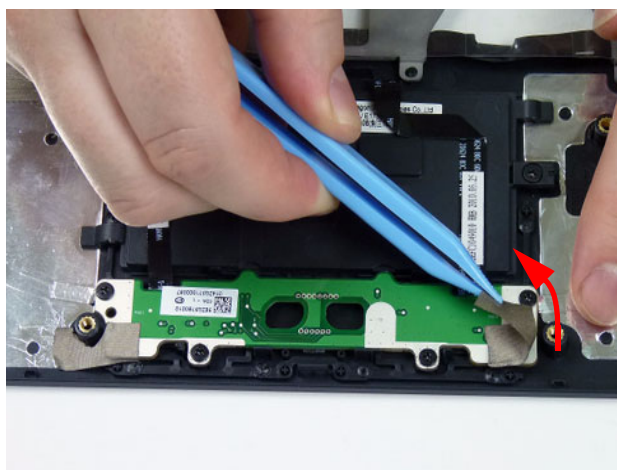


4. Remove four (4) screws.

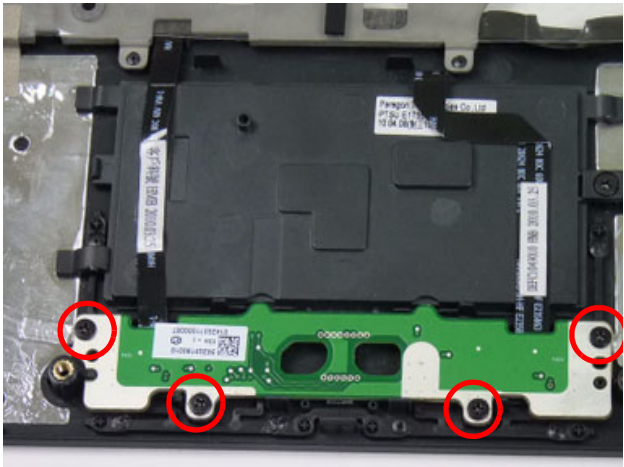


Step	Size	Quantity	Screw Type
Touchpad Board Disassembly	M2.0*3.0	4	

5. Lift up the touchpad board slightly and turn it over..

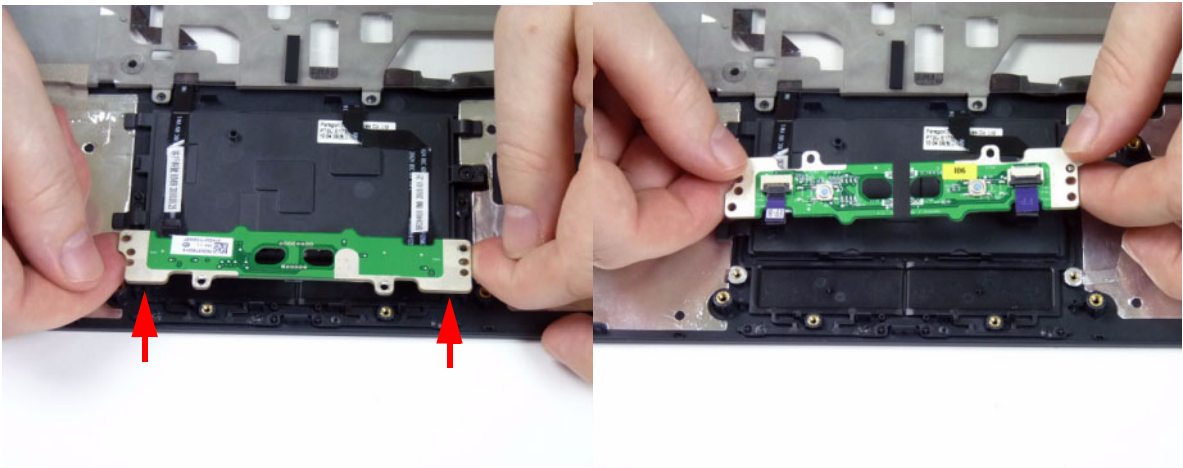

6. Unlock and disconnect the left touchpad FFC from the touchpad board.

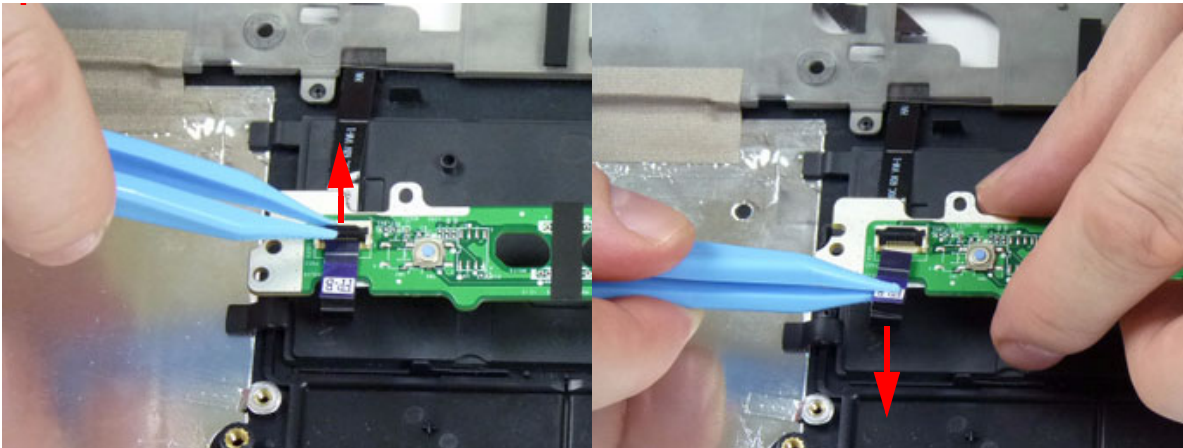


7. Repeat step 7 for the right touchpad FFC.

Removing the Fingerprint Board


- 1. See “Removing the Upper Cover” on page 58.
- 2. Locate the fingerprint board on the upper cover.


Removing the USB Board

- 1. See “Removing the Upper Cover” on page 58.
- 2. Unlock and disconnect the USB FFC from the USB board.

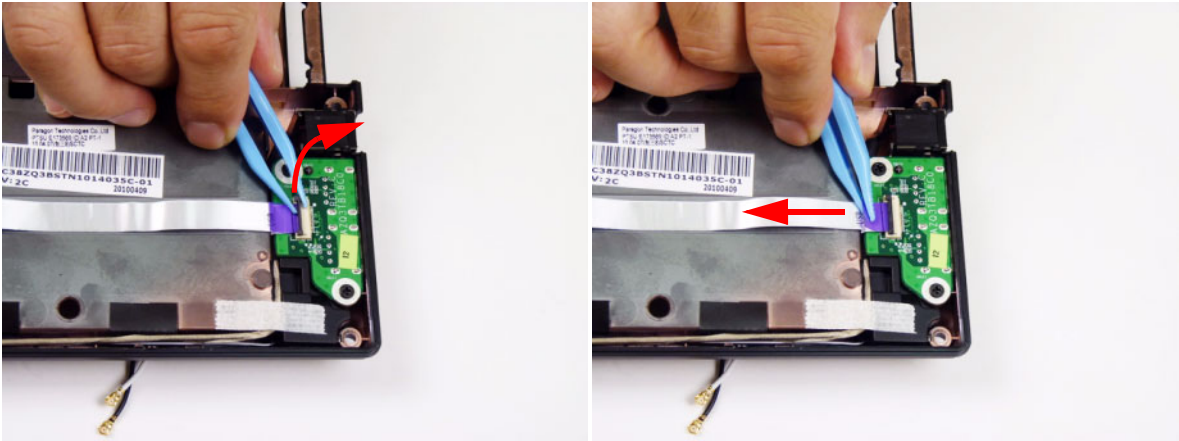


- 3. Remove two (2) screws from the USB board.

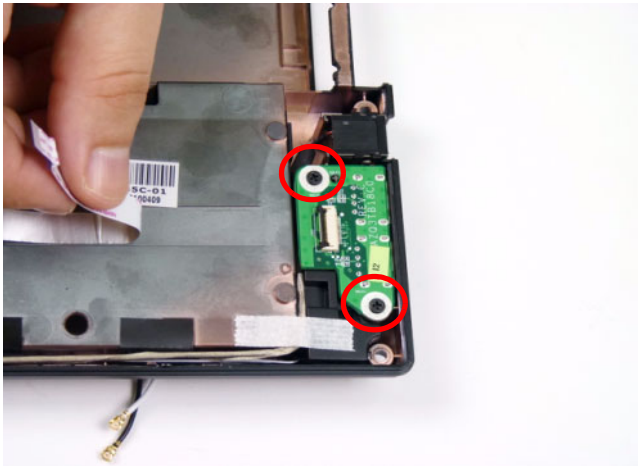

Step	Size	Quantity	Screw Type
USB Board Disassembly	M2.0*2.0	2	


4. Using plastic tweezers, lift the USB board upward and away from the chassis.

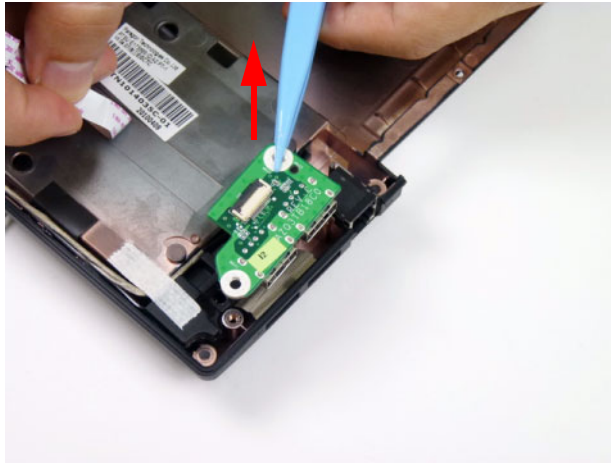

NOTE: The FCC cable does not need to be removed if you are only replacing the USB board.

Removing the Modem Module


1. See “Removing the Upper Cover” on page 58.
2. Locate the modem module on the mainboard.

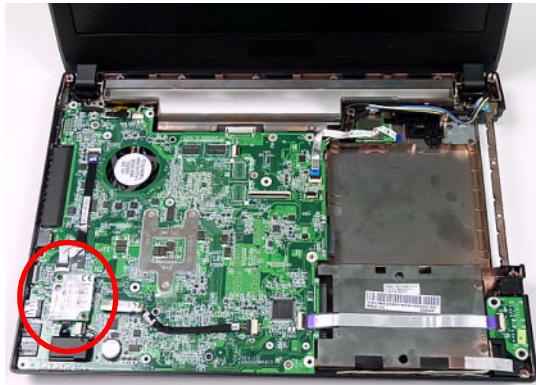


3. Using plastic tweezers, disconnect the modem cable from the board.




4. Remove two (2) screws from the modem board.

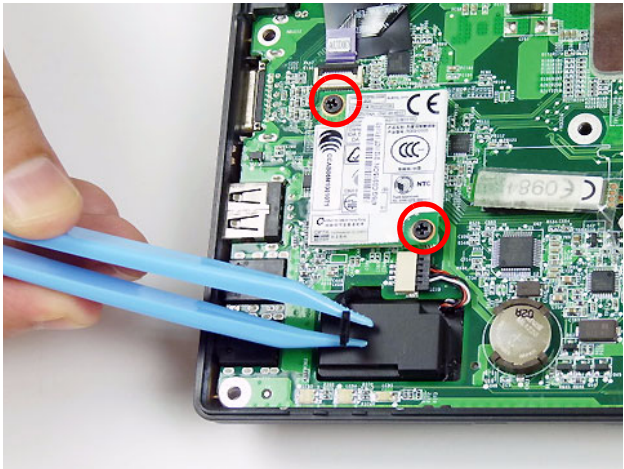


Step	Size	Quantity	Screw Type
Modem Board Disassembly	M2.5*3.0	2	

5. Lift the modem board clear of the chassis.

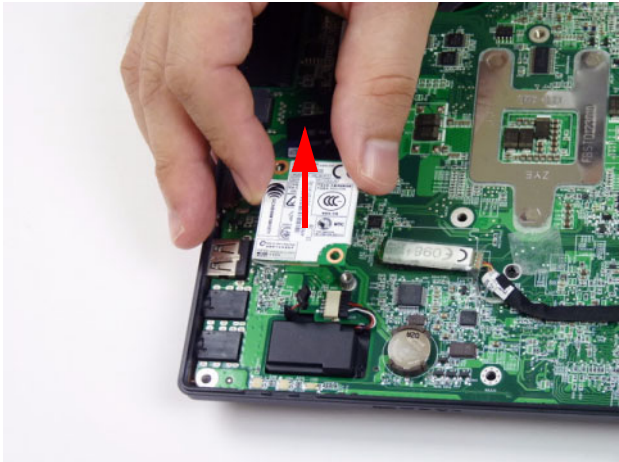


Removing the Bluetooth Module


1. See “Removing the Upper Cover” on page 58.
2. Locate the Bluetooth module on the mainboard.

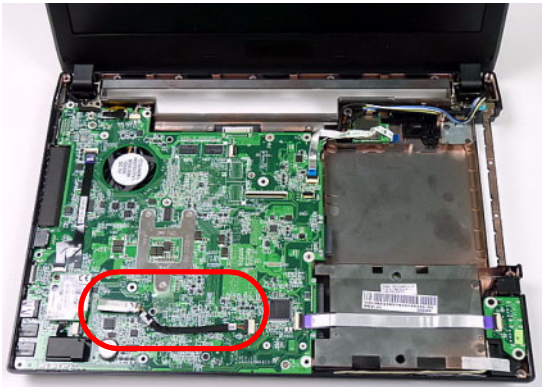


3. Disconnect the Bluetooth cable from the mainboard.

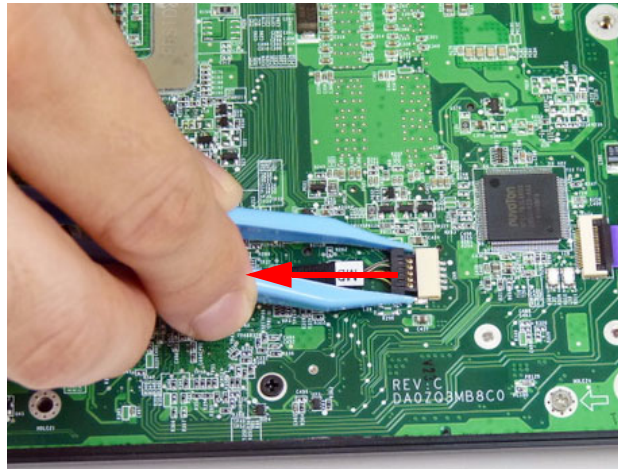


4. Lift the Bluetooth board away from the mainboard.

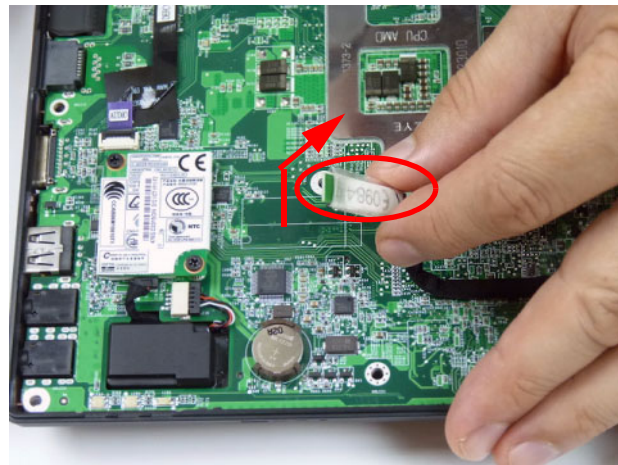

5. Remove the mylar holder to expose the Bluetooth cable connector.

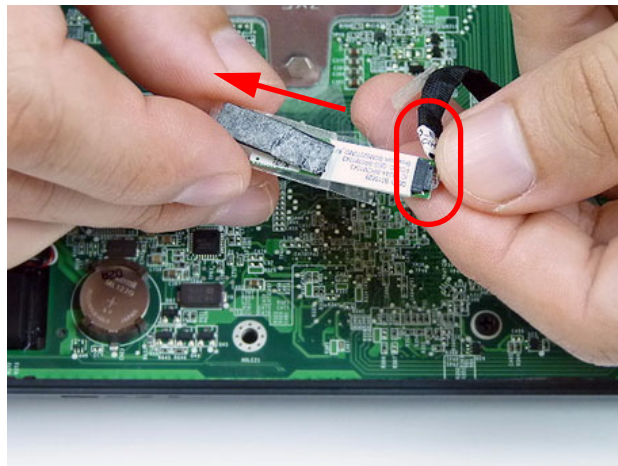


6. Disconnect the Bluetooth cable from the Bluetooth board.

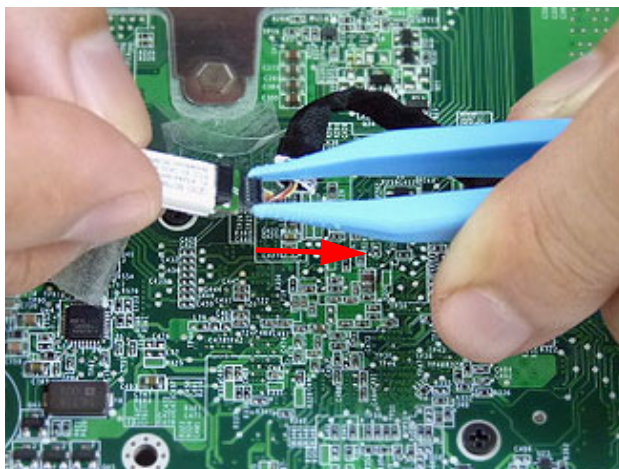


Removing the 3G Module

NOTE: Remove the 3G SIM card before beginning this procedure.


1. See "Removing the Upper Cover" on page 58.
2. Disconnect and remove the 3G module FFC from the mainboard.

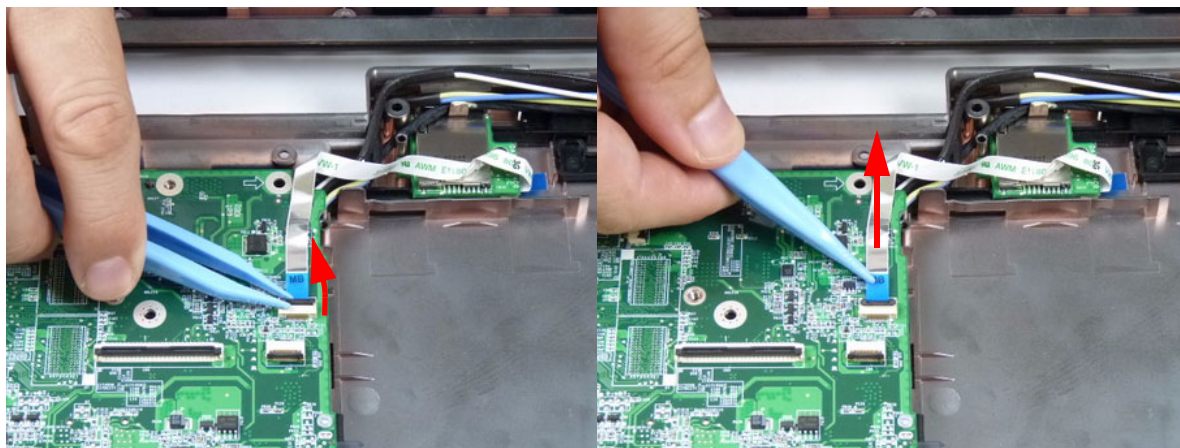


3. Lift up the FFC from the mainboard and move it out of the way.

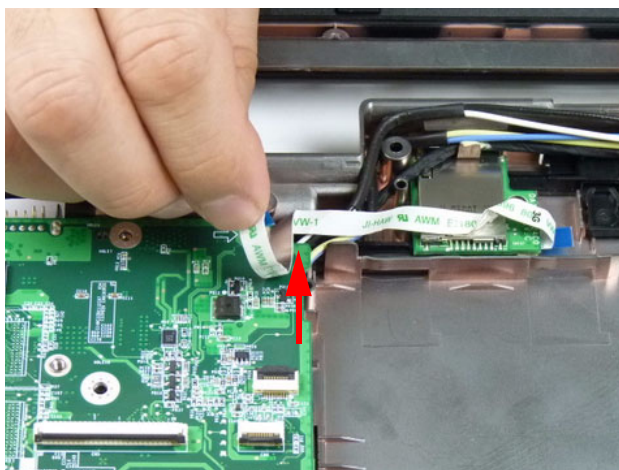


4. Remove two (2) screws.

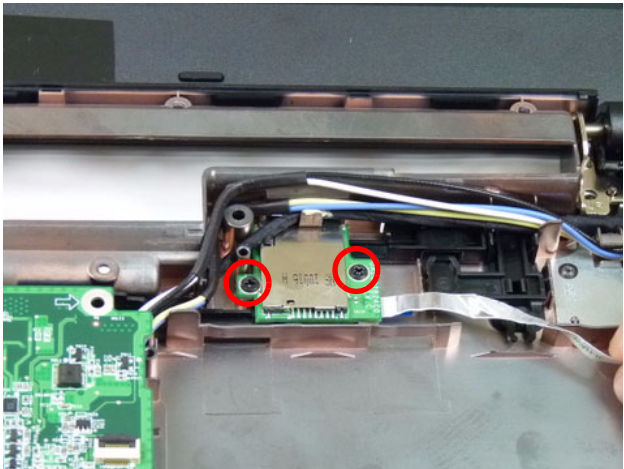


Step	Size	Quantity	Screw Type
3G Module Disassembly	M2.5*2.0	2	

5. Angle the module upwards and remove from the chassis.

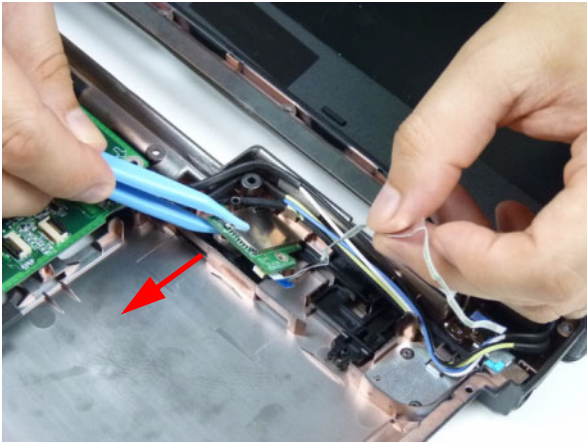


6. Disconnect and remove the FFC cable from the module.

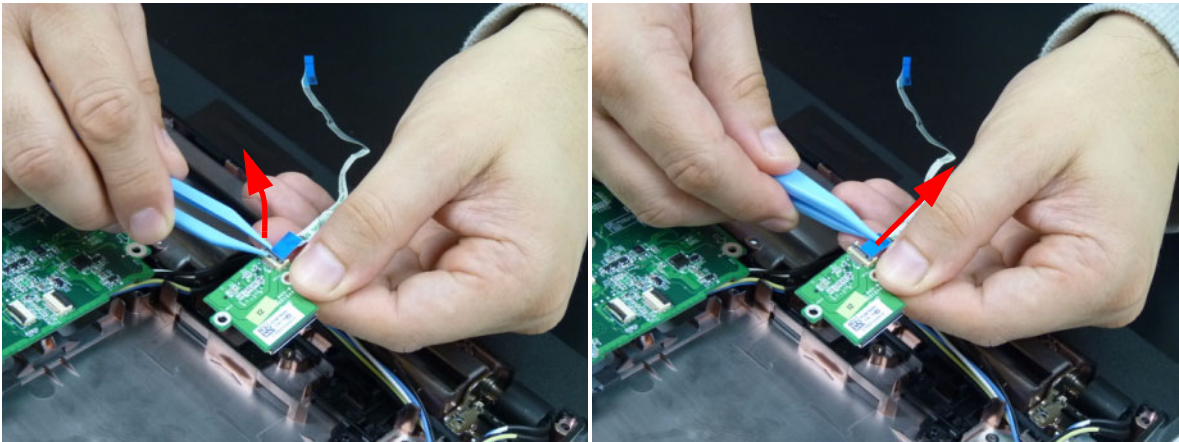


Removing the Speaker FFC


1. See “Removing the Upper Cover” on page 58.
2. Locate the speaker FFC on the mainboard.

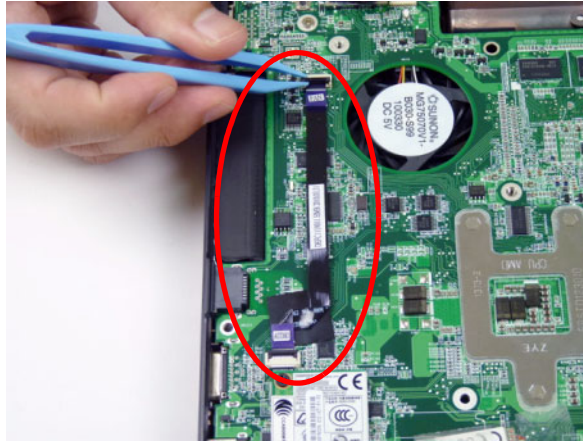

3. Unlock and disconnect the speaker FFC connector labelled FAN from the mainboard.

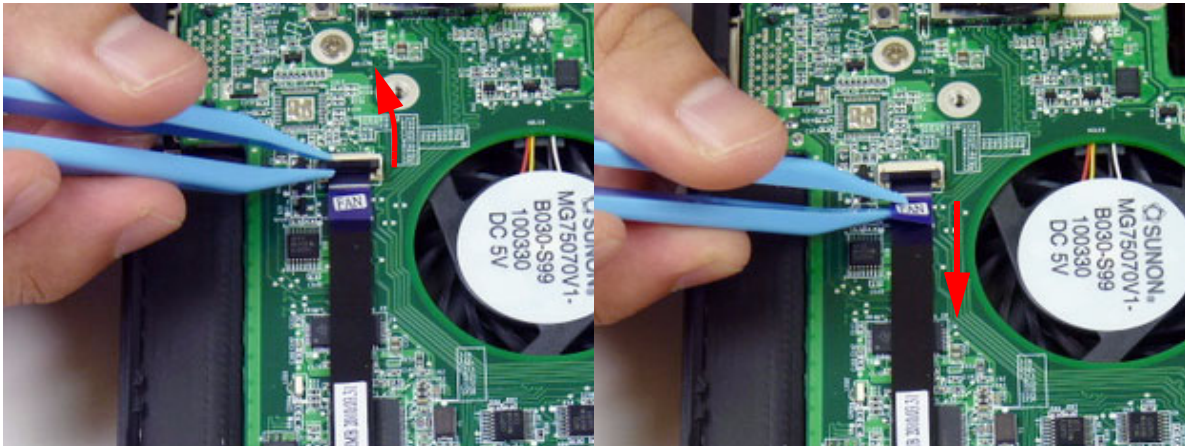


4. Unlock and disconnect the speaker FFC connector labelled AUDIO from the mainboard.

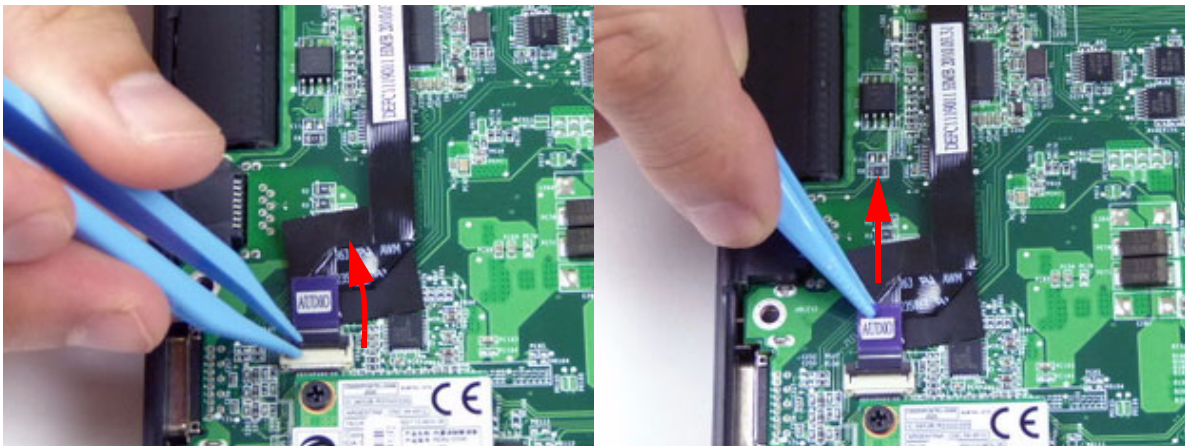

5. Peel back the FFC to free it from the adhesive and remove it.


Removing the Mainboard

- 1. See “Removing the Upper Cover” on page 58.
- 2. See “Removing the Modem Module” on page 66.
- 3. See “Removing the Speaker FFC” on page 71.
- 4. Ensure the following cables and modules are removed:

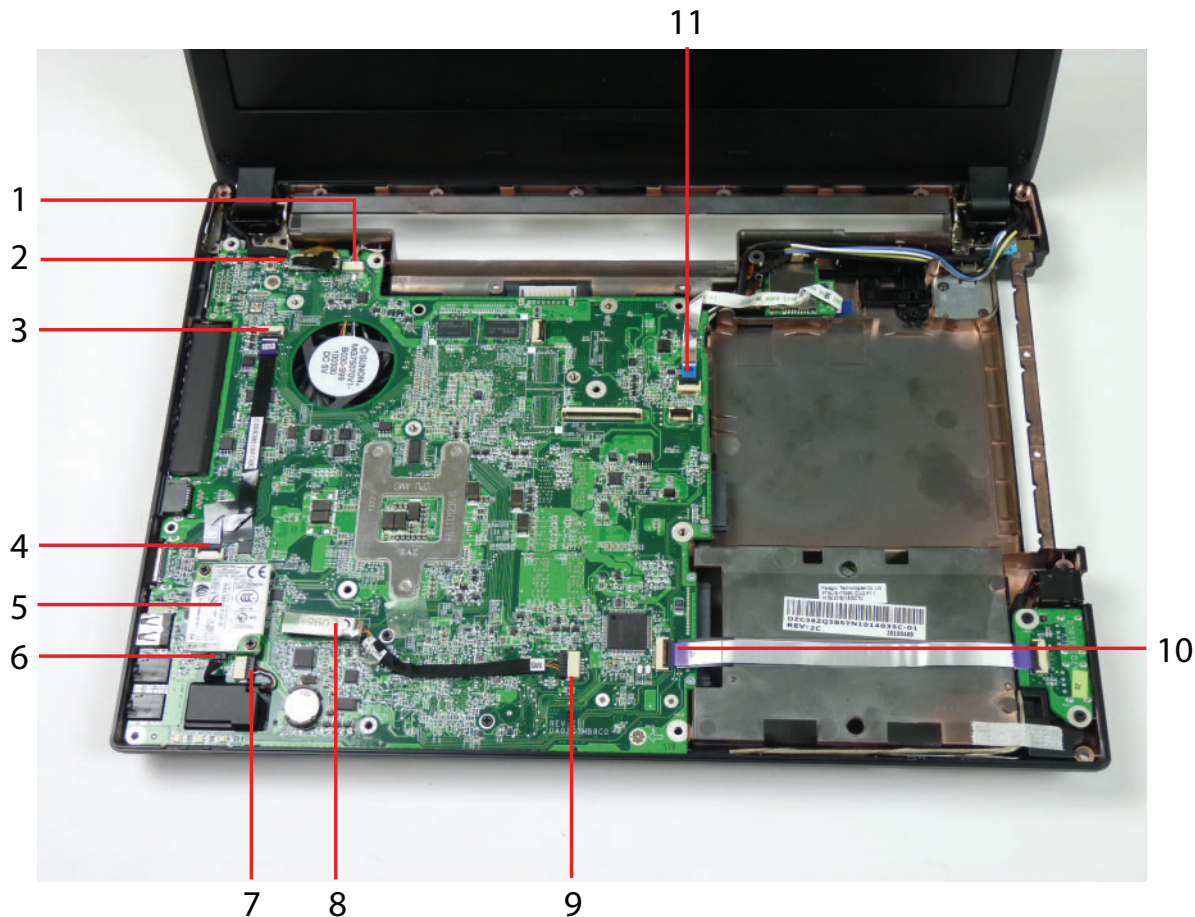


Item	Description	Item	Description
1	Camera and mic cable	7	RJ-45 connector
2	LVDS cable	8	Bluetooth board
3	Speaker FFC (Fan)	9	Bluetooth connector
4	Speaker FFC (Audio)	10	USB connector
5	Modem board	11	3G module connector
6	Modem cable		

5. Turn the computer over and disconnect the DC-In cable.

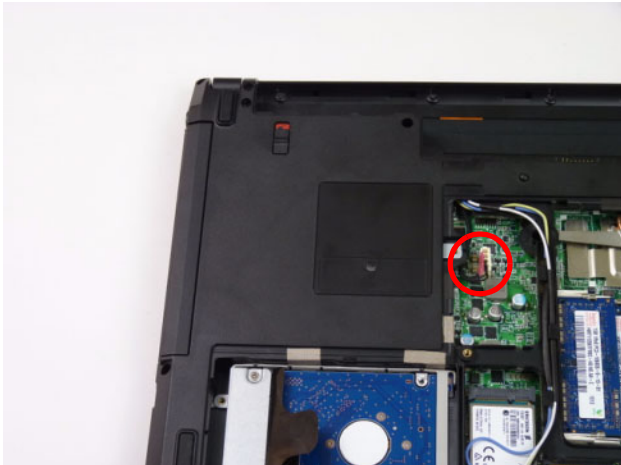

6. Turn the computer over and remove two (2) securing screws from the mainboard.




Step	Size	Quantity	Screw Type
Mainboard Disassembly	M2.5*5.0 Ni	2	


-
7. Lift the mainboard right side first and remove it from the lower cover.



Removing the RTC Battery


1. See "Removing the LCD Module" on page 79.
2. Using plastic tweezers, pry the RTC battery from the mainboard.

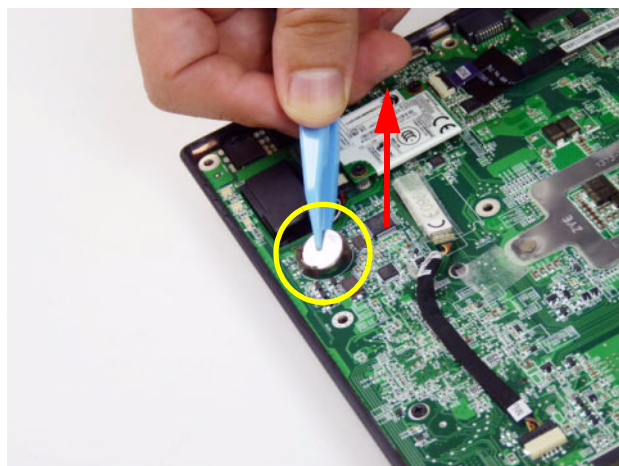


 **NOTE:** The RTC battery has been highlighted with a yellow callout in the previous image. Please detach the RTC battery and follow local regulations for disposal.

Removing the PCH Heatsink

1. See “Removing the Mainboard” on page 72.
2. Loosen two (2) captive screws securing the PCH heatsink.

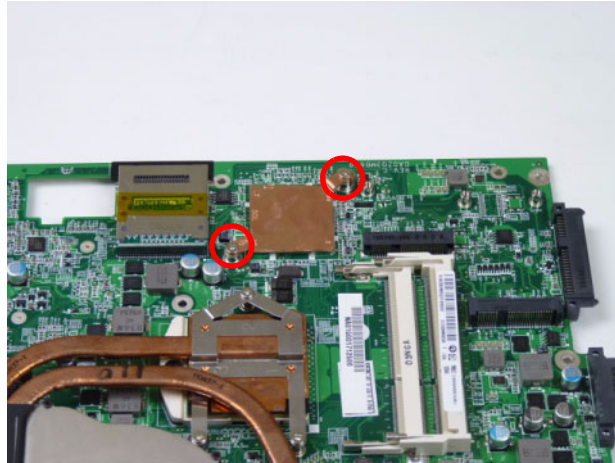


3. Lift the PCH heatsink clear of the mainboard as shown.

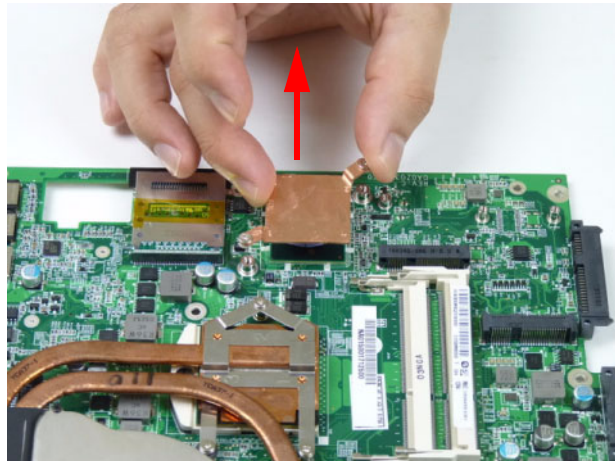


Removing the Thermal Module

- 1. See “Removing the Speaker FFC” on page 71.
- 2. Disconnect the fan cable as shown.

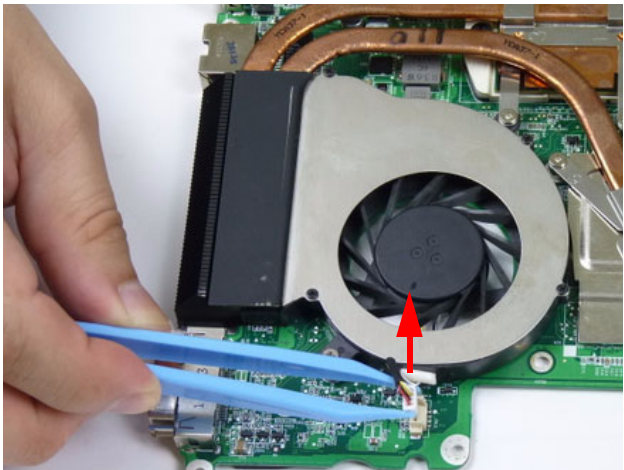


- 3. Remove one (1) securing screw from the fan.




Step	Size	Quantity	Screw Type
Thermal Module Disassembly	M2.5*5.0 Ni	1	

4. Loosen the five (5) captive screws (in numerical order from 1 to 5).

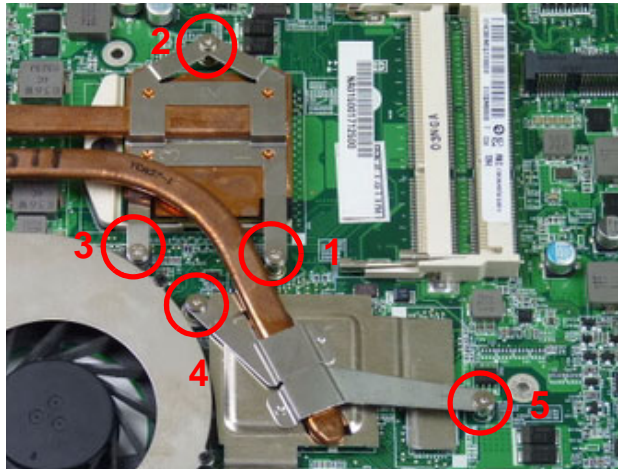


5. Carefully lift up the assembly and remove it from the mainboard.

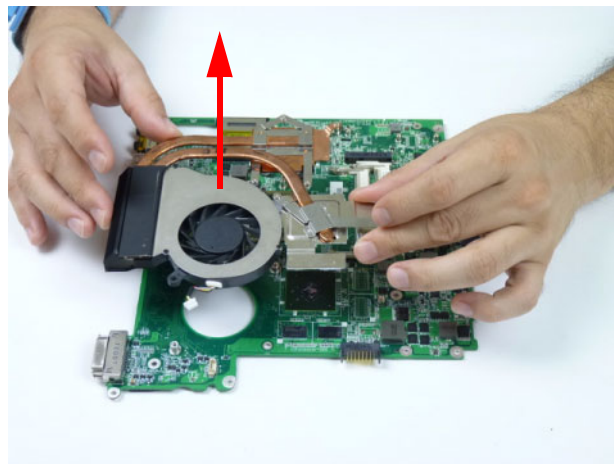

IMPORTANT: Place the thermal module on a clean, dry surface when it is not installed.



Removing the CPU

1. See “Removing the Thermal Module” on page 76.
2. Using a slotted screw driver, rotate the CPU locking screw 180° counter-clockwise as shown.

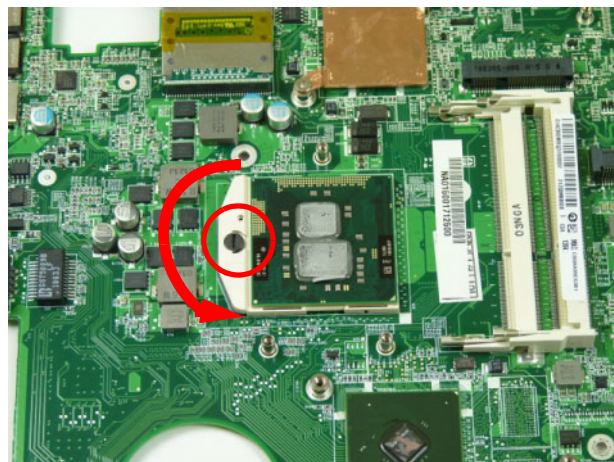

3. Lift the CPU clear of the socket as shown.


IMPORTANT: Place the CPU on a clean, dry surface when it is not installed.

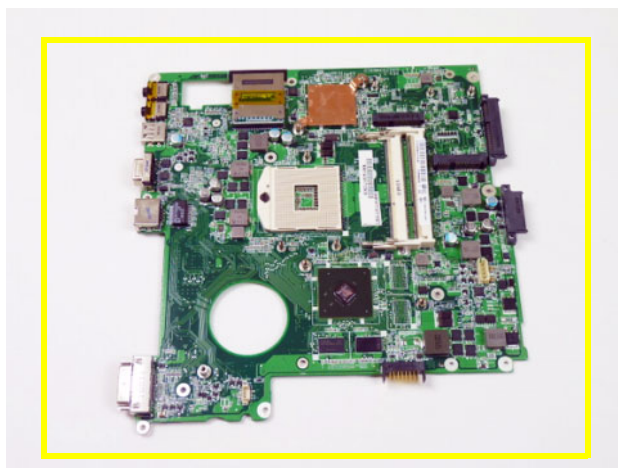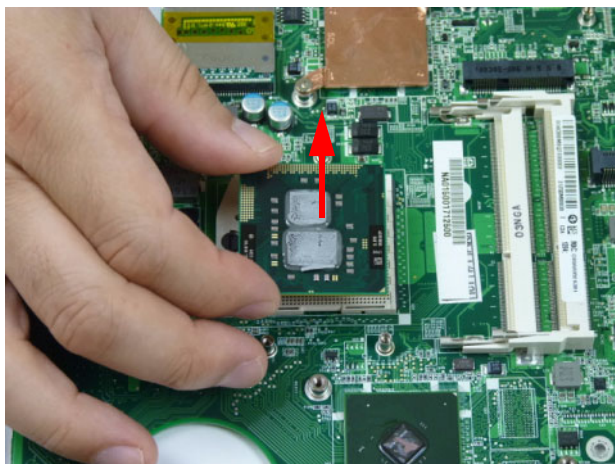


NOTE: The mainboard has been highlighted with a yellow callout in the previous image. Please detach the mainboard and follow local regulations for disposal.


Removing the LCD Module

- 1. See “Removing the Mainboard” on page 72.
- 2. Disconnect the LVDS and mic cables.

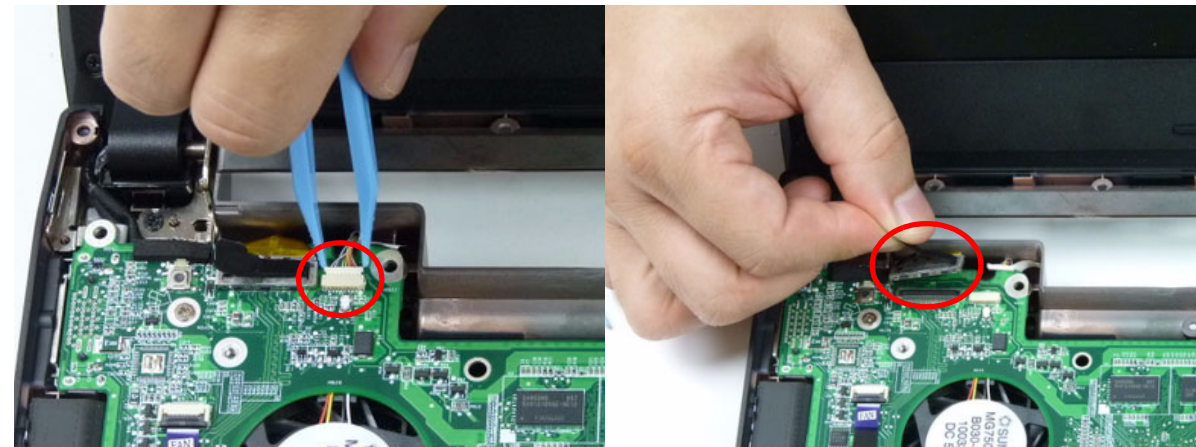


- 3. Remove one (1) screw from the left hinge and one (1) screw from the right hinge.

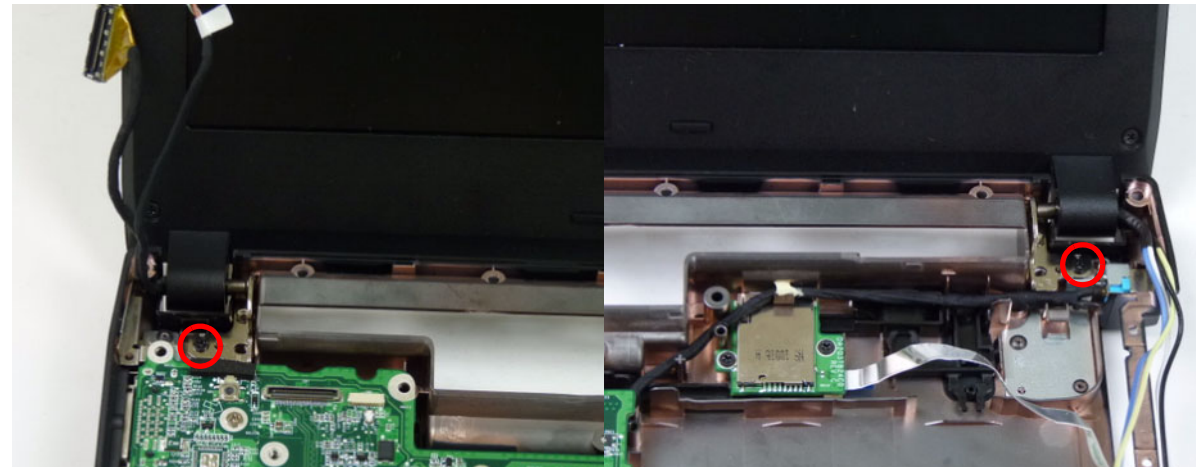


Step	Size	Quantity	Screw Type
LCD Module Disassembly	M2.5*6.0	2	


-
4. Lift the cables out of the cable channel surrounding the 3G module.

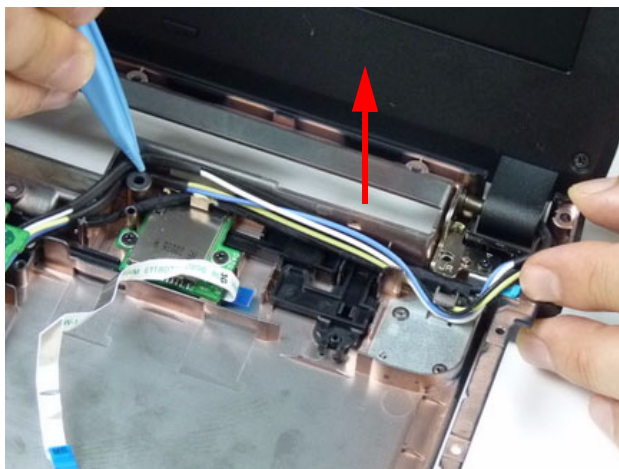

5. Place the computer at an angle and grasp the antenna cables with one hand.

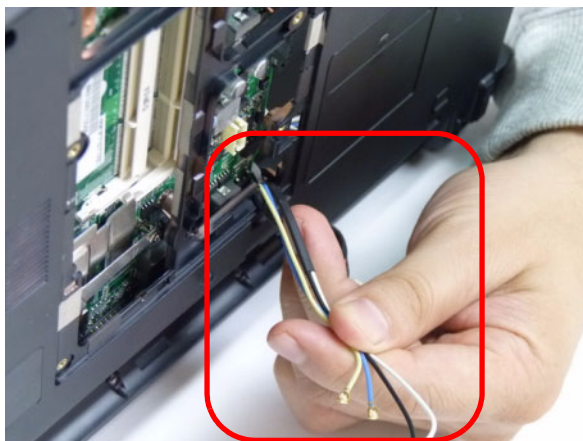

6. From the other side, carefully guide the antenna cables out through the opening in the lower cover.

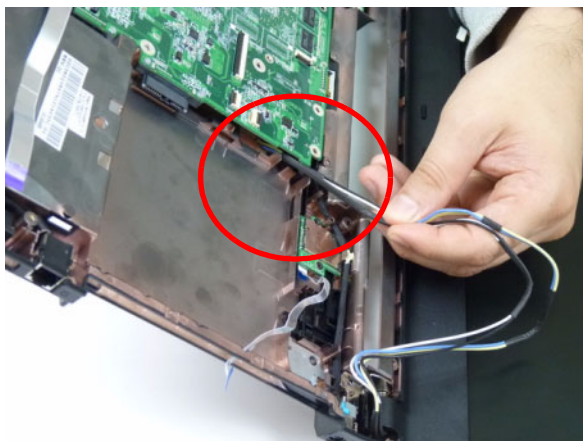


-
7. Ensure that the computer is placed back on a flat surface and that all cables entering the LCD are free of the chassis before removing the LCD module.



LCD Module Disassembly Process

LCD Module Disassembly Flowchart

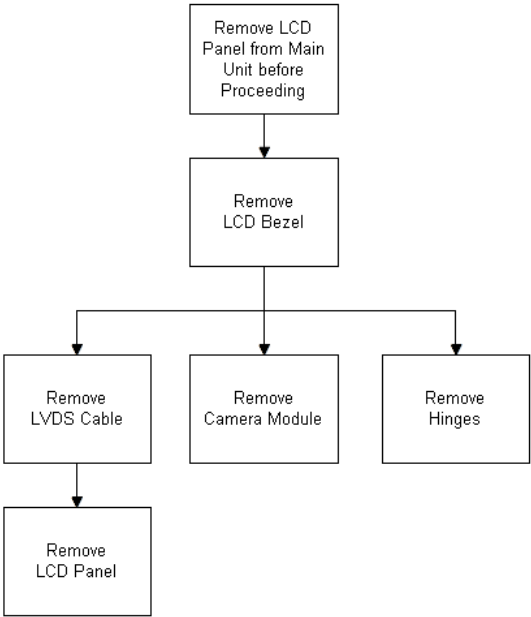

Screw List

Step	Screw	Quantity	Part No.
LCD Bezel Disassembly	M2.5*2.0	2	
LCD Panel Disassembly	M2.0*3.0	4	
LCD Hinge Disassembly	M2.0*2.0	6	

Removing the LCD Bezel

- 1. See "Removing the LCD Module" on page 79.
- 2. Remove the two (2) bezel screw caps and screws.



Step	Size	Quantity	Screw Type
LCD Bezel Disassembly	M2.5*2.0	2	

- 3. Pry the bezel upwards at the bottom of the LCD module releasing it from the latches.



- 4. Move to the bottom-left corner of the bezel and pry upwards clearing the hinge cap from the hinge.



-
5. Move to the bottom-right corner of the bezel and pry upwards clearing the hinge cap from the hinge.



6. Move along the sides to the top of the LCD module until all latches under the bezel are unlocked.




7. Lift the Bezel clear of the LCD Module.




Removing the Camera Module

1. See "Removing the LCD Bezel" on page 83.
2. Lift the CCD module from the LCD cover.

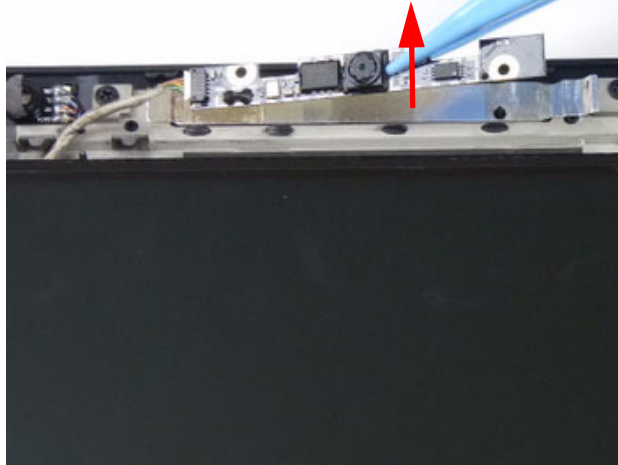


3. Disconnect the cable as shown.

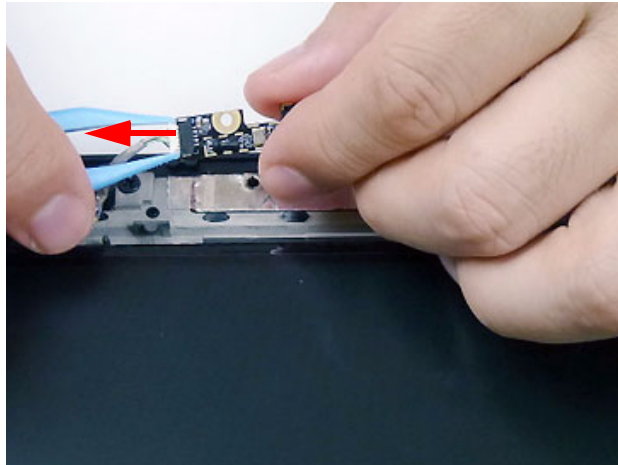

NOTE: Take care not to damage the cable.


Removing the LCD Panel

- 1. See “Removing the LCD Bezel” on page 83.
- 2. Remove the LVDS cable from the cable guides.

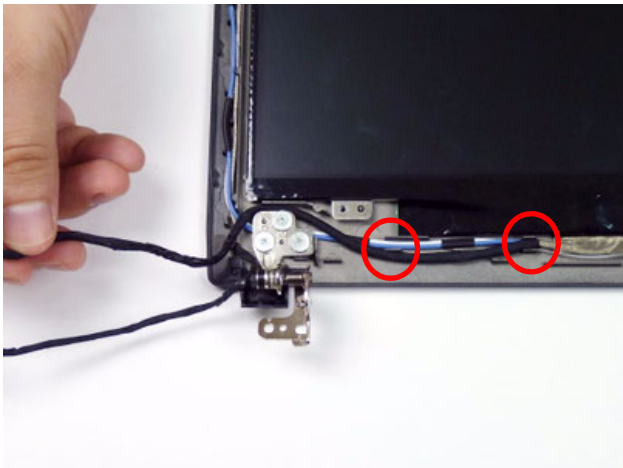


- 3. Remove the four (4) securing screws from the LCD panel.



Step	Size	Quantity	Screw Type
LCD Panel Disassembly	M2.0*3.0	4	

-
4. Lift the LCD panel clear of the module as shown.

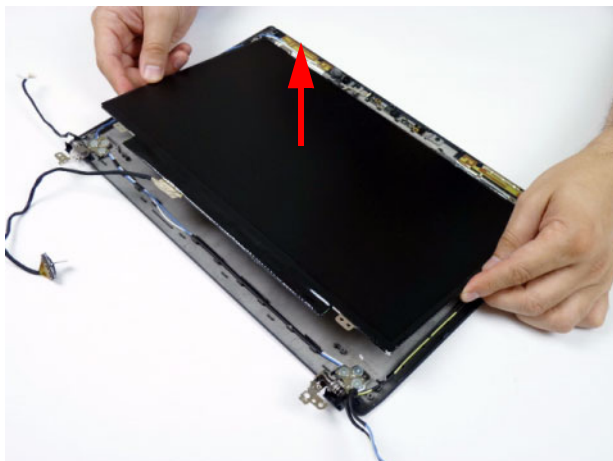


Removing the LVDS Cable

1. See "Removing the LCD Panel" on page 86.
2. Turn the LCD panel over and place it on a non-abrasive, clean surface. Ensure the panel face does not get damaged.



3. Remove the yellow tape securing the LVDS cable in place.

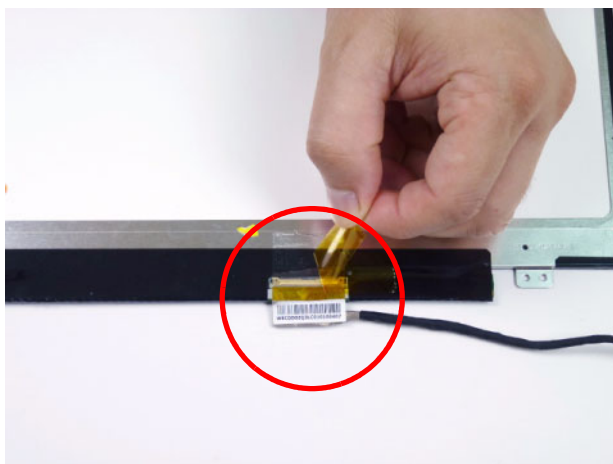


-
4. Starting from the top, remove the clear tape and disconnect the cable from the LCD panel.




Remove the LCD Hinges

1. See "Removing the LCD Panel" on page 86.
2. Locate the left and right LCD panel hinges.

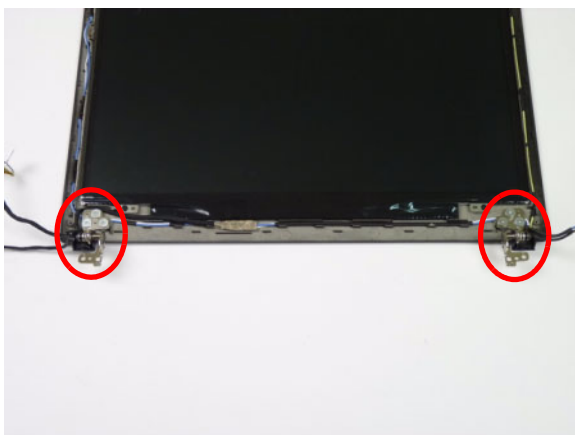


3. Move the cables out of the hinge well.

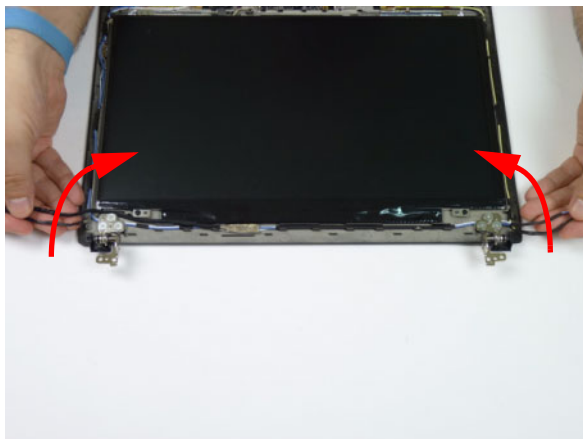

4. Remove the six (6) screws:




Step	Size	Quantity	Screw Type
LCD Hinge Disassembly	M2*2.0	6	


LCD Module Assembly Process

1. Place the hinges onto the LCD cover and replace the six (6) screws:




2. The LVDS cable must be inserted underneath the left hinge and up through the hinge well. The antenna cables must be inserted underneath the right hinge and up through the hinge well.

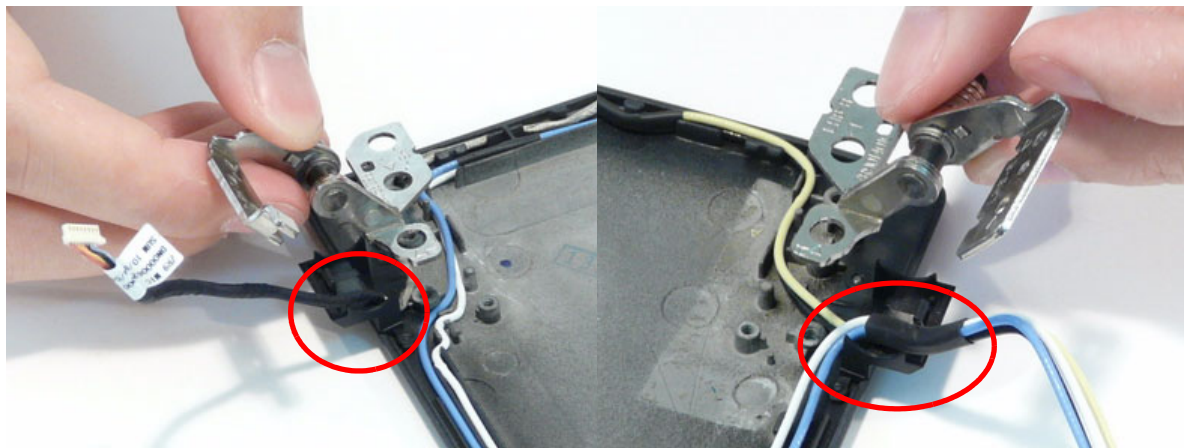


Step	Size	Quantity	Screw Type
LCD Hinge Disassembly	M2.0*2.0	6	

Replacing the LVDS Cable


1. Turn the LCD panel face down on a non-abrasive, clean surface. Ensure the panel face does not get damaged.

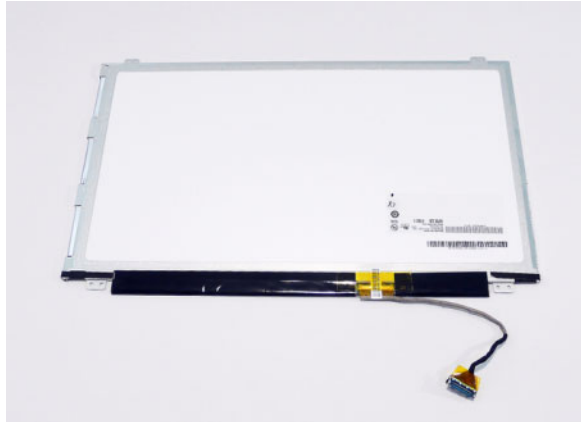

2. Connect the cable to the LCD panel. Place the clear tape over the connection and press firmly.

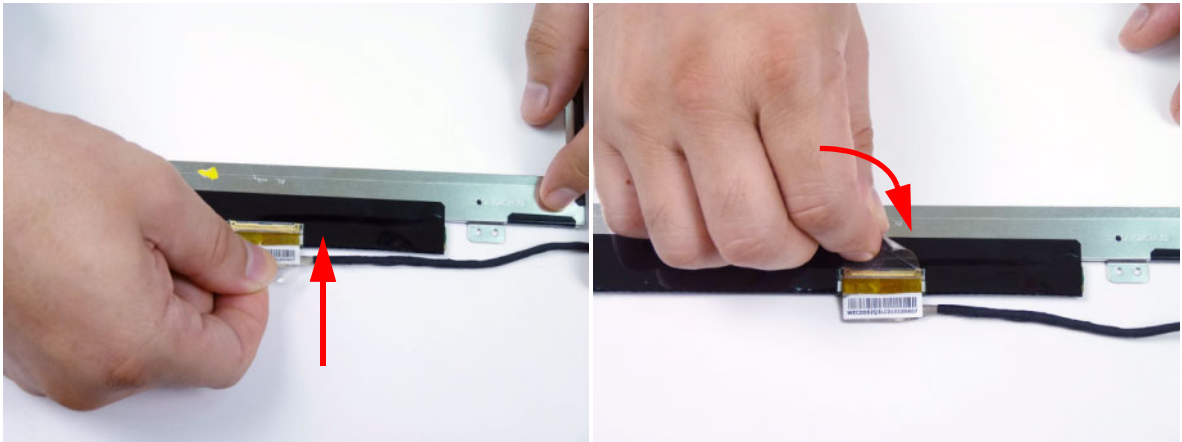


3. Replace the adhesive to secure the LVDS cable.

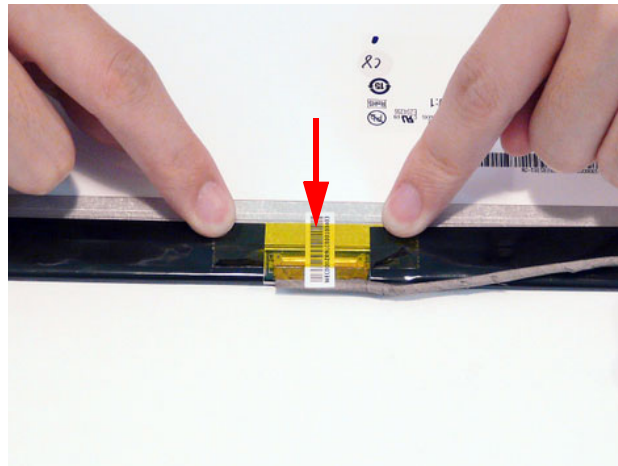


Replacing the LCD Panel

- 1. Place the LCD panel into the LCD module as shown top edge first, making sure the LVDS cable is not trapped behind the panel.

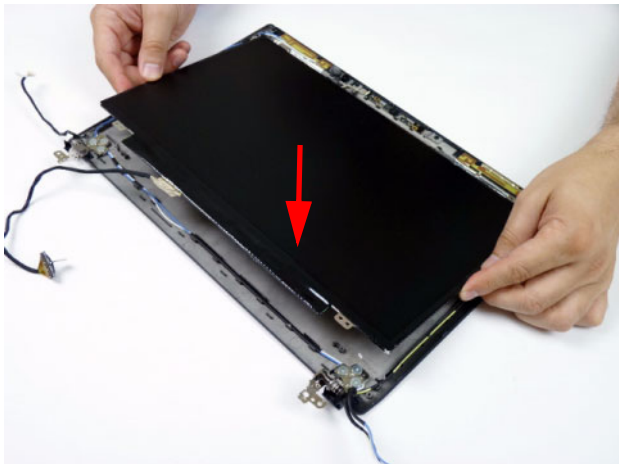


- 2. Replace the four (4) screws to secure the LCD panel.




Step	Size	Quantity	Screw Type
LCD Panel Disassembly	M2.0*3.0	4	

-
3. Replace the LVDS cable and antennas in the cable guides.

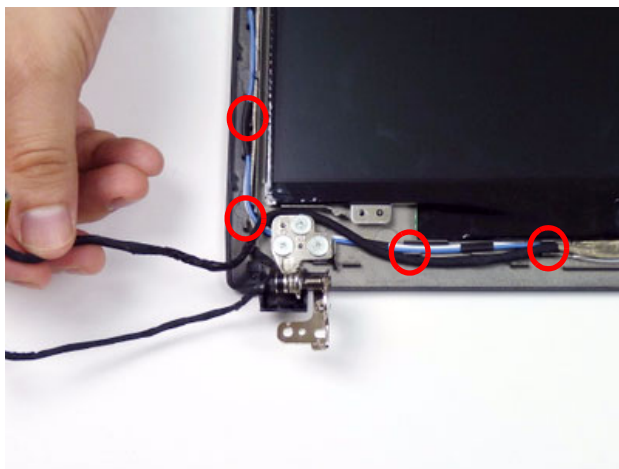


Replacing the Camera Module

1. Connect the CCD cable as shown.

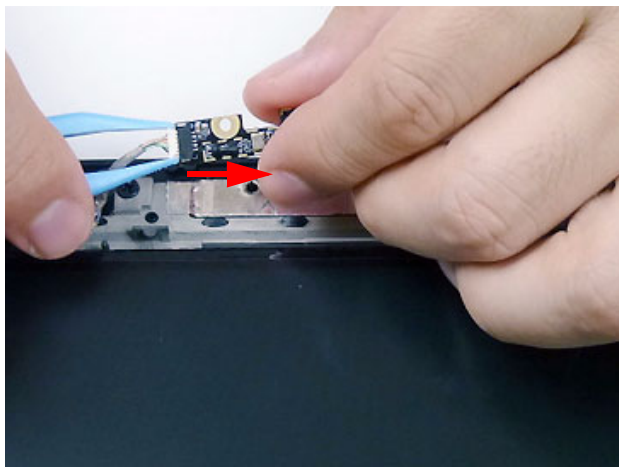

2. Place the CCD module onto the LCD cover. Apply gentle pressure to fix the adhesive.

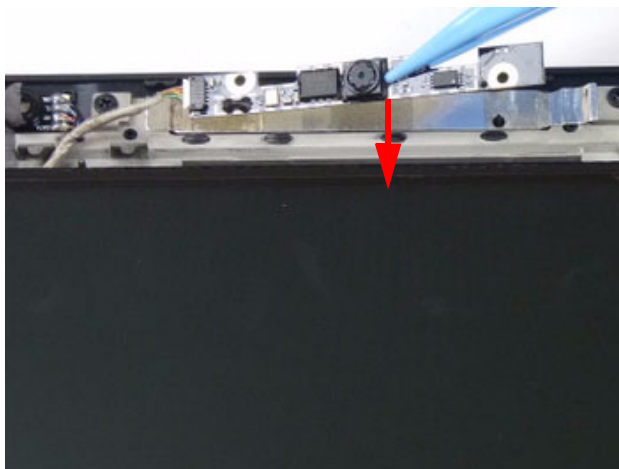

NOTE: Take care not to damage the cable.

Replacing the LCD Bezel

1. Place the bezel hinge covers over the hinges.



2. Press down on the top middle edge of the bezel to engage the locking clips..



3. Move along the sides to the bottom of the LCD module until all latches under the bezel are locked.



-
4. Move to the bottom-right corner of the bezel, press the bezel downwards until latch under the bezel is locked.



5. Move to the bottom-left corner of the bezel, press the bezel downwards until latch under the bezel is locked.




6. Press the bezel downwards at the bottom of the LCD module until the latches are locked.



7. Replace the two (2) bezel screws and screw caps.



Step	Size	Quantity	Screw Type
LCD Bezel Disassembly	M2.5*2.0	2	


Main Unit Assembly Process


Replacing the LCD Module

1. Replace the LCD module on the chassis.




2. Replace one (1) screw on the left and one (1) screw on the right hinge.

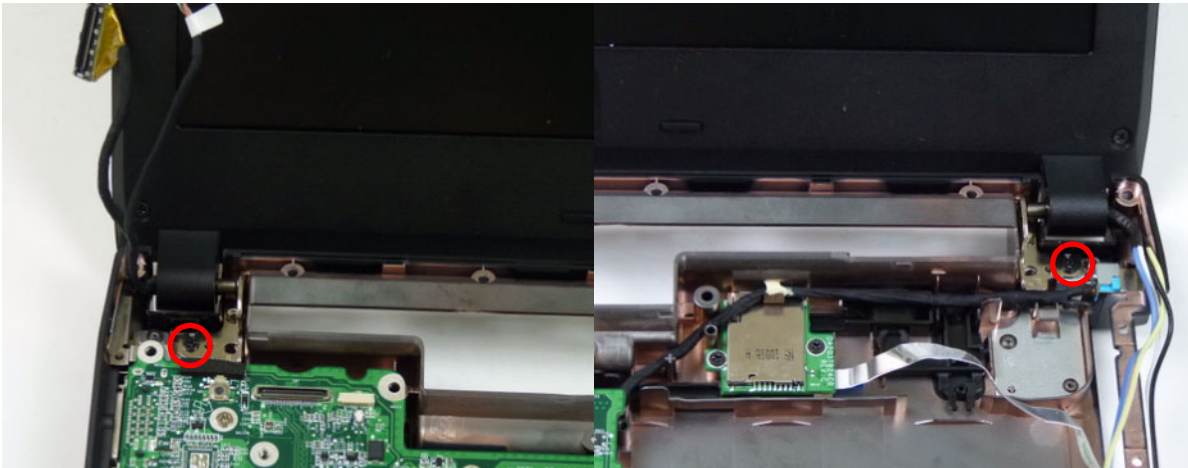


Step	Size	Quantity	Screw Type
LCD Module Disassembly	M2.5*6.0	2	


3. Place the computer at an angle and carefully guide the antenna cables through the opening of the lower cover.

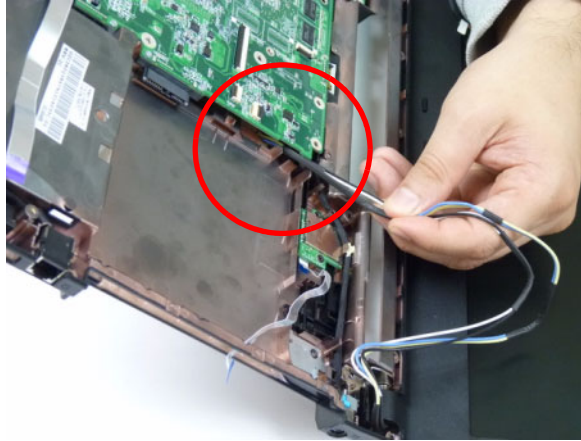

4. Fit the cables into the cable channel.

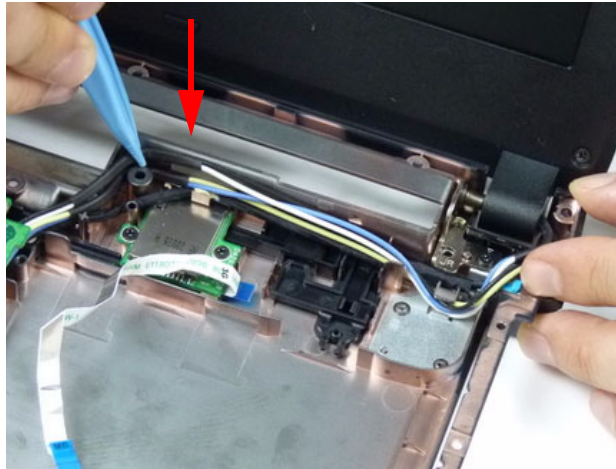


5. With the other hand, grasp the antenna cables and carefully pull through until there is no more slack.

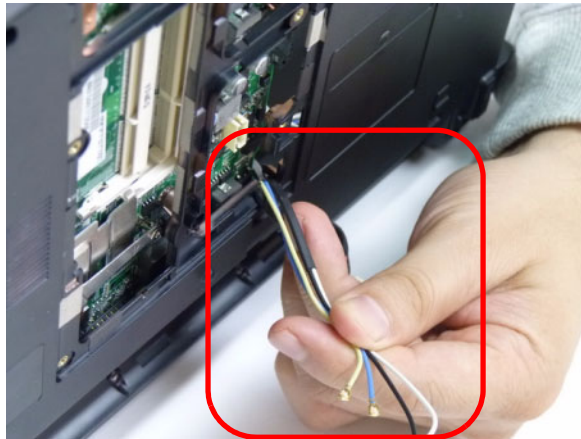

6. Ensure the cables are tucked underneath the mainboard corner.




7. Connect the LVDS and mic cables.

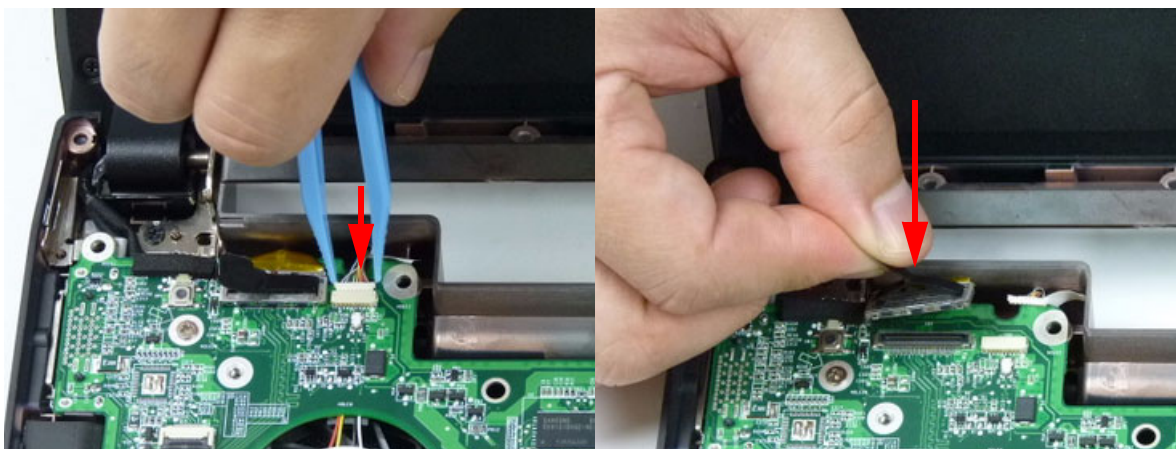


Replacing the CPU

IMPORTANT: The CPU has a Pin1 locator (1) that must be positioned corresponding to the marker (2) on the CPU socket.

1. Place the CPU into the CPU socket as shown, taking note of the Pin1 locator.

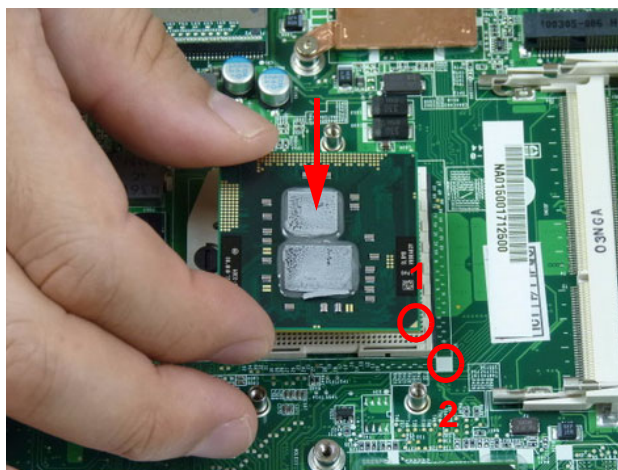

-
2. Using a slotted screw driver, rotate the CPU locking screw 180° clockwise as shown.

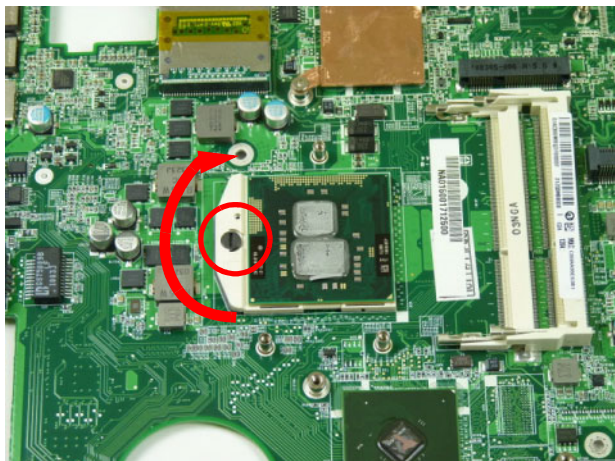

Replacing the Thermal Module

IMPORTANT: Apply a suitable thermal grease and ensure all heat pads are in place before replacing the Thermal Module


The following thermal grease types are approved for use:

- Silmore GP50
- Honeywell PCM45F-SP
- ShinEtsu 7762


The following thermal pads are approved for use:

- Eapus XR-PE

1. Remove all traces of thermal grease from the CPU using a lint-free cloth or cotton swab and Isopropyl Alcohol, Acetone, or other approved cleaning agent.
2. Apply a small amount of thermal grease to the centre of the CPU—there is no need to spread the grease manually, the force used during the installation of the Thermal Module is sufficient.
3. Align the screw holes on the Thermal Module and Mainboard then replace the module. Keep the module as level as possible to spread the thermal grease evenly.

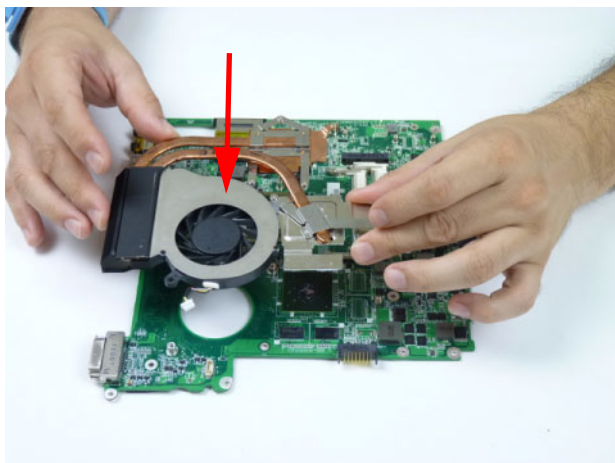


4. Tighten the five (5) captive screws (in numerical order from 1 to 5) on the CPU thermal module.

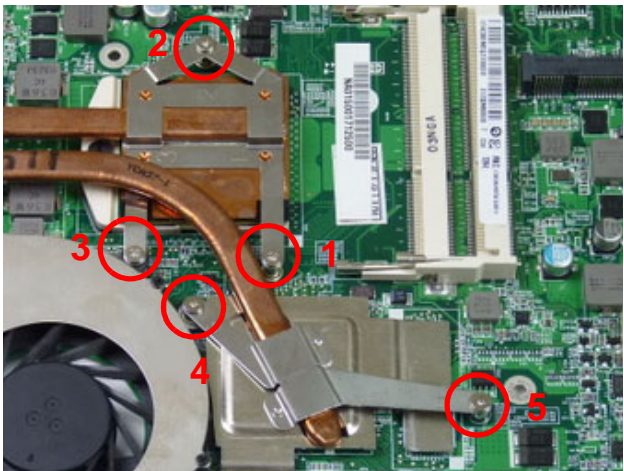


5. Replace one (1) securing screw on the fan.




Step	Size	Quantity	Screw Type
Thermal Module Disassembly	M2.5*5.0 Ni	1	

6. Connect the fan cable as shown.

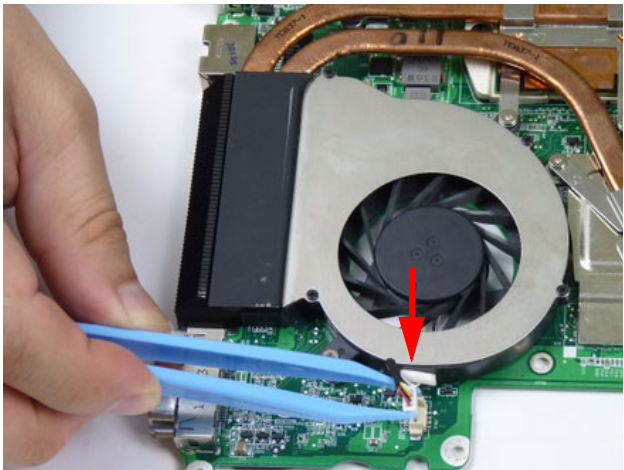


Replacing the PCH Heatsink

1. Place the PCH heatsink onto the mainboard as shown.

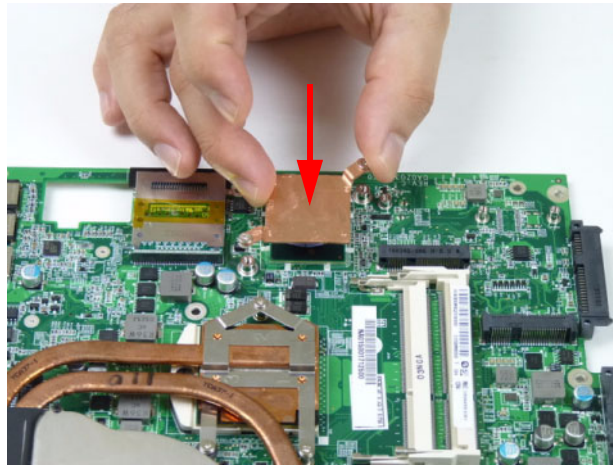

2. Tighten two (2) captive screws on the PCH heatsink.

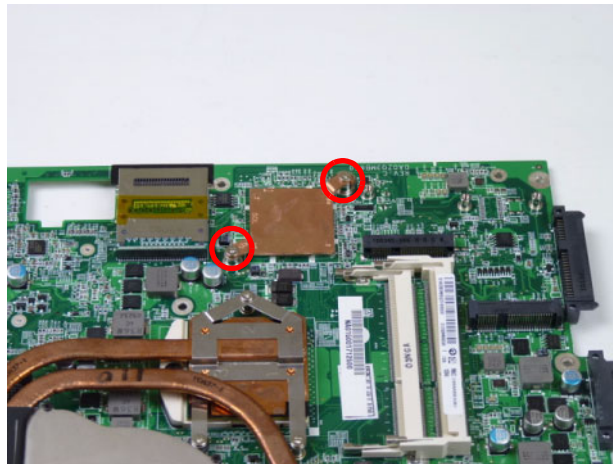


Removing the RTC Battery

1. Locate the RTC Battery holder on the mainboard and press the RTC battery into place.



Replacing the Mainboard

1. (1) Place the mainboard onto the chassis left side first and then (2) lower the right side.

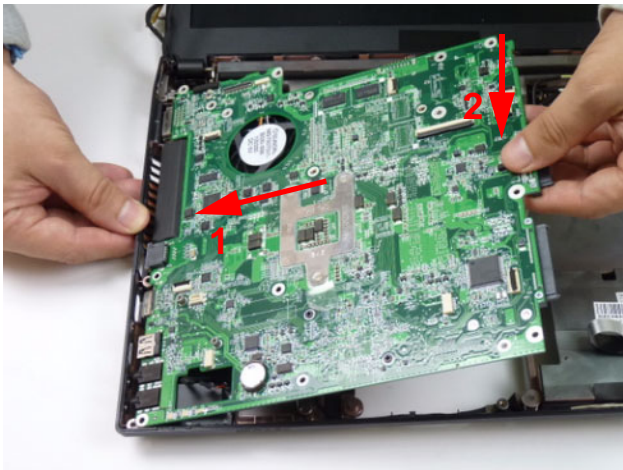

2. Replace the two (2) securing screws on the mainboard.




Step	Size	Quantity	Screw Type
Mainboard Disassembly	M2.5*5.0 Ni	2	

3. Turn the computer over and connect the DC-In cable.




4. Ensure the following cables and modules are connected:

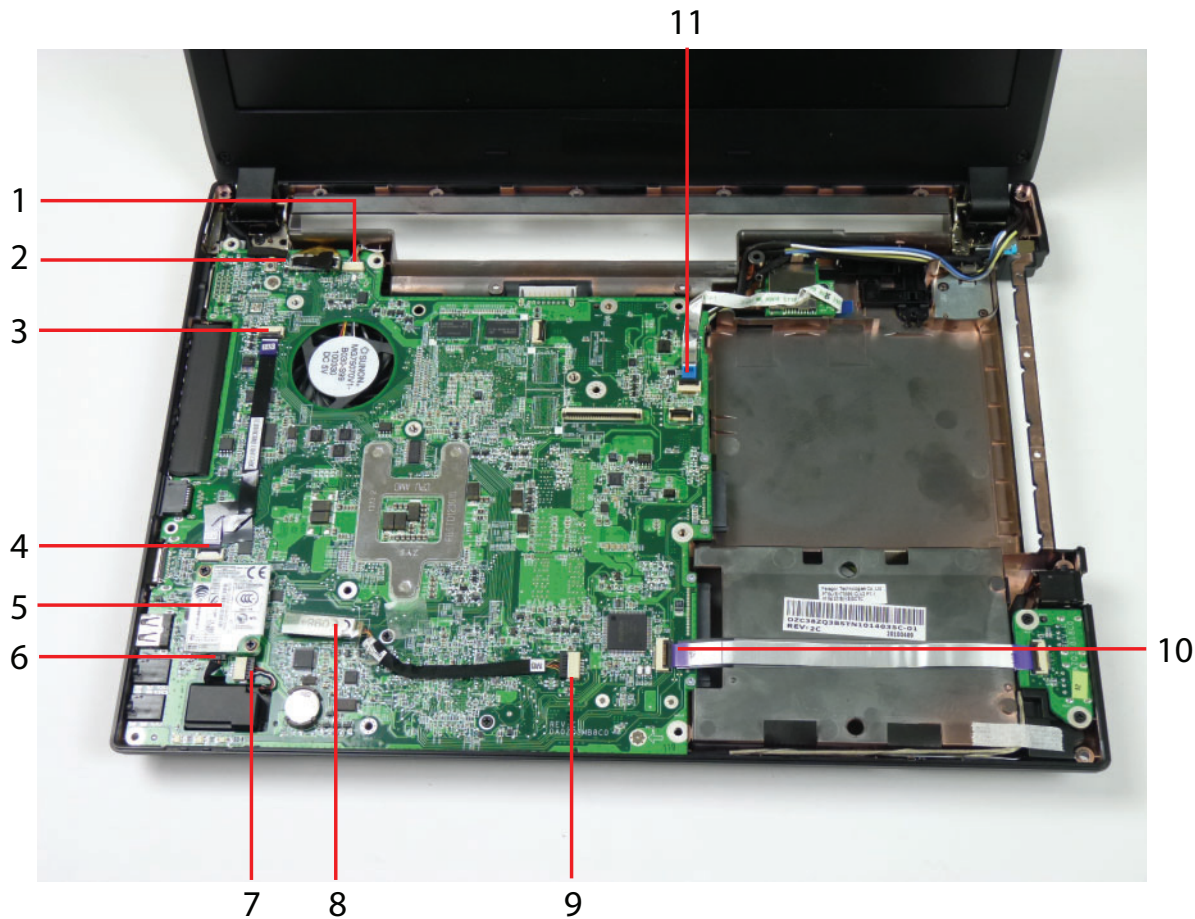

Item	Description	Item	Description
1	Camera and mic cable	7	RJ-45 connector
2	LVDS cable	8	Bluetooth board
3	Speaker FFC (Fan)	9	Bluetooth connector
4	Speaker FFC (Audio)	10	USB connector
5	Modem board	11	3G Module connector
6	Modem cable		

Replacing the Speaker FFC

1. Adhere the FFC to the mainboard.
2. Connect the speaker FFC to the AUDIO connector and lock the connector.

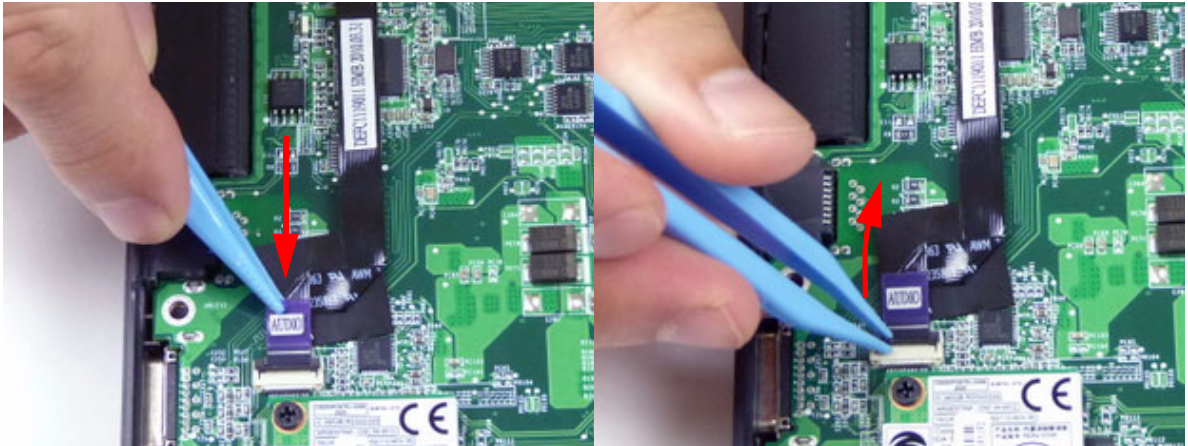


3. Connect the speaker FFC to the FAN connector and lock the connector.




Replacing the 3G Module


1. Connect and lock the 3G FFC to the 3G module.

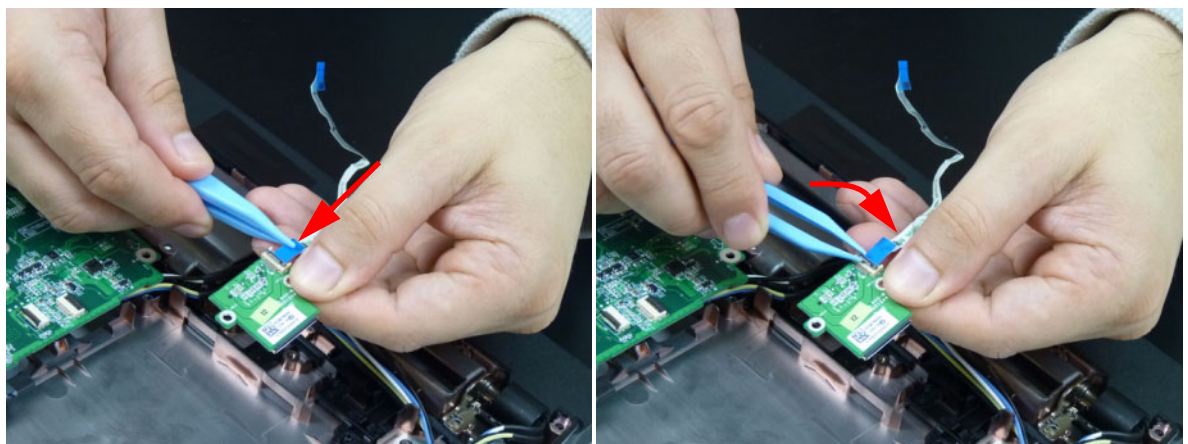


2. Place the 3G module into the chassis as shown.

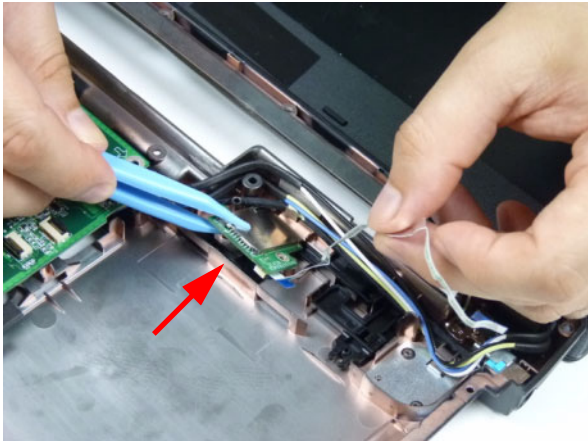


3. Replace the two (2) screws.

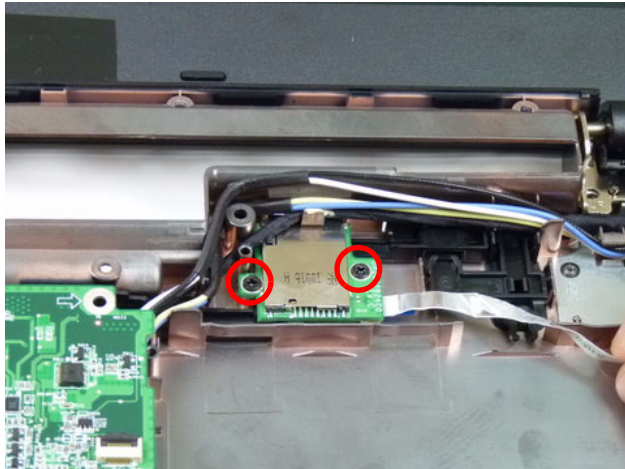


Step	Size	Quantity	Screw Type
3G Module Disassembly	M2.5*2.0	2	

4. Attach the FFC to the top of the mainboard.

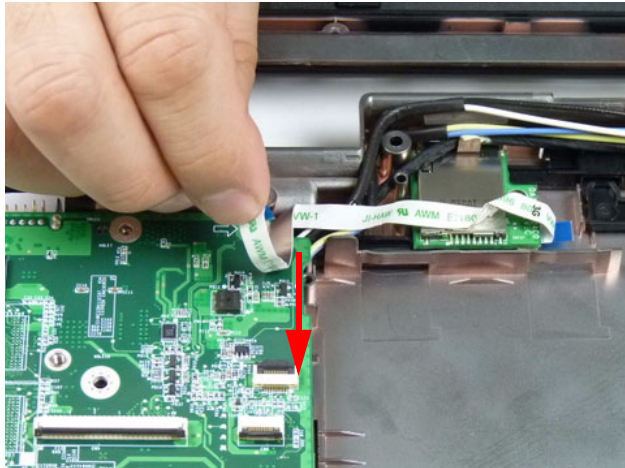


5. Connect and lock the 3G FFC to the mainboard.

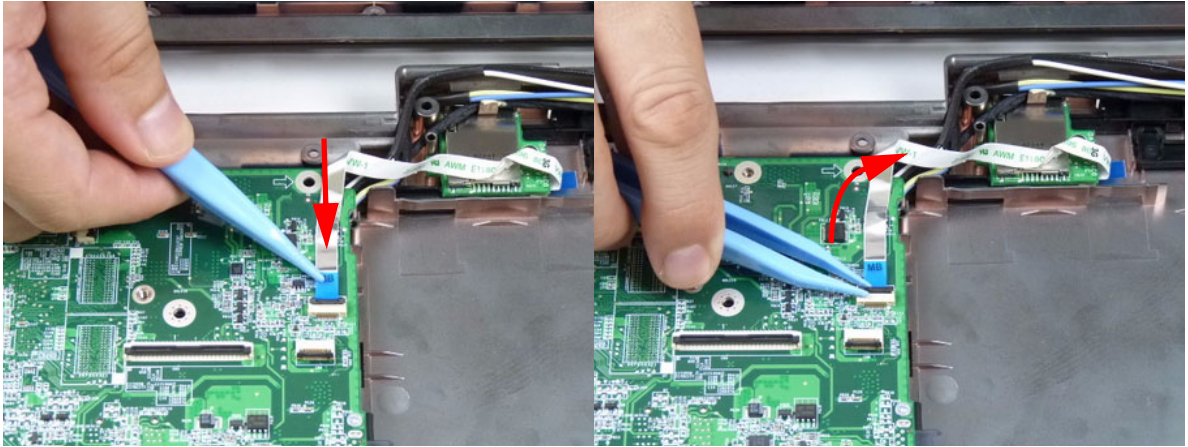


Replacing the Bluetooth Module


1. Connect the Bluetooth cable to the Bluetooth board.

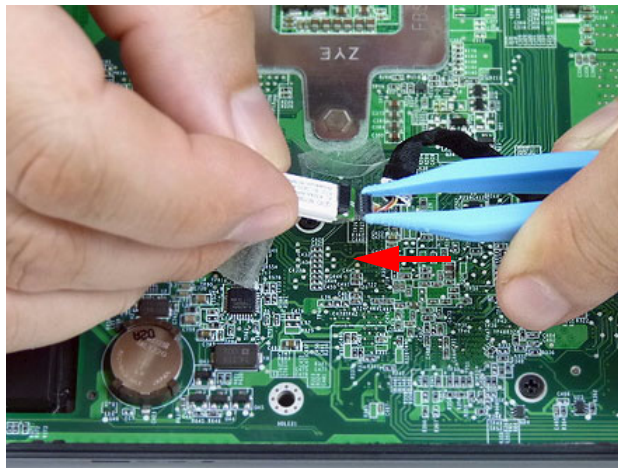


2. Attach mylar holder to the Bluetooth cable connector.

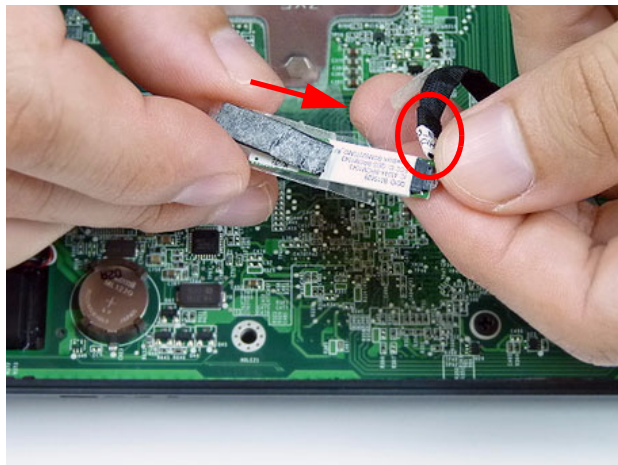

3. Place the Bluetooth board onto the white, rectangular area outlined on the mainboard.

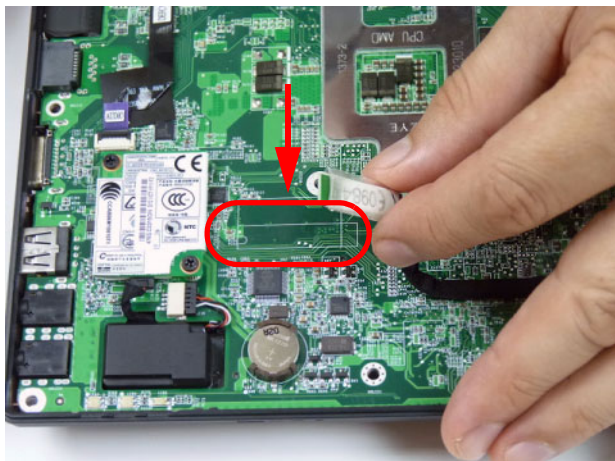


4. Connect the Bluetooth cable to the mainboard.

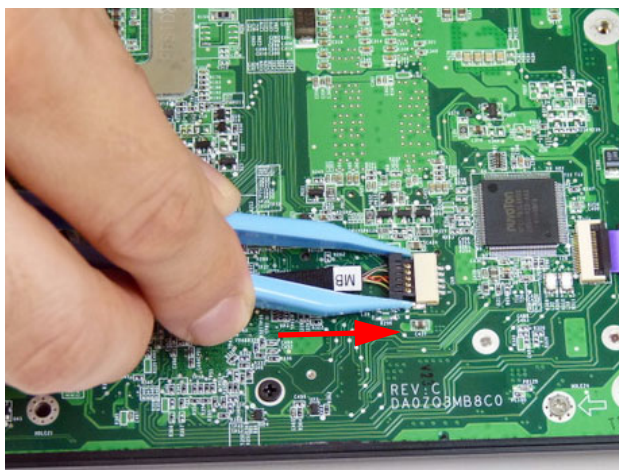



Replacing the Modem Module

1. Place the modem board onto the chassis.

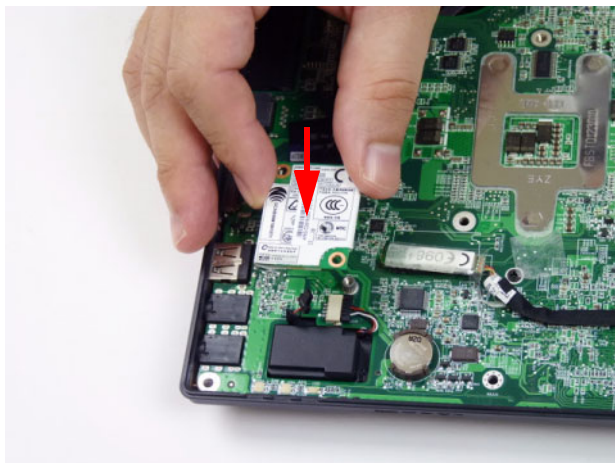


2. Replace two (2) screws on the modem board.

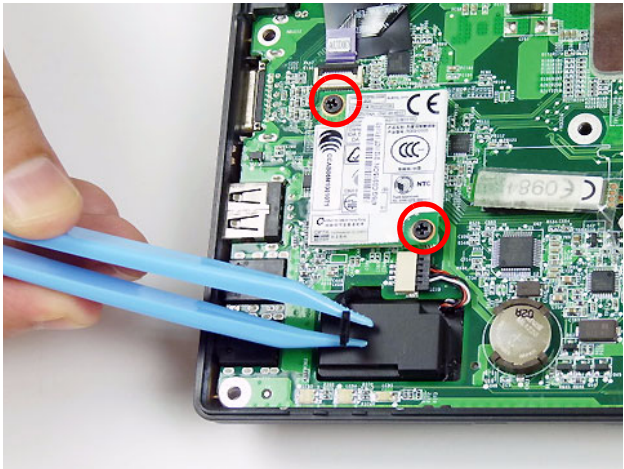


Step	Size	Quantity	Screw Type
Modem Board Disassembly	M2.5*3.0	2	

3. Using plastic tweezers, reconnect the modem cable to the board.

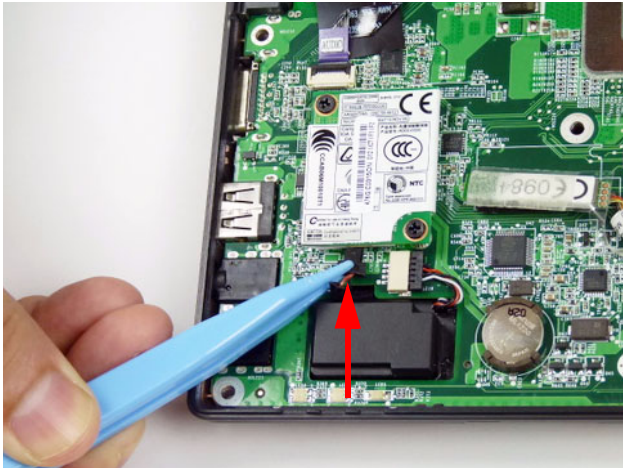



Replacing the USB Board

1. Using plastic tweezers, place the USB board onto the chassis.


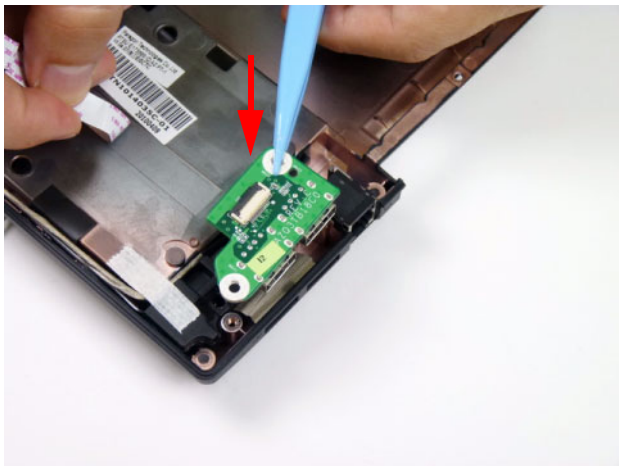


2. Replace two (2) screws to secure the USB board.

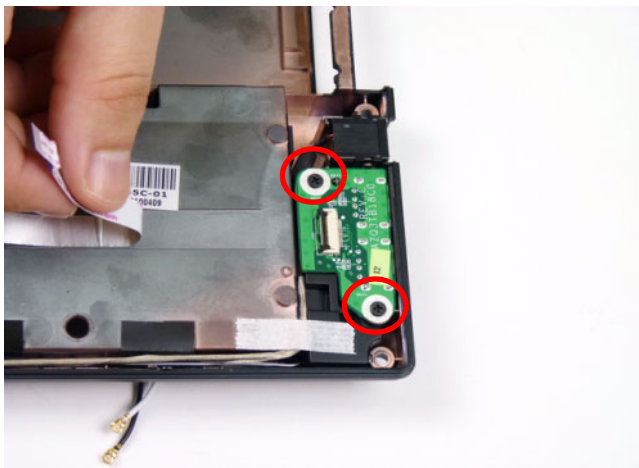

Step	Size	Quantity	Screw Type
USB Board Disassembly	M2.0*2.0	2	

3. Connect and lock the USB FFC to the USB board.

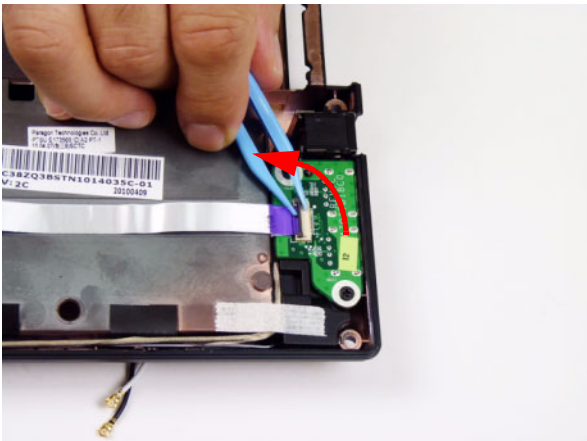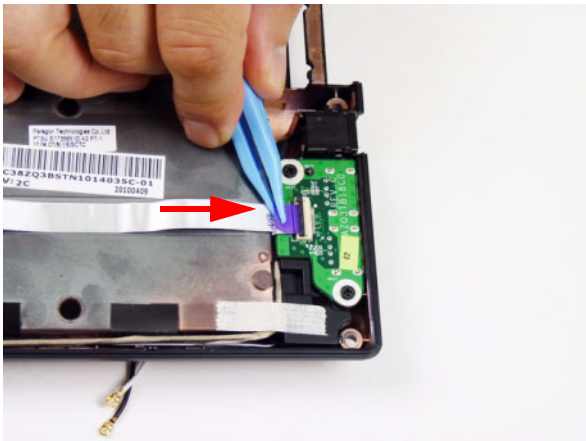


Replacing the Fingerprint Board


1. See “Removing the Upper Cover” on page 58.
2. Locate the fingerprint board on the upper cover.

Replacing the Touchpad Board


1. Connect and lock the left touchpad FFC to the touchpad board.

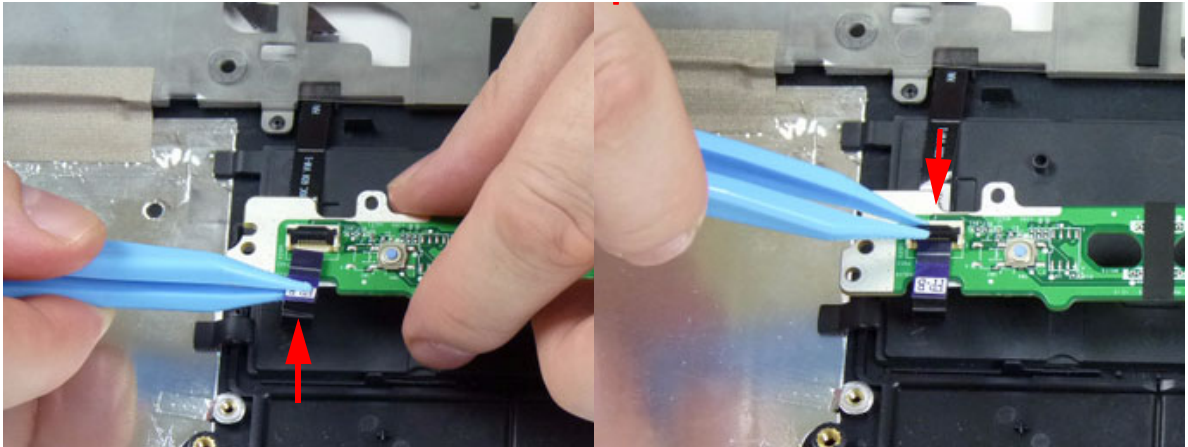


2. Repeat step 1 for the right touchpad FFC.
3. Turn the touchpad board over.

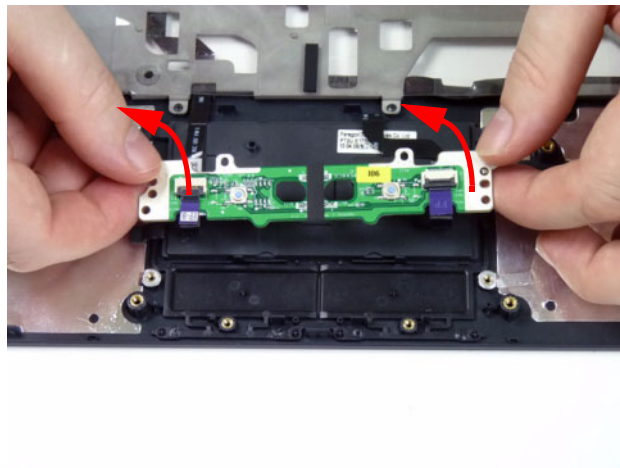


4. Place the touchpad board on the upper cover.

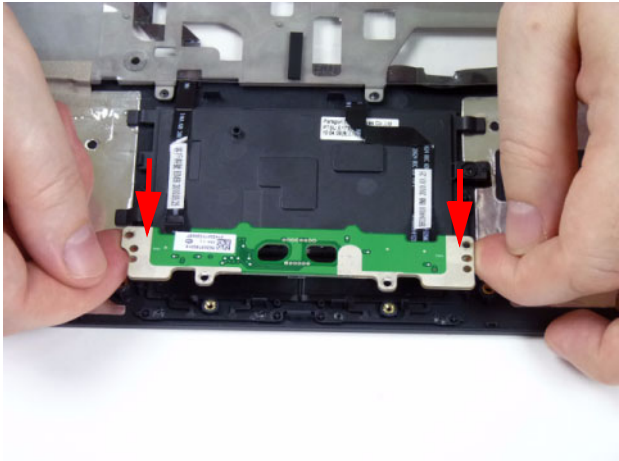


5. Replace the four (4) screws.

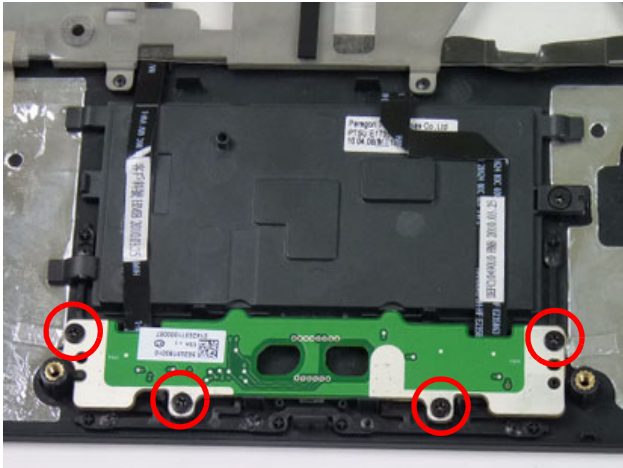


Step	Size	Quantity	Screw Type
Touchpad Board Disassembly	M2.0*3.0	4	

6. Adhere the adhesive tape to the chassis.

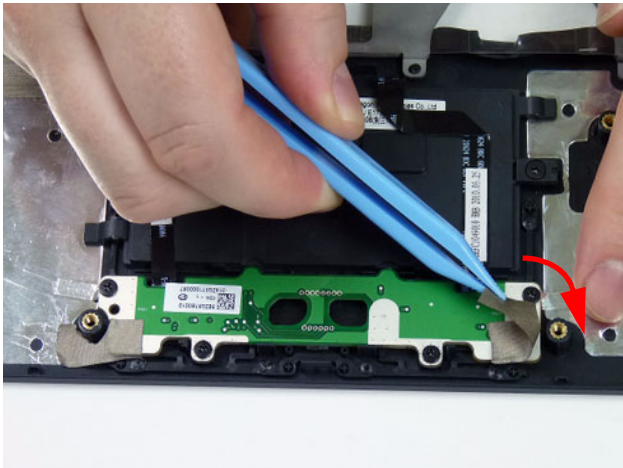


Replacing the Function Board


1. Connect and lock the FFC to the function board.

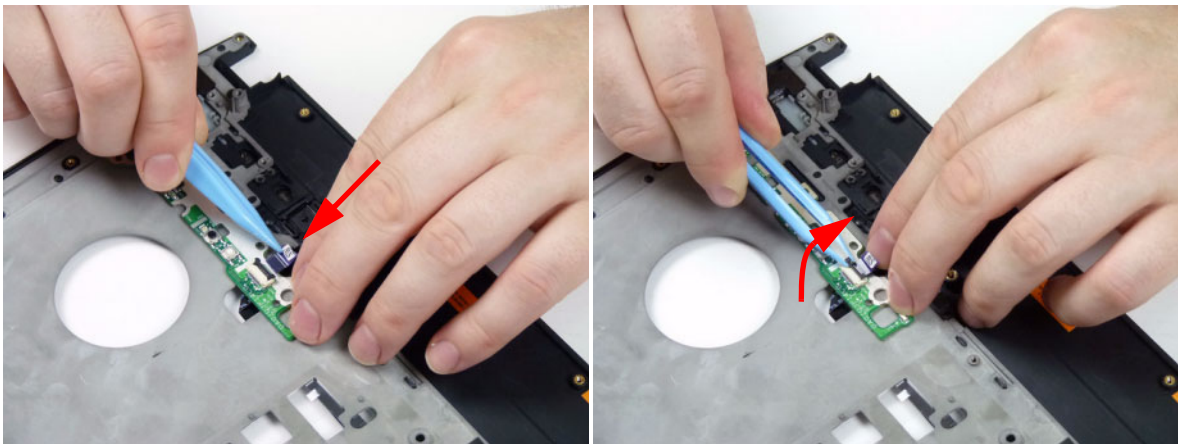


2. Carefully turn over function board and place it on the upper cover.

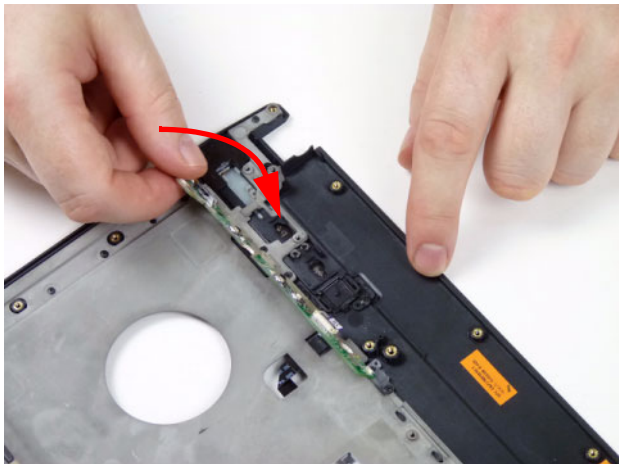

3. Replace the three (3) screws.

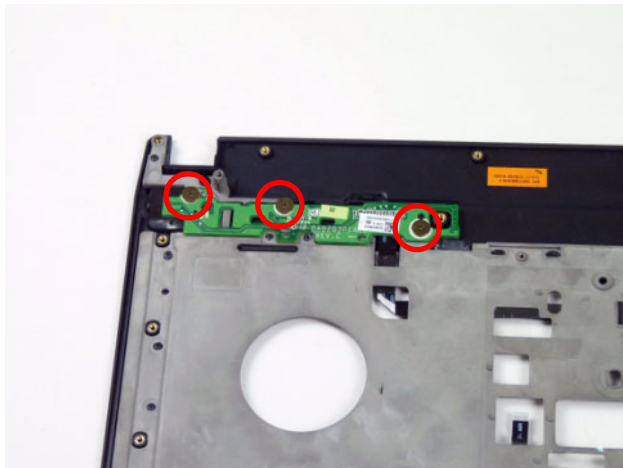

Step	Size	Quantity	Screw Type
Function Board Disassembly	Flat Head M2*1.0 Ni	3	

Replacing the Upper Cover


1. Place the upper cover on the chassis bottom edge first.



2. Lower the cover into position and apply pressure to engage the latches.




3. Continue pressing around the edges of the casing until there are no gaps between the upper and lower covers.

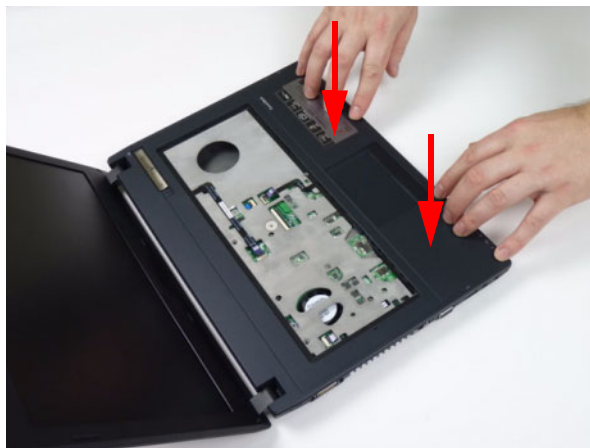


4. Connect the following 2 cables to the mainboard:


- a. Function board FFC
- b. Touchpad FFC

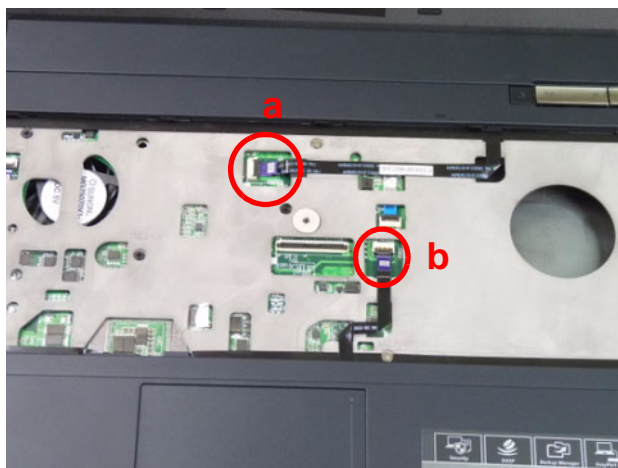


a) Connect and lock the Function FFC to the FFC connector.

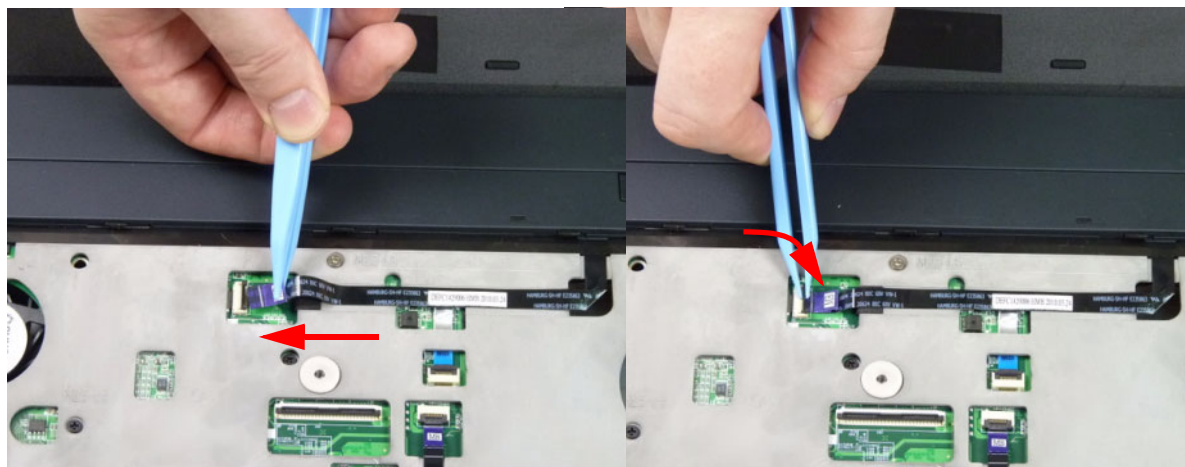

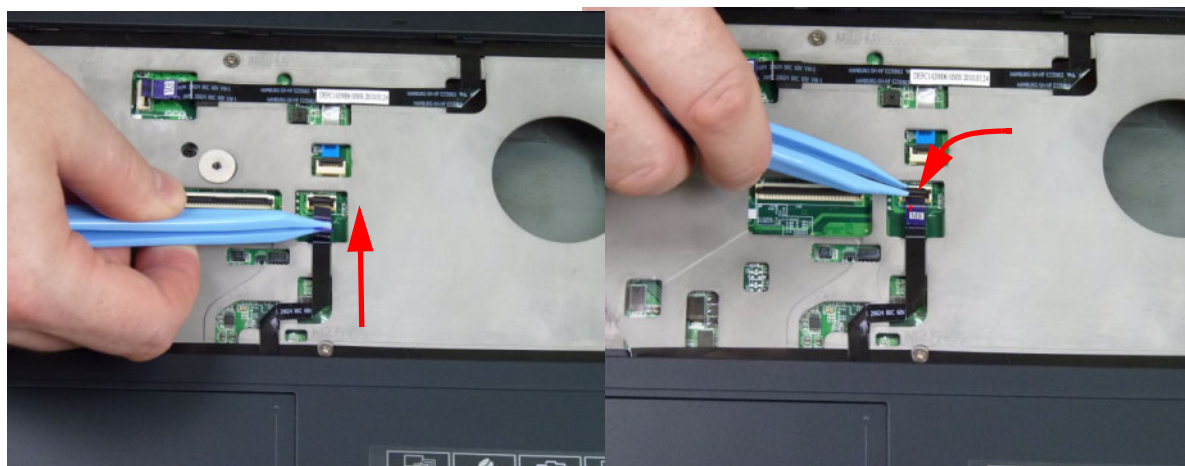

b) Connect and lock the touchpad FFC to the FFC connector.




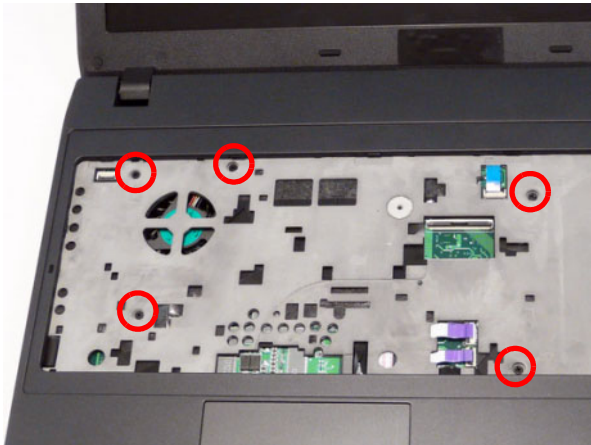



c) Replace the five (5) screws on the top cover.

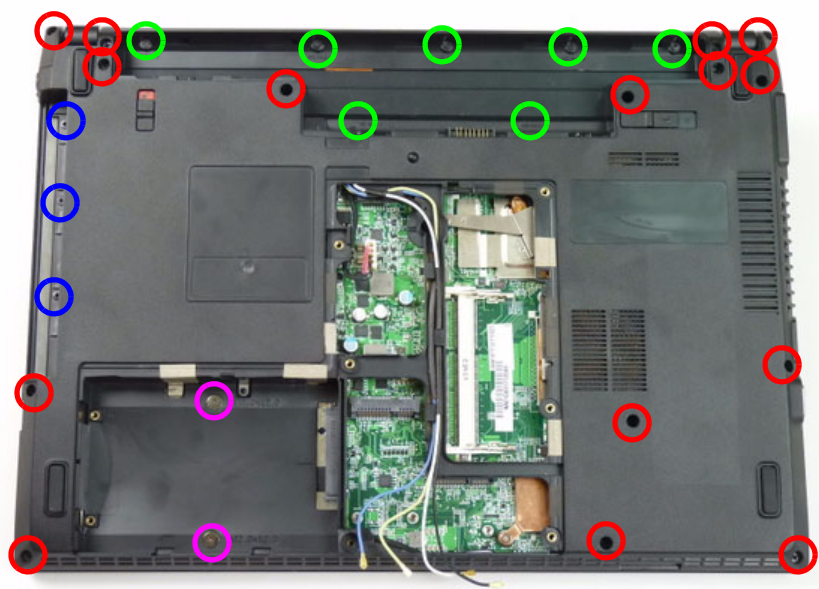

Step	Size	Quantity	Screw Type
Upper Cover Disassembly	M2.5*5.0 Ni	2	
	M2.5*3.0	3	

5. Replace the 24 securing screws on the lower cover.




Step	Size	Quantity	Screw Type
Lower Cover (red callout)	M2.0*6.0	15	
Battery Bay (green callout)	M2.0*3.0	7	
ODD Bay (blue callout)	M2.0*2.0	3	
HDD Bay (violet callout)	Flat Head M2.0*2.0	2	

External Module Assembly Process

Replacing the Keyboard


1. Place the keyboard face down on the upper cover. Connect the keyboard FPC to the mainboard and secure the locking latch.

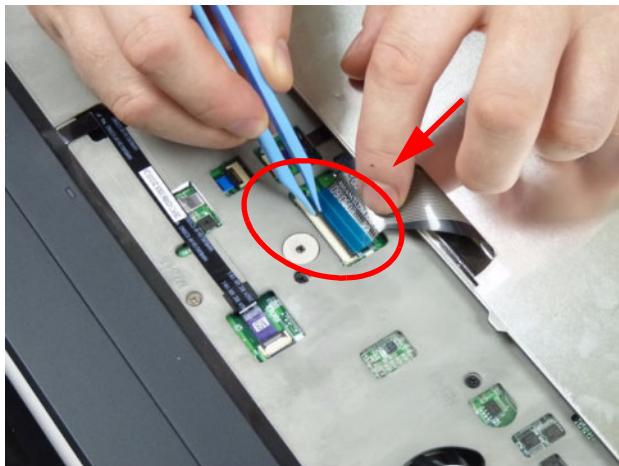


2. Turn the keyboard over and slide the front edge into the upper cover, ensuring that the four locating tabs are correctly seated.



3. Press down as indicated to secure the keyboard in place.

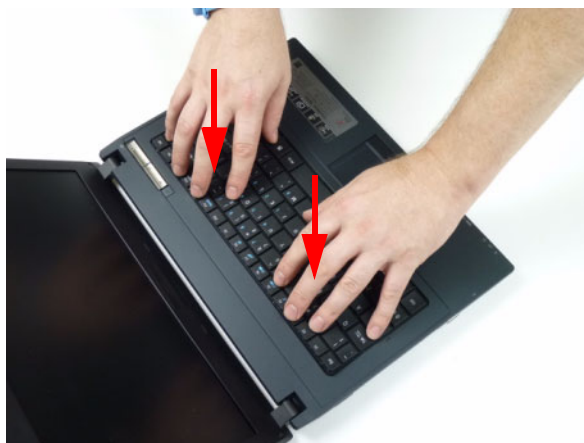


4. Ensure that the six (6) securing clips are fastened.

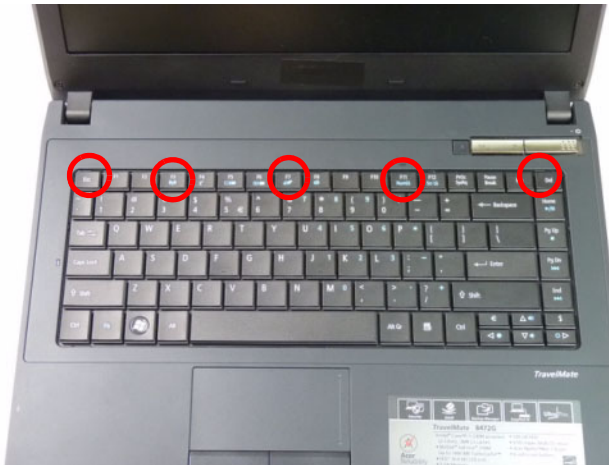

Replacing the Optical Drive Module

1. Place the ODD bracket onto the ODD module and replace the two (2) screws to secure it..



Step	Size	Quantity	Screw Type
ODD Bracket Disassembly	M2.0*3.0	2	

-
2. Press the bezel into the tray, bottom edge first, to secure it to the ODD Module.




3. Push the ODD Module into the ODD bay until it is flush with the casing.




Replacing the WLAN Module

1. Insert the WLAN board into the WLAN socket.

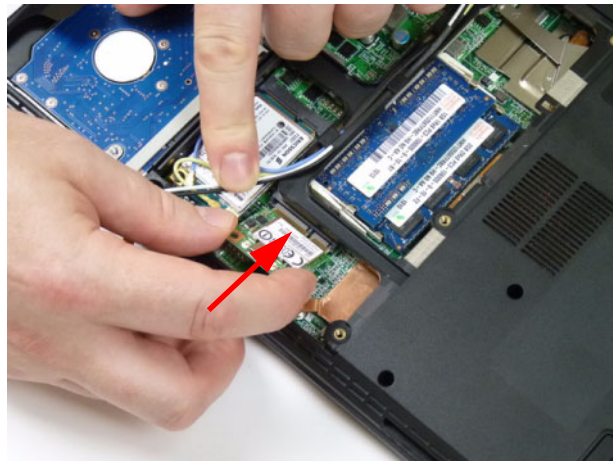


2. Replace the one (1) screw.



Step	Size	Quantity	Screw Type
WLAN Board Disassembly	M2.0*3.0	1	


3. Connect the two (2) cables to the WLAN board.

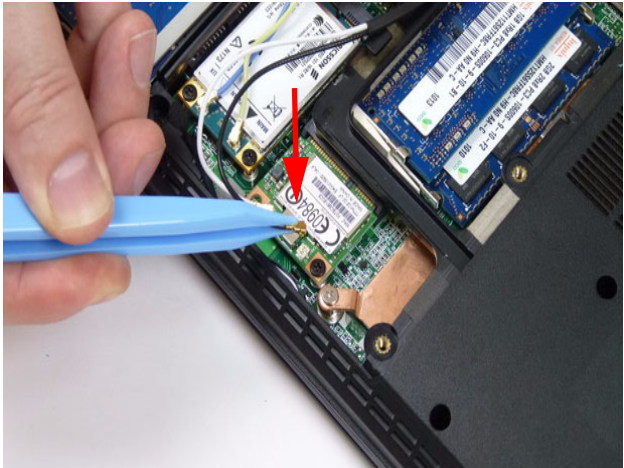


NOTE: Cable placement is as follows: White is closest to the 3G card, Black is closest to the PCH heatsink.

Replacing the 3G Module


1. Insert the 3G board into the 3G socket.

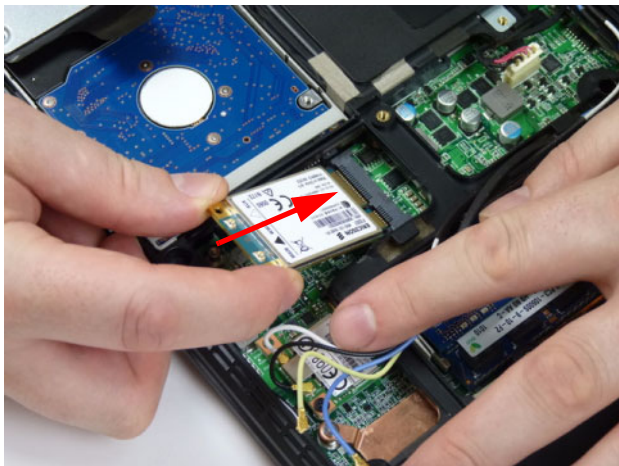

2. Connect the two (2) antenna cables to the 3G board and replace the two (2) screws.

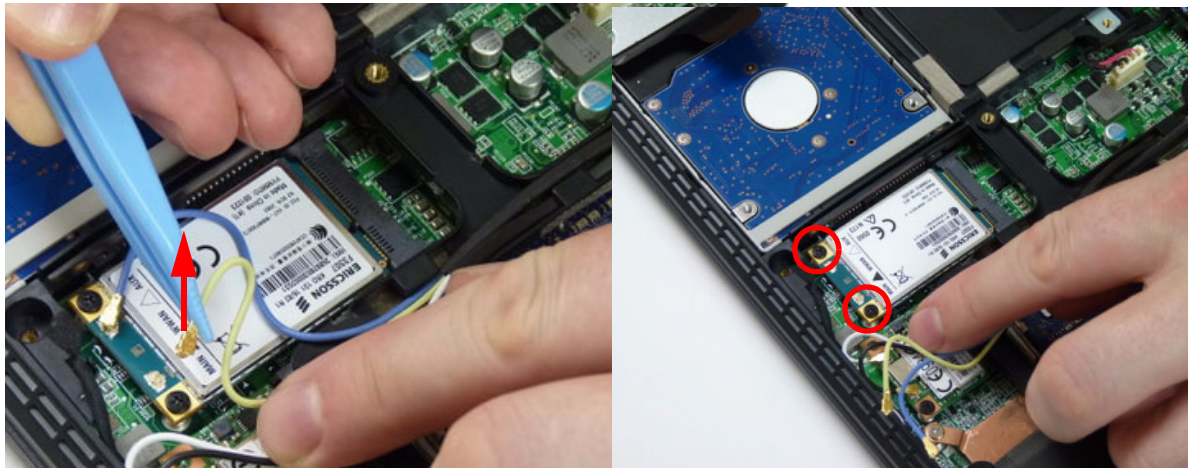


NOTE: Cable placement is as follows: Main (yellow) is closest to WLAN card, Aux (blue) is closest to HDD.

Step	Size	Quantity	Screw Type
3G Board Disassembly	M2.0*4.0	2	

Replacing the DIMM Modules

1. Insert the DIMM module in into the DIMM connector.

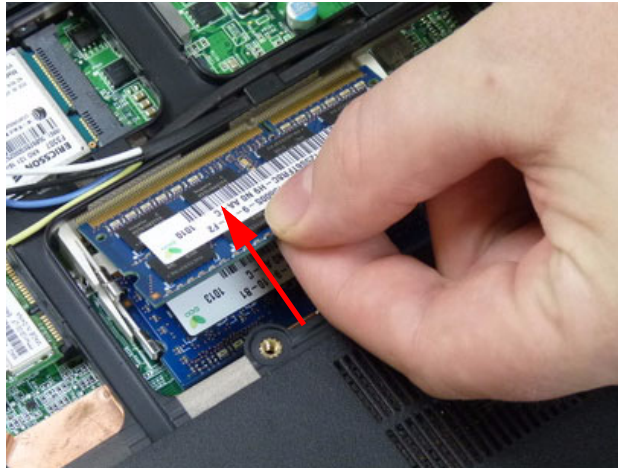


2. Press down to lock the DIMM module in place.




3. Repeat steps 1 and 2 for the second DIMM module if present.

Replacing the HDD Module


1. Place the HDD case around the HDD.

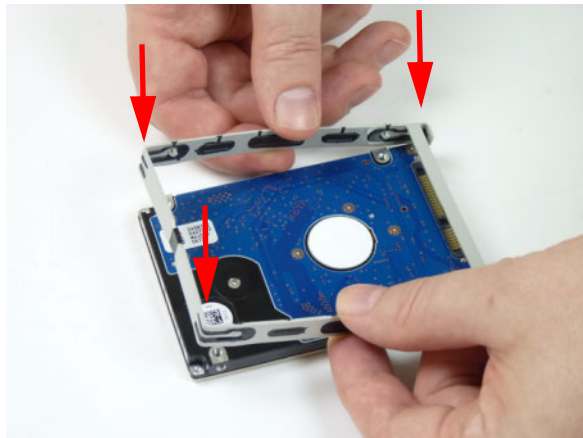

2. Lift the sides of the HDD case to fit the latches onto the HDD.

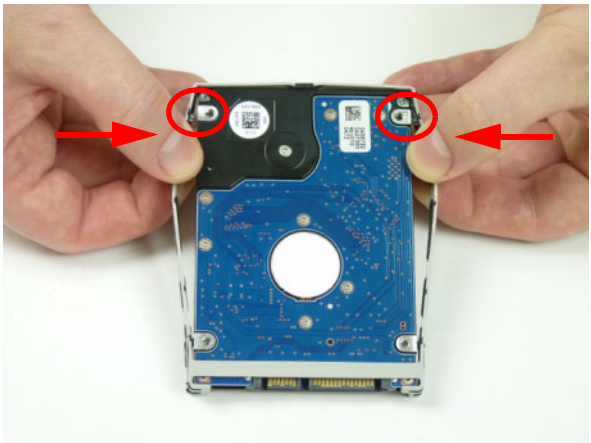


3. Place the carrier onto the HDD.

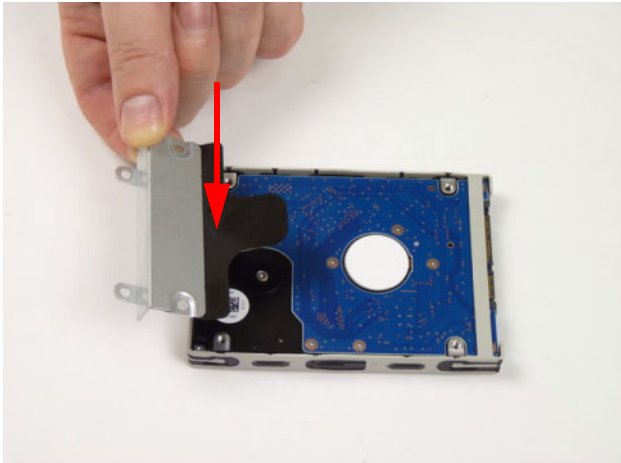

4. Replace the two (2) screws on the carrier.




Step	Size	Quantity	Screw Type
HDD Carrier Disassembly	M2.5*3.0 Ni	2	


5. Place HDD in the HDD bay.



6. Tilt the HDD down as shown.

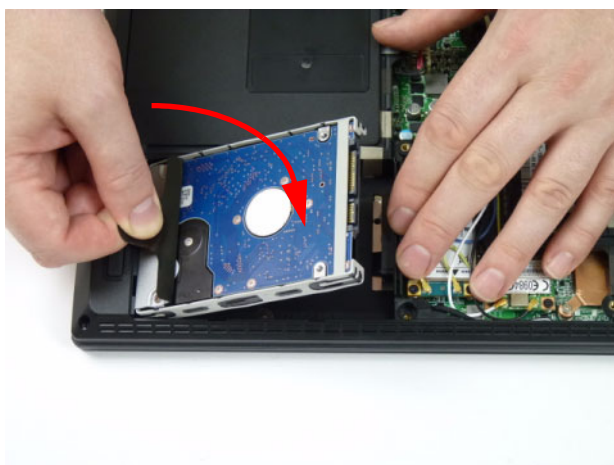

7. Using the pull-tab, slide the HDD Module in the direction of the arrow to connect the interface.

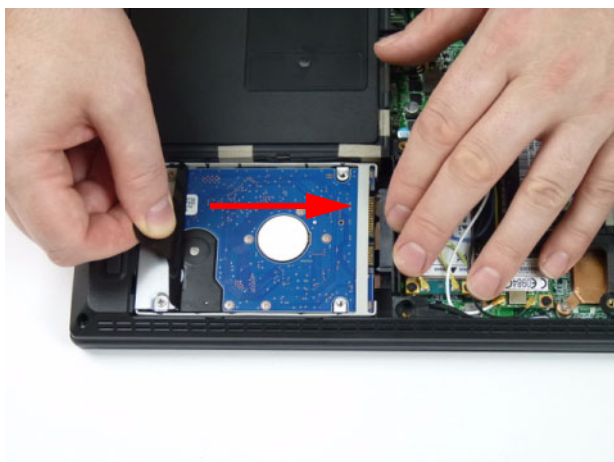



Replacing the Lower Cover

- 1. Replace the lower cover as shown.



- 2. Tighten the four (4) captive screws and replace the four (4) non-captive screws on the lower cover.

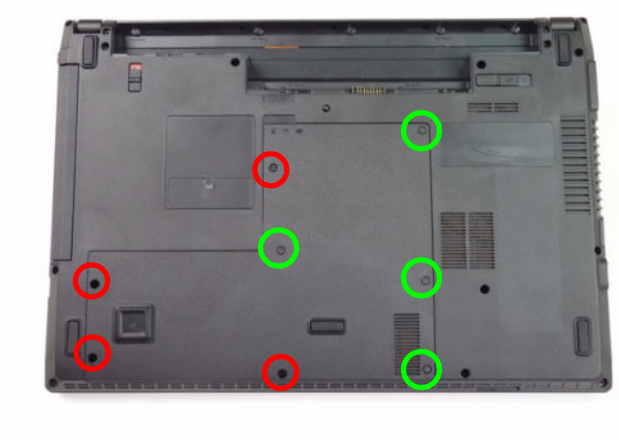

Step	Size	Quantity	Screw Type
Lower Cover Disassembly (green callout)	M2.5*6.0	4	


Replacing the SD dummy card

1. Insert the SD Dummy Card into the slot and push until the card clicks into place and is flush with the casing.




Replacing the Battery Pack

1. Insert the battery pack and press down.

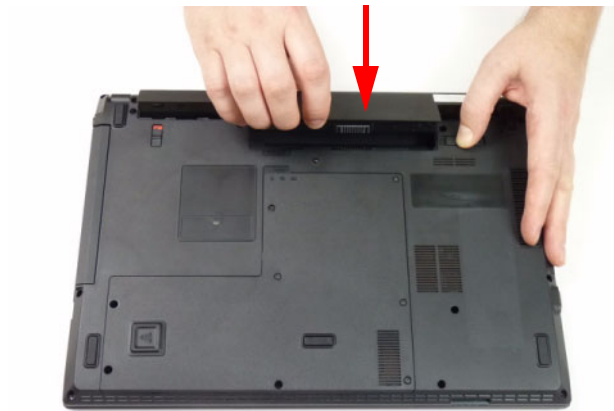

2. Slide the battery lock in the direction shown to secure the battery in place.

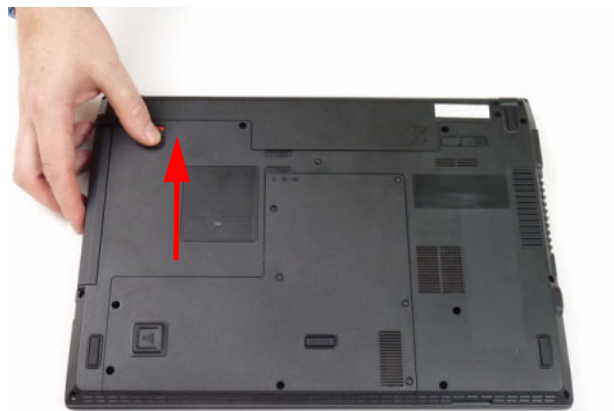

Troubleshooting

Common Problems

Use the following procedure as a guide for computer problems.

NOTE: The diagnostic tests are intended to test only Acer products. Non-Acer products, prototype cards, or modified options can give false errors and invalid system responses.


1. Obtain the failing symptoms in as much detail as possible.
2. Verify the symptoms by attempting to re-create the failure by running the diagnostic test or by repeating the same operation.
3. Use the following table with the verified symptom to determine which page to go to.

Symptoms (Verified)	Go To
Power On Issue	Page 152
No Display Issue	Page 153
LCD Failure	Page 155
Internal Keyboard Failure	Page 155
TouchPad Failure	Page 156
Internal Speaker Failure	Page 156
ODD Failure	Page 159
WLAN Failure	Page 162
Thermal Unit Failure	Page 162
Other Functions Failure	Page 163
Intermittent Failures	Page 164
Undermined Failures	Page 164

4. If the Issue is still not resolved, see "Online Support Information" on page 247.

Power On Issue

If the system doesn't power on, perform the following actions one at a time to correct the problem. Do not replace a non-defective FRUs:

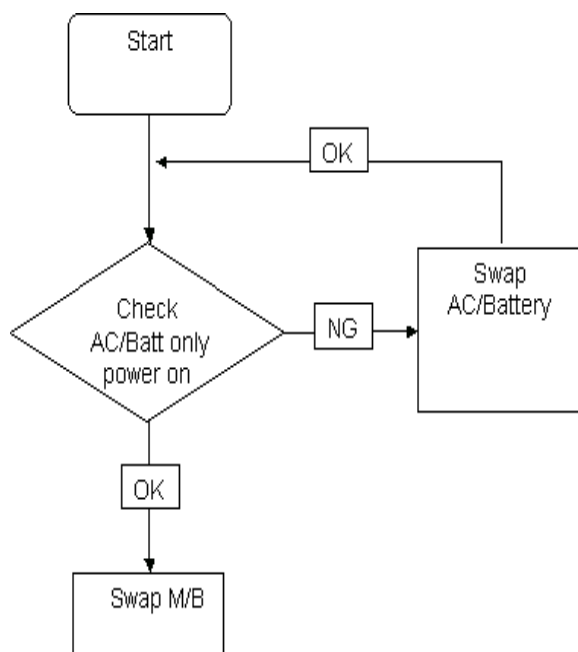


Computer Shutdown Intermittently

If the system powers off at intervals, perform the following actions one at a time to correct the problem.

1. Check the power cable is properly connected to the computer and the electrical outlet.
2. Remove any extension cables between the computer and the outlet.
3. Remove any surge protectors between the computer and the electrical outlet. Plug the computer directly into a known good electrical outlet.
4. Disconnect the power and open the casing to check the Thermal Unit (see "Thermal Unit Failure" on page 162) and fan airways are free of obstructions.
5. Remove all external and non-essential hardware connected to the computer that are not necessary to boot the computer to the failure point.
6. Remove any recently installed software.
7. If the Issue is still not resolved, see "Online Support Information" on page 247.

No Display Issue

If the **Display** doesn't work, perform the following actions one at a time to correct the problem. Do not replace a non-defective FRUs:

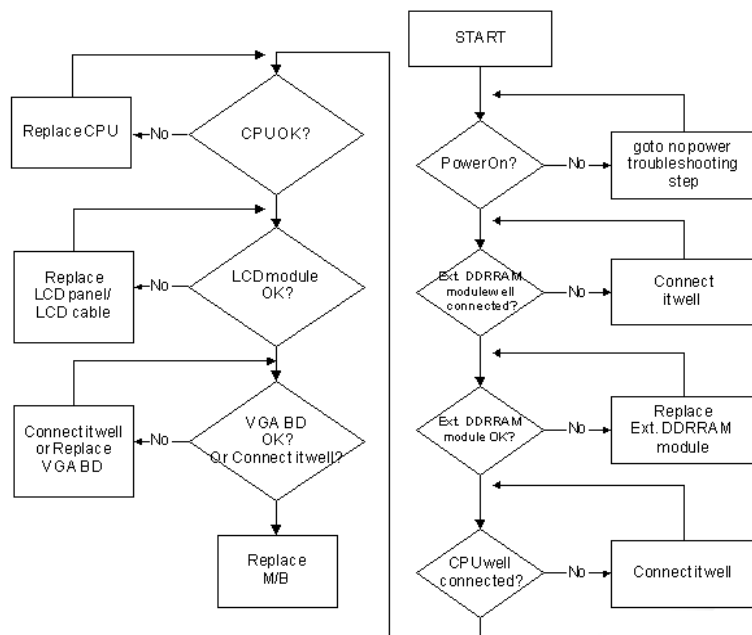

No POST or Video

If the POST or video doesn't display, perform the following actions one at a time to correct the problem.

1. Make sure that the internal display is selected. On this notebook model, switching between the internal display and the external display is done by pressing **Fn+F5**. Reference Product pages for specific model procedures.
2. Make sure the computer has power by checking at least one of the following occurs:
 - Fans start up
 - Status LEDs light up

If there is no power, see "Power On Issue" on page 152.

3. Drain any stored power by removing the power cable and battery and holding down the power button for 10 seconds. Reconnect the power and reboot the computer.
4. Connect an external monitor to the computer and switch between the internal display and the external display by pressing **Fn+F5** (on this model).

If the POST or video appears on the external display, see "LCD Failure" on page 155.

5. Disconnect power and all external devices including port replicators or docking stations. Remove any memory cards and CD/DVD discs. Restart the computer.

If the computer boots correctly, add the devices one by one until the failure point is discovered.

6. Reseat the memory modules.
7. Remove the drives (see "Disassembly Process" on page 43).
8. If the Issue is still not resolved, see "Online Support Information" on page 247.

Abnormal Video Display

If video displays abnormally, perform the following actions one at a time to correct the problem.

1. Reboot the computer.
2. If permanent vertical/horizontal lines or dark spots display in the same location, the LCD is faulty and should be replaced. See “Disassembly Process” on page 43.
3. If extensive pixel damage is present (different colored spots in the same locations on the screen), the LCD is faulty and should be replaced. See “Disassembly Process” on page 43.
4. Adjust the brightness to its highest level. See the User Manual for instructions on adjusting settings.
NOTE: Ensure that the computer is not running on battery alone as this may reduce display brightness.
If the display is too dim at the highest brightness setting, the LCD is faulty and should be replaced. See “Removing the LCD Module” on page 79.
5. Check the display resolution is correctly configured:
 - a. Minimize or close all Windows.
 - b. If display size is only abnormal in an application, check the view settings and control/mouse wheel zoom feature in the application.
 - c. If desktop display resolution is not normal, right-click on the desktop and select **Personalize**→ **Display Settings**.
 - d. Click and drag the Resolution slider to the desired resolution.
 - e. Click **Apply** and check the display. Readjust if necessary.
6. Roll back the video driver to the previous version if updated.
7. Remove and reinstall the video driver.
8. Check the Device Manager to determine that:
 - The device is properly installed. There are no red Xs or yellow exclamation marks.
 - There are no device conflicts.
 - No hardware is listed under Other Devices.
9. If the Issue is still not resolved, see “Online Support Information” on page 247.
10. Run the Windows Memory Diagnostic from the operating system DVD and follow the onscreen prompts.
11. If the Issue is still not resolved, see “This is a Blank chapter page.” on page Blank.


Random Loss of BIOS Settings

If the computer is experiencing intermittent loss of BIOS information, perform the following actions one at a time to correct the problem.

1. If the computer is more than one year old, replace the CMOS battery.
2. Run a complete virus scan using up-to-date software to ensure the computer is virus free.
3. If the computer is experiencing HDD or ODD BIOS information loss, disconnect and reconnect the power and data cables between devices.
If the BIOS settings are still lost, replace the cables.
4. If HDD information is missing from the BIOS, the drive may be defective and should be replaced.
5. Replace the Motherboard.
6. If the Issue is still not resolved, see “Online Support Information” on page 247.


LCD Failure

If the **LCD** fails, perform the following actions one at a time to correct the problem. Do not replace a non-defective FRUs:

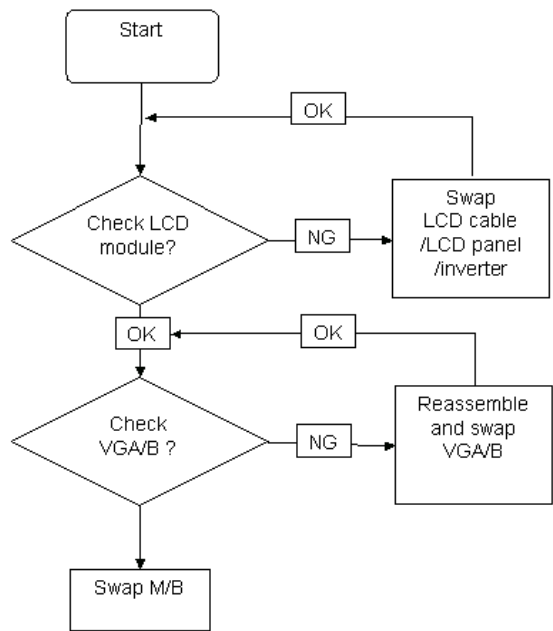


Built-In Keyboard Failure

If the built-in **Keyboard** fails, perform the following actions one at a time to correct the problem. Do not replace a non-defective FRUs:

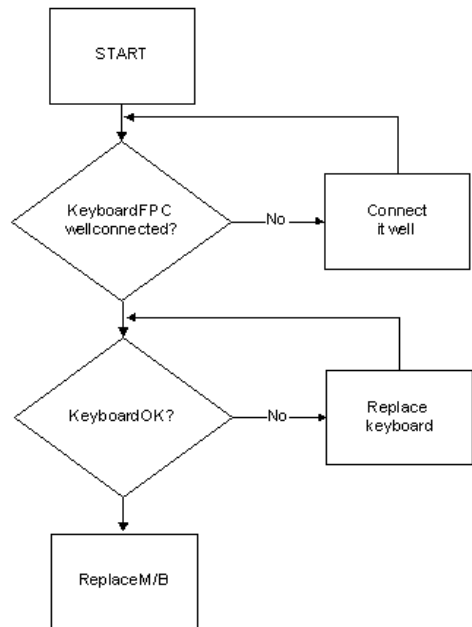


TouchPad Failure

If the **TouchPad** doesn't work, perform the following actions one at a time to correct the problem. Do not replace a non-defective FRUs:

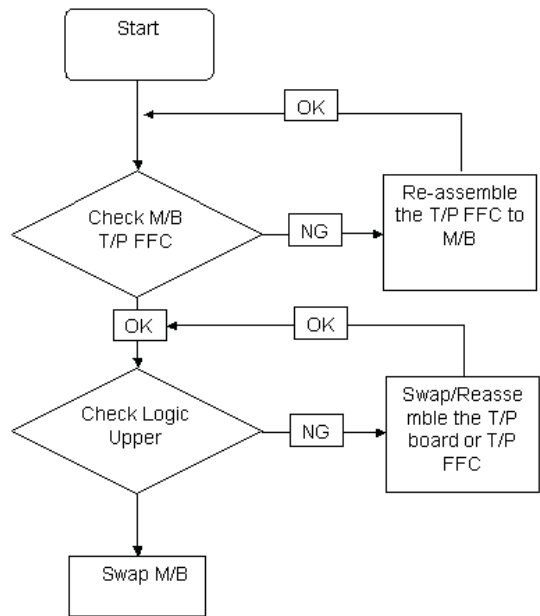

Internal Speaker Failure

If the internal **Speakers** fail, perform the following actions one at a time to correct the problem. Do not replace a non-defective FRUs:

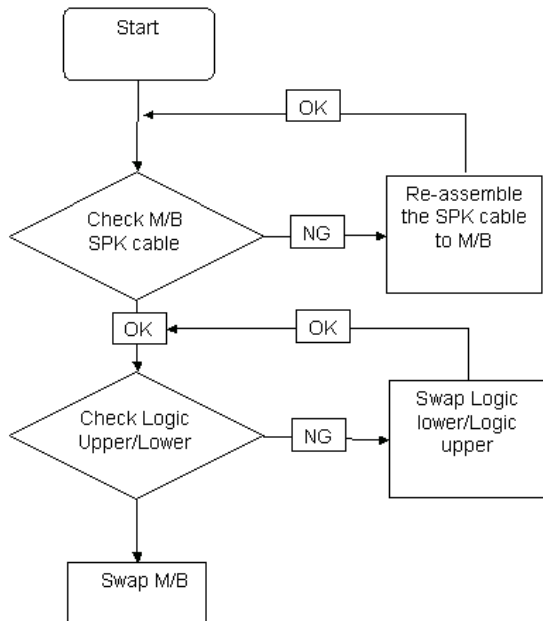

Sound Problems

If sound problems are experienced, perform the following actions one at a time to correct the problem.

1. Reboot the computer.
2. Navigate to **Start**→ **Control Panel**→ **System and Maintenance**→ **System**→ **Device Manager**. Check the Device Manager to determine that:
 - The device is properly installed.
 - There are no red Xs or yellow exclamation marks.
 - There are no device conflicts.
 - No hardware is listed under Other Devices.
3. Roll back the audio driver to the previous version, if updated recently.
4. Remove and reinstall the audio driver.
5. Ensure that all volume controls are set mid range:
 - a. Click the volume icon on the taskbar and drag the slider to 50. Ensure that the volume is not muted.
 - b. Click Mixer to verify that other audio applications are set to 50 and not muted.
6. Navigate to **Start**→ **Control Panel**→ **Hardware and Sound**→ **Sound**. Ensure that Speakers are selected as the default audio device (green check mark).

NOTE: If Speakers does not show, right-click on the **Playback** tab and select **Show Disabled Devices** (clear by default).
7. Select Speakers and click **Configure** to start **Speaker Setup**. Follow the onscreen prompts to configure the speakers.
8. Remove and recently installed hardware or software.
9. Restore system and file settings from a known good date using **System Restore**.

If the issue is not fixed, repeat the preceding steps and select an earlier time and date.
10. Reinstall the Operating System.
11. If the Issue is still not resolved, see “Online Support Information” on page 247.

Microphone Problems

If internal or external **Microphones** do not operate correctly, perform the following actions one at a time to correct the problem.

1. Check that the microphone is enabled. Navigate to **Start**→ **Control Panel**→ **Hardware and Sound**→ **Sound** and select the **Recording** tab.
2. Right-click on the **Recording** tab and select **Show Disabled Devices** (clear by default).
3. The microphone appears on the **Recording** tab.
4. Right-click on the microphone and select **Enable**.
5. Select the microphone then click **Properties**. Select the **Levels** tab.
6. Increase the volume to the maximum setting and click **OK**.
7. Test the microphone hardware:
 - a. Select the microphone and click **Configure**.
 - b. Select **Set up microphone**.
 - c. Select the microphone type from the list and click **Next**.
 - d. Follow the onscreen prompts to complete the test.
8. If the Issue is still not resolved, see “Online Support Information” on page 247.

HDD Not Operating Correctly

If the **HDD** does not operate correctly, perform the following actions one at a time to correct the problem.

1. Disconnect all external devices.
2. Run a complete virus scan using up-to-date software to ensure the computer is virus free.
3. Run the Windows 7 Startup Repair Utility:
 - a. insert the Windows 7 Operating System DVD in the ODD and restart the computer.
 - b. When prompted, press any key to start to the operating system DVD.
 - c. The **Install Windows** screen displays. Click **Next**.
 - d. Select **Repair your computer**.
 - e. The **System Recovery Options** screen displays. Click **Next**.
 - f. Select the appropriate operating system, and click **Next**.

NOTE: Click **Load Drivers** if controller drives are required.

- g. Select **Startup Repair**.
- h. Startup Repair attempts to locate and resolve issues with the computer.
- i. When complete, click **Finish**.


If an issue is discovered, follow the onscreen information to resolve the problem.

4. Run the Windows Memory Diagnostic Tool. For more information see Windows Help and Support.
5. Restart the computer and press F2 to enter the BIOS Utility. Check the BIOS settings are correct and that CD/DVD drive is set as the first boot device on the Boot menu.
6. Ensure all cables and jumpers on the HDD and ODD are set correctly.
7. Remove any recently added hardware and associated software.
8. Run the Windows Disk Defragmenter. For more information see Windows Help and Support.
9. Run Windows Check Disk by entering **chkdsk /r** from a command prompt. For more information see Windows Help and Support.
10. Restore system and file settings from a known good date using **System Restore**.

If the issue is not fixed, repeat the preceding steps and select an earlier time and date.
11. Replace the HDD. See "Main Unit Disassembly Process" on page 57.

ODD Failure

If the **ODD** fails, perform the following actions one at a time to correct the problem. Do not replace a non-defective FRUs:

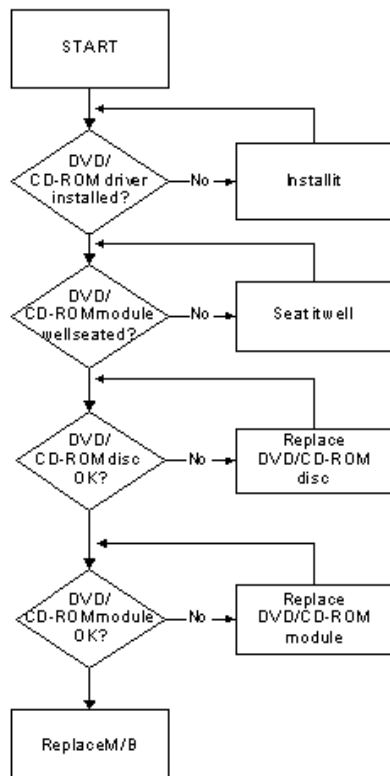

ODD Not Operating Correctly

If the **ODD** exhibits any of the following symptoms it may be faulty:

- Audio CDs do not play when loaded
- DVDs do not play when loaded
- Blank discs do not burn correctly
- DVD or CD play breaks up or jumps
- Optical drive not found or not active:
 - Not shown in My Computer or the BIOS setup
 - LED does not flash when the computer starts up
 - The tray does not eject
- Access failure screen displays
- The ODD is noisy

Perform the following general solutions one at a time to correct the problem.

1. Reboot the computer and retry the operation.
2. Try an alternate disc.
3. Navigate to **Start** → **Computer**. Check that the ODD device is displayed in the **Devices with Removable Storage** panel.
4. Navigate to **Start** → **Control Panel** → **System and Maintenance** → **System** → **Device Manager**.

-
- a. Double-click **IDE ATA/ATAPI controllers**. If a device displays a down arrow, right-click on the device and click **Enable**.
 - b. Double-click **DVD/CD-ROM drives**. If the device displays a down arrow, right-click on the device and click **Enable**.
 - c. Check that there are no yellow exclamation marks against the items in **IDE ATA/ATAPI controllers**. If a device has an exclamation mark, right-click on the device and uninstall and reinstall the driver.
 - d. Check that there are no yellow exclamation marks against the items in **DVD/CD-ROM drives**. If a device has an exclamation mark, right-click on the device and uninstall and reinstall the driver.
 - e. If the exclamation marker is not removed from the item in the lists, try removing any recently installed software and retrying the operation.

Discs Do Not Play

If discs do not play when inserted in the drive, perform the following actions one at a time to correct the problem.

1. Check that the disc is correctly seated in the drive tray and that the label on the disc is visible.
2. Check that the media is clean and scratch free.
3. Try an alternate disc in the drive.
4. Ensure that **AutoPlay** is enabled:
 - a. Navigate to **Start**→ **Control Panel**→ **Hardware and Sound**→ **AutoPlay**.
 - b. Select **Use AutoPlay for all media and devices**.
 - c. In the Audio CD and DVD Movie fields, select the desired player from the drop down menu.
5. Check that the Regional Code is correct for the selected media:

IMPORTANT:Region can only be changed a limited number of times. After Changes remaining reaches zero, the region cannot be changed even Windows is reinstalled or the drive is moved to another computer.

- a. Navigate to **Start**→ **Control Panel**→ **System and Maintenance**→ **System**→ **Device Manager**.
- b. Double-click **DVD/CD-ROM drives**.
- c. Right-click **DVD drive** and click **Properties**, then click the **DVD Region** tab.
- d. Select the region suitable for the media inserted in the drive.

Discs Do Not Burn Properly

If discs can not be burned, perform the following actions one at a time to correct the problem.

1. Ensure that the default drive is record enabled:
 - a. Navigate to **Start**→ **Computer** and right-click the writable ODD icon. Click **Properties**.
 - b. Select the **Recording** tab. In the **Desktop disc recording** panel, select the writable ODD from the drop down list.
 - c. Click **OK**.
2. Ensure that the software used for burning discs is the factory default. If using different software, refer to the software's user manual.

Playback is Choppy

If playback is choppy or jumps, perform the following actions one at a time to correct the problem.

1. Check that system resources are not running low:
 - a. Try closing some applications.
 - b. Reboot and try the operation again.
2. Check that the ODD controller transfer mode is set to DMA:
 - a. Navigate to **Start**→ **Control Panel**→ **System and Maintenance**→ **System**→ **Device Manager**.

-
- b. Double-click **IDE ATA/ATAPI controllers**, then right-click ATA Device 0.
 - c. Click **Properties** and select the **Advanced Settings** tab. Ensure that the **Enable DMA** box is checked and click **OK**.
 - d. Repeat for the other ATA Devices shown if applicable.

Drive Not Detected

If Windows cannot detect the drive, perform the following actions one at a time to correct the problem.

1. Restart the computer and press F2 to enter the BIOS Utility.
2. Check that the drive is detected in the **ATAPI Model Name** field on the Information page.
NOTE: Check that the entry is identical to one of the ODDs specified in “Hardware Specifications and Configurations” on page 16.
3. Turn off the power and remove the cover to inspect the connections to the ODD. See “Main Unit Disassembly Process” on page 57.
 - a. Check for broken connectors on the drive, motherboard, and cables.
 - b. Check for bent or broken pins on the drive, motherboard, and cable connections.
 - c. Try an alternate cable, if available. If the drive works with the new cable, the original cable should be replaced.
4. Reseat the drive ensuring and all cables are connected correctly.
5. Replace the ODD. See “Disassembly Process” on page 43.

Drive Read Failure

If discs cannot be read when inserted in the drive, perform the following actions one at a time to correct the problem.


1. Remove and clean the failed disc.
2. Retry reading the CD or DVD.
 - d. Test the drive using other discs.
 - e. Play a DVD movie
 - f. Listen to a music CD

If the ODD works properly with alternate discs, the original disc is probably defective and should be replaced.

3. Turn off the power and remove the cover to inspect the connections to the ODD. See “Disassembly Process” on page 43.
 - a. Check for broken connectors on the drive, motherboard, and cables.
 - b. Check for bent or broken pins on the drive, motherboard, and cable connections.
 - c. Try an alternate cable, if available. If the drive works with the new cable, the original cable should be replaced.
4. Replace the ODD. See “Disassembly Process” on page 43.


Wireless Function Failure

If the **WLAN** fails, perform the following actions one at a time to correct the problem. Do not replace a non-defective FRUs:

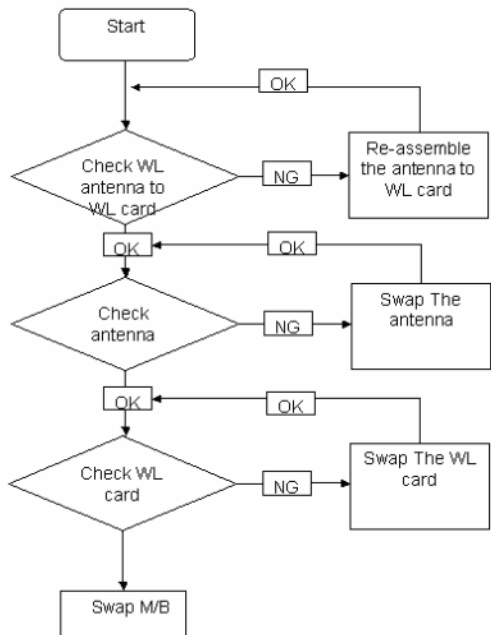

Thermal Unit Failure

If the **Thermal Unit** fails, perform the following actions one at a time to correct the problem. Do not replace a non-defective FRUs:

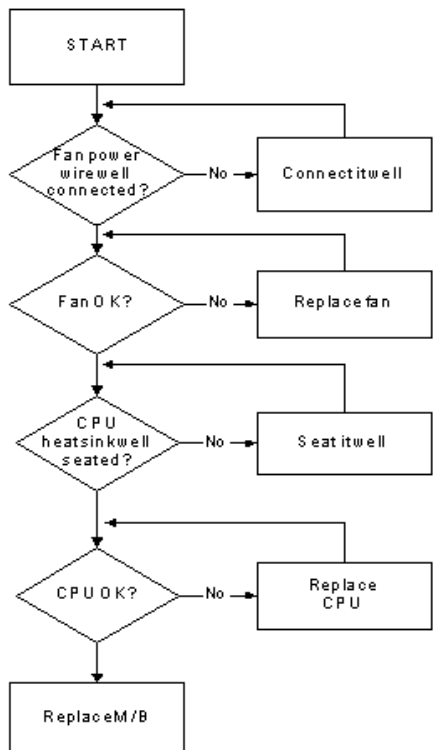

External Mouse Failure

If an external **Mouse** fails, perform the following actions one at a time to correct the problem.

1. Try an alternative mouse.
2. If the mouse uses a wireless connection, insert new batteries and confirm there is a good connection. See the mouse user manual.
3. If the mouse uses a USB connection, try an alternate USB port.
4. Try an alternative program to verify mouse operation. Reinstall the program experiencing mouse failure.
5. Restart the computer.
6. Remove any recently added hardware and associated software.
7. Remove any recently added software and reboot.
8. Restore system and file settings from a known good date using **System Restore**.

If the issue is not fixed, repeat the preceding steps and select an earlier time and date.

9. Run the Event Viewer to check the events log for errors. For more information see Windows Help and Support.
10. Roll back the mouse driver to the previous version if updated recently.
11. Remove and reinstall the mouse driver.
12. Check the Device Manager to determine that:
 - The device is properly installed. There are no red Xs or yellow exclamation marks.
 - There are no device conflicts.
 - No hardware is listed under Other Devices.
13. If the Issue is still not resolved, see "Online Support Information" on page 247.

Other Failures

If the CRT Switch, Dock, LAN Port, external MIC or Speakers, PCI Express Card, 5-in-1 Card Reader or Volume Wheel fail, perform the following general steps to correct the problem. Do not replace a non-defective FRUs:

1. Check Drive whether is OK.
2. Check Test Fixture is ok.
3. Swap M/B to Try.

Intermittent Problems

Intermittent system hang problems can be caused by a variety of reasons that have nothing to do with a hardware defect, such as: cosmic radiation, electrostatic discharge, or software errors. FRU replacement should be considered only when a recurring problem exists.

When analyzing an intermittent problem, do the following:

1. Run the advanced diagnostic test for the system board in loop mode at least 10 times.
2. If no error is detected, do not replace any FRU.
3. If any error is detected, replace the FRU. Rerun the test to verify that there are no more errors.

Undetermined Problems

The diagnostic problems does not identify which adapter or device failed, which installed devices are incorrect, whether a short circuit is suspected, or whether the system is inoperative.

Follow these procedures to isolate the failing FRU (do not isolate non-defective FRU).

NOTE: Verify that all attached devices are supported by the computer.

NOTE: Verify that the power supply being used at the time of the failure is operating correctly. (See “Power On Issue” on page 152.):

1. Power-off the computer.
2. Visually check them for damage. If any problems are found, replace the FRU.
3. Remove or disconnect all of the following devices:
 - Non-Acer devices
 - Printer, mouse, and other external devices
 - Battery pack
 - Hard disk drive
 - DIMM
 - CD-ROM/Diskette drive Module
 - PC Cards
4. Power-on the computer.
5. Determine if the problem has changed.
6. If the problem does not recur, reconnect the removed devices one at a time until you find the failing FRU.
7. If the problem remains, replace the following FRU one at a time. Do not replace a non-defective FRU:
 - System board
 - LCD assembly

Post Codes

These tables describe the POST codes and descriptions during the POST.

Post Code Range

Phase	POST Code Range
SEC	0x01 - 0x0F
PEI	0x70 - 0x9F
DXE	0x40 - 0x6F
BDS	0x10 - 0x3F
SMM	0xA0 - 0xBF
S3	0xC0 - 0xCF
ASL	0x51 – 0x55
	0xE1 – 0xE4
PostBDS	0xF9 – 0xFE
InsydeH2ODDT™ Reserve	0xD0 – 0xD7
OEM Reserve	0xE8 – 0xEB
Reserved	0xD8 – 0xE0
	0xE5 – 0xE7
	0xEC – 0xF8

SEC Phase POST Code Table

Functionality Name (Include\ PostCode.h)	Phase	Post Code	Description
SEC_SYSTEM_POWER_ON	SEC	1	CPU power on and switch to Protected mode
SEC_BEFORE_MICROCODE_PATCH	SEC	2	Patching CPU microcode
SEC_AFTER_MICROCODE_PATCH	SEC	3	Setup Cache as RAM
SEC_ACCESS_CSR	SEC	4	PCIE MMIO Base Address initial
SEC_GENERIC_MSRRINIT	SEC	5	CPU Generic MSR initialization
SEC_CPU_SPEEDCFG	SEC	6	Setup CPU speed
SEC_SETUP_CAR_OK	SEC	7	Cache as RAM test
SEC_FORCE_MAX_RATIO	SEC	8	Tune CPU frequency ratio to maximum level
SEC_GO_TO_SECSTARTUP	SEC	9	Setup BIOS ROM cache
SEC_GO_TO_PEICORE	SEC	0A	Enter Boot Firmware Volume

PEI Phase POST Code Table:

Functionality Name (Include\ PostCode.h)	Phase	Post Code	Description
PEI_SIO_INIT	PEI	70	Super I/O Initialization
PEI_CPU_REG_INIT	PEI	71	CPU Early Initialization
PEI_PCIE_MMIO_INIT	PEI	74	PCIE MMIO BAR Initialization
PEI_NB_REG_INIT	PEI	75	North Bridge Early Initialization
PEI_SB_REG_INIT	PEI	76	South Bridge Early Initialization
PEI_TPM_INIT	PEI	78	TPM Initialization
PEI_SMBUS_INIT	PEI	79	SMBUS Early Initialization

Functionality Name (Include\ PostCode.h)	Phase	Post Code	Description
PEI_PROGRAM_CLOCK_GEN	PEI	7A	Clock Generator Initialization
PEI_IGD_EARLY_INITIAL	PEI	7B	Internal Graphic device early Initialization
PEI_HECI_INIT	PEI	7C	HECI Initialization
PEI_WATCHDOG_INIT	PEI	7D	Watchdog timer Initialization
PEI_MEMORY_INIT	PEI	7E	Memory Initial for Normal boot.
PEI_MEMORY_INIT_FOR_CRISIS	PEI	7F	Memory Initial for Crisis Recovery
PEI_MEMORY_INSTALL	PEI	80	Simple Memory test
PEI_TXTPEI	PEI	81	TXT function early Initialization
PEI_SWITCH_STACK	PEI	82	Start to use Memory
PEI_MEMORY_CALLBACK	PEI	83	Set cache for physical memory
PEI_ENTER_RECOVERY_MODE	PEI	84	Recovery device Initialization
PEI_RECOVERY_MEDIA_FOUND	PEI	85	Found Recovery image
PEI_RECOVERY_MEDIA_NOT_FOUND	PEI	86	Recovery image not found
PEI_RECOVERY_LOAD_FILE_DONE	PEI	87	Load Recovery Image completed
PEI_RECOVERY_START_FLASH	PEI	88	Start Flash BIOS with Recovery image
PEI_ENTER_DXEIPL	PEI	89	Loading BIOS image to RAM
PEI_FINDING_DXE_CORE	PEI	8A	Loading DXE core
PEI_GO_TO_DXE_CORE	PEI	8B	Enter DXE core

DXE Phase POST Code Table:

Functionality Name (Include\ PostCode.h)	Phase	PostCode	Description
DXE_TCGDXE	DXE	40	TPM initial in DXE
DXE_SB_SPI_INIT	DXE	41	South bridge SPI initialization
DXE_CF9_RESET	DXE	42	Setup Reset service
DXE_SB_SERIAL_GPIO_INIT	DXE	43	South bridge Serial GPIO initialization
DXE_SMMACCESS	DXE	44	Setup SMM ACCE SS service
DXE_SIO_INIT	DXE	46	Super I/O DXE initialization
DXE_LEGACY_REGION	DXE	47	Setup Legacy Region service
DXE_IDENTIFY_FLASH_DEVICE	DXE	49	Identify Flash device
DXE_FTW_INIT	DXE	4A	Fault Tolerant Write verification
DXE_VARIABLE_INIT	DXE	4B	Variable Service initialization
DXE_VARIABLE_INIT_FAIL	DXE	4C	Fail to initial Variable Service
DXE_MTC_INIT	DXE	4D	MTC Initial
DXE_CPU_INIT	DXE	4E	CPU Middle Initialization
DXE_MP_CPU_INIT	DXE	4F	Multi-processor MiddleInitialization
DXE_SMBUS_INIT	DXE	50	SMBUS Driver Initialization
DXE_SMART_TIMER_INIT	DXE	51	8259 Initialization
DXE_PCRTC_INIT	DXE	52	RTC Initialization
DXE_SATA_INIT	DXE	53	SATA Controller earlyInitialization

Functionality Name (Include\ PostCode.h)	Phase	PostCode	Description
DXE_SMM_CONTROLLER_INIT	DXE	54	Setup SMM Control service
DXE_LEGACY_INTERRUPT	DXE	55	Setup Legacy Interrupt service
DXE_RELOCATE_SMBASE	DXE	56	Relocate SMM BASE
DXE_FIRST_SMI	DXE	57	SMI test
DXE_VTD_INIT	DXE	58	VTD Initial
DXE_BEFORE_CSM16_INIT	DXE	59	Legacy BIOS Initialization
DXE_AFTER_CSM16_INIT	DXE	5A	Legacy interrupt function Initialization
DXE_LOAD_ACPI_TABLE	DXE	5B	ACPI Table Initialization
DXE_SB_DISPATCH	DXE	5C	Setup SB SMM Dispatcher service
DXE_SB_IOTRAP_INIT	DXE	5D	Setup SB IOTRAP Service
DXE_SUBCLASS_DRIVER	DXE	5E	Build AMT Table
DXE_PPM_INIT	DXE	5F	PPM Initialization
DXE_HECIDRV_INIT	DXE	60	HECIDRV Initialization

BDS Phase POST Code Table:

Functionality Name (Include\ PostCode.h)	Phase	Post Code	Description
BDS_ENTER_BDS	BDS	10	Enter BDS entry
BDS_INSTALL_HOTKEY	BDS	11	Install Hotkey service
BDS_ASF_INIT	BDS	12	ASF Initialization
BDS_PCI_ENUMERATION_START	BDS	13	PCI enumeration
BDS_BEFORE_PCIO_INSTALL	BDS	14	PCI resource assign complete
BDS_PCI_ENUMERATION_END	BDS	15	PCI enumeration complete
BDS_CONNECT_CONSOLE_IN	BDS	16	Keyboard Controller, Keyboard and Mouse initialization
BDS_CONNECT_CONSOLE_OUT	BDS	17	Video device initialization
BDS_CONNECT_STD_ERR	BDS	18	Error report device initialization
BDS_CONNECT_USB_HC	BDS	19	USB host controller initialization
BDS_CONNECT_USB_BUS	BDS	1A	USB BUS driver initialization
BDS_CONNECT_USB_DEVICE	BDS	1B	USB device driver initialization
BDS_NO_CONSOLE_ACTION	BDS	1C	Console device initial fail
BDS_DISPLAY_LOGO_SYSTEM_INFO	BDS	1D	Display logo or system information
BDS_START_IDE_CONTROLLER	BDS	1E	IDE controller initialization
BDS_START_SATA_CONTROLLER	BDS	1F	SATA controller initialization
BDS_START_ISA_ACPI_CONTROLLER	BDS	20	SIO controller initialization
BDS_START_ISA_BUS	BDS	21	ISA BUS driver initialization
BDS_START_ISA_FDD	BDS	22	Floppy device initialization
BDS_START_ISA_SEIRAL	BDS	23	Serial device initialization
BDS_START_IDE_BUS	BDS	24	IDE device initialization
BDS_START_AHCI_BUS	BDS	25	AHCI device initialization
BDS_CONNECT_LEGACY_ROM	BDS	26	Dispatch option ROMs
BDS_ENUMERATE_ALL_BOOT_OPTION	BDS	27	Get boot device information

Functionality Name (Include\ PostCode.h)	Phase	Post Code	Description
BDS_END_OF_BOOT_SELECTION	BDS	28	End of boot selection
BDS_ENTER_SETUP	BDS	29	Enter Setup Menu
BDS_ENTER_BOOT_MANAGER	BDS	2A	Enter Boot manager
BDS_BOOT_DEVICE_SELECT	BDS	2B	Try to boot system to OS
BDS_EFI64_SHADOW_ALL_LEGACY_ROM	BDS	2C	Shadow Misc Option ROM
BDS_ACPI_S3SAVE	BDS	2D	Save S3 resume required data in RAM
BDS_READY_TO_BOOT_EVENT	BDS	2E	Last Chipset initial before boot to OS
BDS_GO_LEGACY_BOOT	BDS	2F	Start to boot Legacy OS
BDS_GO_UEFI_BOOT	BDS	30	Start to boot UEFI OS
BDS_LEGACY16_PREPARE_TO_BOOT	BDS	31	Prepare to Boot to Legacy OS
BDS_EXIT_BOOT_SERVICES	BDS	32	Send END of POST Message to ME via HECI
BDS_LEGACY_BOOT_EVENT	BDS	33	Last Chipset initial before boot to Legacy OS.
BDS_ENTER_LEGACY_16_BOOT	BDS	34	Ready to Boot Legacy OS.
BDS_RECOVERY_START_FLASH	BDS	35	Fast Recovery Start Flash.

PostBDS POST Code Table

Functionality Name (Include\ PostCode.h)	Phase	Post Code	Description
POST_BDS_NO_BOOT_DEVICE	POST_BDS	F9	No Boot Device
POST_BDS_START_IMAGE	POST_BDS	FB	UEFI Boot Start Image
POST_BDS_ENTER_INT19	POST_BDS	FD	Legacy 16 boot entry
POST_BDS_JUMP_BOOT_SECTOR	POST_BDS	FE	Try to Boot with INT 19

S3 Functions POST Code Table

Functionality Name (Include\ PostCode.h)	Phase	Post Code	Description
POST_BDS_NO_BOOT_DEVICE	POST_BDS	F9	No Boot Device
POST_BDS_START_IMAGE	POST_BDS	FB	UEFI Boot Start Image
POST_BDS_ENTER_INT19	POST_BDS	FD	Legacy 16 boot entry
POST_BDS_JUMP_BOOT_SECTOR	POST_BDS	FE	Try to Boot with INT 19

ACPI Functions POST Code Table

Functionality Name (Include\ PostCode.h)	Phase	Post Code	Description
ASL_ENTER_S1	ASL	51	Prepare to enter S1
ASL_ENTER_S3	ASL	53	Prepare to enter S3
ASL_ENTER_S4	ASL	54	Prepare to enter S4
ASL_ENTER_S5	ASL	55	Prepare to enter S5
ASL_WAKEUP_S1	ASL	E1	System wakeup from S1
ASL_WAKEUP_S3	ASL	E3	System wakeup from S3
ASL_WAKEUP_S4	ASL	E4	System wakeup from S4

SMM Functions POST Code Table


Functionality Name (Include\ PostCode.h)	Phase	Post Code	Description
SMM_IDENTIFY_FLASH_DEVICE	SMM	0xA0	Identify Flash device in SMM
SMM_SMM_PLATFORM_INIT	SMM	0xA2	SMM service initial
SMM_ACPI_ENABLE_START	SMM	0xA6	OS call ACPI enable function
SMM_ACPI_ENABLE_END	SMM	0xA7	ACPI enable function complete
SMM_S1_SLEEP_CALLBACK	SMM	0xA1	Enter S1
SMM_S3_SLEEP_CALLBACK	SMM	0xA3	Enter S3
SMM_S4_SLEEP_CALLBACK	SMM	0xA4	Enter S4
SMM_S5_SLEEP_CALLBACK	SMM	0xA5	Enter S5
SMM_ACPI_DISABLE_START	SMM	0xA8	OS call ACPI disable function
SMM_ACPI_DISABLE_END	SMM	0xA9	ACPI disable function complete

InsydeH2ODDT Debugger POST Code Table

Functionality Name (Include\ PostCode.h)	PostCode	Description
Used by Insyde debugger	0x0D	Waiting for device connect
Used by Insyde debugger	0xD0	Waiting for device connect
Used by Insyde debugger	0xD1	InsydeH2ODDT Ready
Used by Insyde debugger	0xD2	EHCI not found
Used by Insyde debugger	0xD3	Debug port connect low speed device
Used by Insyde debugger	0xD4	DDT Cable become low speed device
Used by Insyde debugger	0xD5	DDT Cable Transmission Error (Get descriptor fail)
Used by Insyde debugger	0xD6	DDT Cable Transmission Error (Set Debug mode fail)
Used by Insyde debugger	0xD7	DDT Cable Transmission Error (Set address fail)


Jumper and Connector Locations

Top View

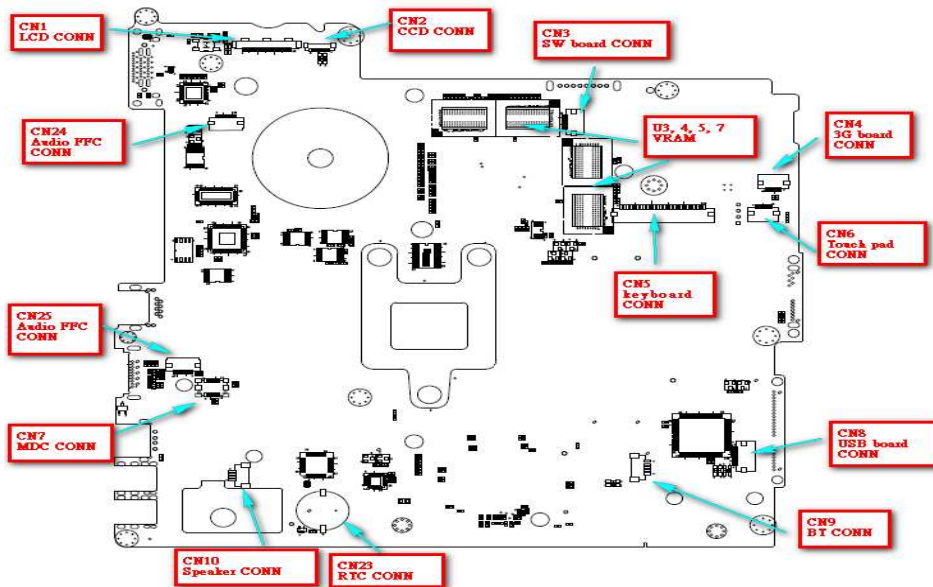

Item	Description	Item	Description
CN1	LCD conn.	CN2	CCD conn.
CN3	SW board conn.	U3, 4, 5, 7	VRAM
CN4	3G board conn.	CN6	Touch pad conn.
CN5	Keyboard conn.	CN8	USB board conn.
CN9	BT conn.	CN23	RTS conn.
CN10	Speaker conn.	CN7	MDC conn.
CN25	Audio FFC conn.	CN24	Audio FFC conn.

Bottom View

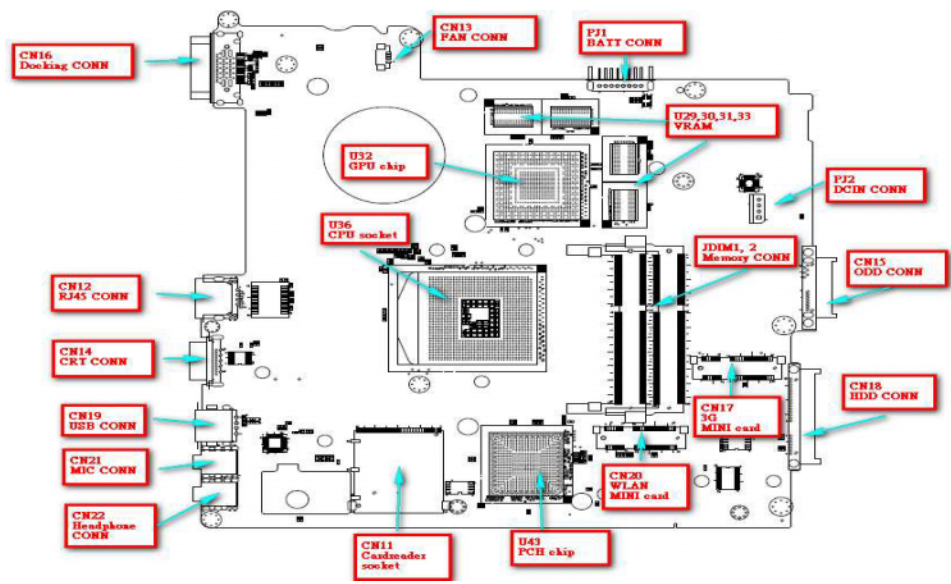

Item	Description	Item	Description
CN16	Docking conn.	CN12	RJ45 conn.
CN14	CRT conn.	CN19	USB conn.
CN21	Mic conn.	CN22	Headphone conn.
CN11	Cardreader socket	U43	PCH chip
CN20	WLAN mini card	CN17	3G mini card
CN18	HDD conn.	JDIM1, 2	Memory conn.
CN15	ODD conn.	PJ2	DCIN conn.
U29, 30, 31, 33	VRAM	U36	CPU socket
U32	GPU chip	CN13	FAN conn.
PJ1	BATT conn.		

Clearing Password Check and BIOS Recovery

This section provide you the standard operating procedures of clearing password and BIOS recovery for Acer ZQ3. Acer provides one Hardware Open Gap on the main board for clearing password check, and one Hotkey for enabling BIOS Recovery.

Clearing Password Check

Hardware Open Gap Description is as follows:

Item	Description	Location

Steps for Clearing BIOS Password Check

If users set BIOS Password (Supervisor Password and/or User Password) for a security reason, BIOS will ask the password during systems POST or when systems enter to BIOS Setup menu. However, once it is necessary to bypass the password check, users need to short the HW Gap to clear the password by the following steps:

1. Power Off the system, and remove HDD, AC and Battery from the machine.
2. Open the Memory Cover of the machine and locate the J1 and J2 jumpers.
3. Use an electric conductivity tool to short the two points of the HW Gap.
4. Plug in AC, keep the short condition on the HW Gap, and press Power Button to power on the system till BIOS POST finish. Then remove the tool from the HW Gap.
5. Restart system. Press **F2** key to enter BIOS Setup menu.
6. If there is no Password request, BIOS Password is cleared. Otherwise, please follow the steps and try again.

NOTE: These steps are only for clearing BIOS Password (Supervisor Password and User Password).

BIOS Recovery by Crisis Disk

BIOS Recovery Boot Block:

BIOS Recovery Boot Block is a special block of BIOS. It is used to boot up the system with minimum BIOS initialization. Users can enable this feature to restore the BIOS firmware to a successful one once the previous BIOS flashing process failed.

BIOS Recovery Hotkey:

The system provides a function hotkey: **Fn+Esc**, for enable BIOS Recovery process when system is powered on during BIOS POST. To use this function, it is strongly recommended to have the AC adapter and Battery present. If this function is enabled, the system will force the BIOS to enter a special BIOS block, called Boot Block.

Steps for BIOS Recovery from USB Storage:

Before doing this, prepare the Crisis USB key. The Crisis USB key could be made by executing the Crisis Disk program in another system with Windows XP OS.

Follow the steps below:

1. Format the USB storage disk using the Fast Format option.
2. Save ROM file (file name: JAL90x64.fd) to the root directory of USB storage. Make sure that there is no other BIOS file saved in the same directory.
3. Plug USB storage into USB port.
4. Press **Fn + ESC** button then plug in AC power.
The Power button flashes once.
5. Press **Power** button to initiate system CRISIS mode.
When CRISIS is complete, the system auto restarts with a workable BIOS.
6. Update the latest version BIOS for this machine by regular BIOS flashing process.

FRU (Field Replaceable Unit) List


This chapter gives you the FRU (Field Replaceable Unit) listing in global configurations of ZQ3. Refer to this chapter whenever ordering for parts to repair or for RMA (Return Merchandise Authorization).

Please note that WHEN ORDERING FRU PARTS, you should check the most up-to-date information available on your regional web or channel. For whatever reasons a part number change is made, it will not be noted on the printed Service Guide. For ACER AUTHORIZED SERVICE PROVIDERS, your Acer office may have a DIFFERENT part number code from those given in the FRU list of this printed Service Guide. You MUST use the local FRU list provided by your regional Acer office to order FRU parts for repair and service of customer machines.

NOTE: To scrap or to return the defective parts, you should follow the local government ordinance or regulations on how to dispose it properly, or follow the rules set by your regional Acer office on how to return it.


ZQ3 Exploded Diagrams

LCD Assembly

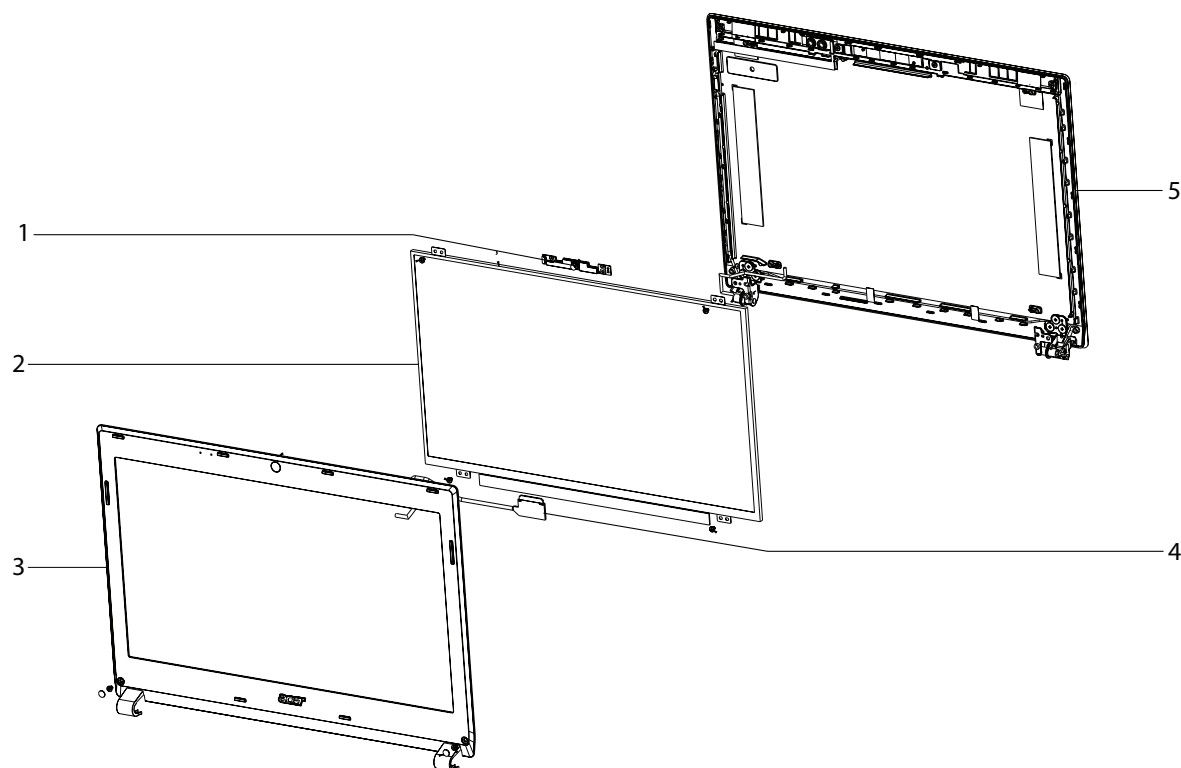



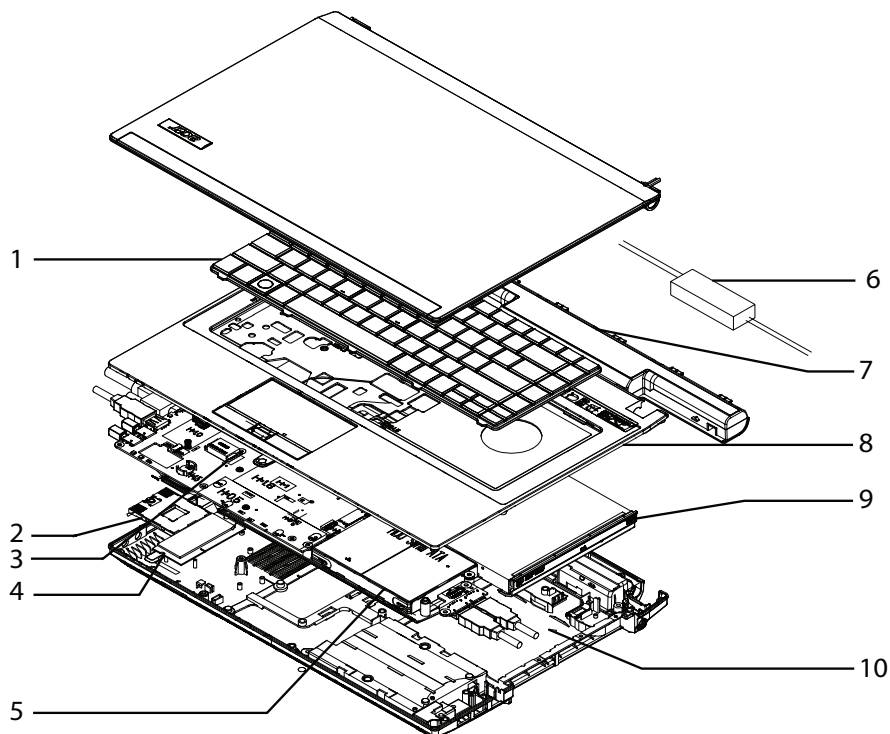

No.	Description	Acer P/N
1	Chicony 1.3M CH9665SN (CNF9157)	AM.21400.067
2	LCD MODULE 14" ASSY NON-GLARE LED W/ANTENNA*2 FOR NON-3G	6M.TWC07.003
3	LCD BEZEL	60.TWC07.006
4	LCD CABLE	50.TWC07.003
5	LCD COVER (W/MIC, MIC CABLE, ANT*2 FOR NON-3G)	60.TWC07.005




Chassis Assembly










No.	Description	Acer P/N	No.	Description	Acer P/N
1	Keyboard ACER TM4T_A10B TM4T 88KS Black US International Texture	KB.I140A.257	6	Adapter DELTA 65W 19V 1.7x5.5x11 Yellow ADP-65JH DB A, LV5 LED LF	AP.06501.026
2	CPU Intel Core i3 330M PGA 2.13G 35W Arrandale, TJ90, VT, 3M L3	KC.33001.DMP	7	Battery SANYO AS10D Li-Ion 3S2P SANYO 6 cell 4400mAh Main COMMON ID:AS10D31	BT.00603.111
3	Foxconn Bluetooth FOX BRM 2046 BT2.1	BH.21100.004	8	UPPER CASE (W/ TP,TP FFC*2, FUNCTION BD FFC*1) FOR FP	60.TWC07.001
4	Memory SAMSUNG SO-DIMM DDRIII 1066 1GB M471B2873EH1- CF8 LF 64*16 0.055um	KN.1GB0B.028	9	ODD SUPER MULTI 12.7mm MODULE ASSY 8X	6M.TWC07.001
5	HDD SEAGATE 2.5" 5400rpm 160GB ST9160314AS Wyatt SATA LF F/ W:0001SDM1	KH.16001.042	10	LOWER CASE (W/ SPK SET, USB FFC) FOR 90W	60.TWC07.003

ZQ3 FRU List

CATEGORY	PARTNAME	P/N
ADAPTER		
	Adapter DELTA 65W 19V 1.7x5.5x11 Yellow ADP-65JH DB A, LV5 LED LF	AP.06501.026
	Adapter LITE-ON 65W 19V 1.7x5.5x11 Yellow PA-1650-22AC LV5 LED LF	AP.06503.024
	Adapter HIPRO 65W 19V 1.7x5.5x11 Yellow HP-A0652R3B 1LF, LV5 LED LF	AP.0650A.012
	Adapter DELTA 65W 19V 1.7x5.5x11 Yellow ADP-65VH BA, LV5, Low profile LED LF	AP.06501.033
	Adapter LITE-ON 65W 19V 1.7x5.5x11 Yellow PA-1650-69AW, LV5, Low profile LED LF	AP.06503.029
	Adapter Chicony Power 65W 19V 1.7x5.5x11 Yellow CPA09-A065N1, LV5, low profile LED LF	AP.0650A.017
	Adapter DELTA 90W 19V 1.7x5.5x11 Blue ADP-90CD DB A, LV5 LED LF	AP.09001.027
	Adapter LITE-ON 90W 19V 1.7x5.5x11 Blue PA-1900-34AR, LV5 LED LF	AP.09003.021
	Adapter HIPRO 90W 19V 1.7x5.5x11 Blue HP-A0904A3 B1LF, LV5 LED LF	AP.0900A.005
BATTERY		
	Battery SANYO AS10D Li-Ion 3S2P SANYO 6 cell 4400mAh Main COMMON ID:AS10D31	BT.00603.111
	Battery PANASONIC AS10D Li-Ion 3S2P PANASONIC 6 cell 4400mAh Main COMMON ID:AS10D51	BT.00605.062
	Battery SANYO AS10D Li-Ion 3S2P SANYO 6 cell 6000mAh Main COMMON ID:AS10D3E	BT.00603.117
	Battery PANASONIC AS10D Li-Ion 3S2P PANASONIC 6 cell 6000mAh Main COMMON ID:AS10D5E	BT.00605.065
	Battery SIMPLO AS10D Li-Ion 3S2P SAMSUNG 6 cell 6000mAh Main COMMON ID:AS10D7E	BT.00607.130
	Battery SANYO AS10G Li-Ion 3S3P SANYO 9 cell 9000mAh Main COMMON ID:AS10G3E	BT.00903.013
BOARD		
	Lite-On Conexant -Unizion 1.5_3.3v AUS RD02-D330 B85247600G	FX.22500.021
	Ericsson F3307-900MHz	LC.21300.039
	Foxconn Bluetooth FOX BRM 2046 BT2.1	BH.21100.004
	BLUETOOTH MODULE MT77H056.00	BH.21100.005
	Foxconn Bluetooth BRM 2070 (T77H114.01) BT 3.0	BH.21100.010

CATEGORY	PARTNAME	P/N
	Foxconn Wireless LAN Atheros HB93 1x2 BGN (HM)	NI.23600.062
	Liteon Wireless LAN Atheros HB93 1x2 BGN (HM) WN6602AH	NI.23600.051
	Foxconn Wireless LAN Broadcomm 43225 2x2 BGN (HM) T77H103.00	NI.23600.066
	Foxconn Wireless LAN Atheros HB97 2x2 BGN (HM)	NI.23600.072
	Liteon Wireless LAN Atheros HB97 2x2 BGN (HM) WN6603AH	NI.23600.073
	Foxconn Wireless LAN Broadcom 4312H BG (HM)	NI.23600.053
	Foxconn Wireless LAN Atheros HB95BG (HM) T77H121.10	NI.23600.077
	3G BOARD	55.TWC07.001
	FUNCTION BOARD	55.TWC07.002
	USB BOARD	55.TWC07.003
	FINGER PRINT BOARD	55.TWC07.004
	TOUCH PAD BOARD FOR FP	55.TWC07.005
	TOUCH PAD BOARD FOR NON-FP	55.TWC07.006
CABLE		
	PWR CORD V943B30001218008 DANISH 3P	27.A03V7.006
	PWR CORD(ISR)1.8M 3PBLK FZ0I0008-038	27.TATV7.005
	PWR CORD V50CB3T3012180QD TW-110V,3P	27.A99V7.002
	POWER CORD(SWI)1.8M 3PBLACK FZ010008-011	27.A99V7.004
	POWER CORD(IT) 1.8M 3PBLACK FZ010008-008	27.A99V7.005
	POWER CORD(S.A) 1.8M 3BLACK FZ010008-006	27.T48V7.001
	POWER CORD US 3PIN ROHS	27.TAXV7.001
	POWER CORD(EU) 1.8M 3PBLACK FM010008-010	27.TATV7.001
	POWER CORD BRAZIL IMETRO 3 PIN	27.S0607.001
	POWER CORD UK 3PIN	27.A03V7.004
	POWER CORD ITALIAN 3PIN	27.A99V7.005
	POWER CORD PRC 3P Y536B30001218008	27.TATV7.004
	POWER CORD AU W/LABEL (3 PIN)	27.A50V7.003
	BLUETOOTH CABLE	50.TWC07.001
	BLUETOOTH CABLE FOR BT3.0 BRM2070	50.TWC07.002

CATEGORY	PARTNAME	P/N
CASE/COVER/BRACKET ASSEMBLY		
	UPPER CASE (W/TP,TP FFC*2, FUNCTION BD FFC*1) FOR FP	60.TWC07.001
	UPPER CASE (W/TP,TP FFC*2, FUNCTION BD FFC*1) FOR NON- FP	60.TWC07.002
	LOWER CASE (W/ SPK SET, USB FFC) FOR 90W	60.TWC07.003
	LOWER CASE (W/ SPK SET, USB FFC) FOR 65W	60.TWC07.004
	BASE DOOR	42.TWC07.001
	DUMMY CARD	42.TVM07.002
MISCELLANEOUS		
	KB STANDOFF	47.TWG07.001
CPU/PROCESSOR		
	CPU Intel Core i3 330M PGA 2.13G 35W Arrandale, TJ90, VT, 3M L3	KC.33001.DMP
	CPU Intel Core i3 350M PGA 2.26G 35W Arrandale, TJ90, VT, 3M L3	KC.35001.DMP
	CPU Intel Core i5 430M PGA 2.26G ARD, up to SC 2.53G, 3M L3	KC.43001.DMP
	CPU Intel Core i5 520M 2.4G 3M	KC.52001.DMP
	CPU Intel Core i5 540M 2.53G 3M	KC.54001.DMP
	CPU Intel Core i7 620M PGA 2.66G 4M	KC.62001.DMP
	CPU Intel Pentium Dual-Core P6000 1.86G 35W C2 DDR3-1066	KC.60001.DPP
	CPU Intel Core i3 370M PGA 2.4G 35W K-0 TJ90, VT	KC.37K01.DMP
	CPU Intel Core i5 450M PGA 2.4G 35W K-0 up to SC 2.66G	KC.45K01.DMP
DVD RW DRIVE		
	ODD SUPER MULTI 12.7mm MODULE ASSY 8X	6M.TWC07.001
	ODD TOSHIBA Super-Multi DRIVE 12.7mm Tray DL 8X TS-L633C LF W/O bezel SATA (HF + Windows 7)	KU.00801.035
	ODD HLDS Super-Multi DRIVE 12.7mm Tray DL 8X GT30N LF W/O bezel SATA (HF + Windows 7)	KU.0080D.048
	ODD SONY Super-Multi DRIVE 12.7mm Tray DL 8X AD-7585H LF W/O bezel SATA (HF + Windows 7)	KU.0080E.027
	ODD PLDS Super-Multi DRIVE 12.7mm Tray DL 8X DS-8A4SH LF W/O bezel SATA (HF + Windows 7)	KU.0080F.006
	ODD HLDS Super-Multi DRIVE 12.7mm Tray DL 8X GT31N (R5-1) LF W/O bezel SATA with Renesas Solution (HF + Windows 7)	KU.0080D.054







CATEGORY	PARTNAME	P/N
	ODD BEZEL - SUPER-MULTI	42.TWC07.002
	ODD BRACKET	33.PUM07.001
BD COMBO DRIVE		
	ODD BD COMBO 12.7mm MODULE ASSY 4X	6M.TWC07.002
	ODD HLDS BD COMBO 12.7mm Tray DL 4X CT21N LF W/O bezel 1.00 SATA (HF + Windows 7)	KO.0040D.004
	ODD SONY BD COMBO 12.7mm Tray DL 4X BC-5500H LF W/O bezel SATA (HF + Windows 7)	KO.0040E.003
	ODD PLDS BD COMBO 12.7mm Tray DL 4X DS-4E1S LF W/O bezel SATA (Windows 7)	KO.0040F.003
	ODD BEZEL - BLUE RAY	42.TWC07.003
	ODD BRACKET	33.PUM07.001

CATEGORY	PARTNAME	P/N
HDD/HARD DISK DRIVE		
	HDD SEAGATE 2.5" 5400rpm 160GB ST9160314AS Wyatt SATA LF F/W:0001SDM1	KH.16001.042
	HDD TOSHIBA 2.5" 5400rpm 160GB MK1665GSX, Capricorn BS, 320G/P SATA 8MB LF F/W:GJ001J	KH.16004.008
	HDD HGST 2.5" 5400rpm 160GB HTS545016B9A300 Panther B SATA LF F/W:C60F Disk imbalance criteria = 0.014g-cm	KH.16007.026
	HDD WD 2.5" 5400rpm 160GB WD1600BEVT- 22A23T0 , WD, ML320S SATA 8MB LF F/ W:01.01A01	KH.16008.027
	HDD SEAGATE 2.5" 5400rpm 250GB ST9250315AS Wyatt SATA LF F/W:0001SDM1	KH.25001.016
	HDD TOSHIBA 2.5" 5400rpm 250GB MK2565GSX, Capricorn BS, 320G/P SATA 8MB LF F/W:GJ001J	KH.25004.005
	HDD HGST 2.5" 5400rpm 250GB HTS545025B9A300 Panther B SATA LF F/W:C60F Disk imbalance criteria = 0.014g-cm	KH.25007.016
	HDD WD 2.5" 5400rpm 250GB WD2500BEVT- 22A23T0, WD, ML320S SATA 8MB LF F/ W:01.01A01.	KH.25008.025
	HDD SEAGATE 2.5" 7200rpm 250GB ST9250410AS Holiday SATA LF F/W:0002SDM1	KH.25001.017
	HDD HGST 2.5" 7200rpm 250GB HTS723225L9A360 Falcon-C SATA LF F/W:C30F	KH.25007.014
	HDD SEAGATE 2.5" 5400rpm 320GB ST9320325AS Wyatt SATA LF F/W:0001SDM1	KH.32001.017
	HDD TOSHIBA 2.5" 5400rpm 320GB Capricorn BS ,MK3265GSX SATA 8MB LF F/W:GJ001J	KH.32004.004
	HDD HGST 2.5" 5400rpm 320GB HTS545032B9A300 Panther B SATA LF F/W:C60F Disk imbalance criteria = 0.014g-cm	KH.32007.008
	HDD WD 2.5" 5400rpm 320GB WD3200BEVT- 22A23T0,ML320S,WD SATA 8MB LF F/W:01.01A01	KH.32008.019

CATEGORY	PARTNAME	P/N
HDD/HARD DISK DRIVE		
	HDD SEAGATE 2.5" 7200rpm 320GB ST9320423AS Holiday SATA LF F/W:0002SDM1	KH.32001.016
	HDD HGST 2.5" 7200rpm 320GB HTS723232L9A360 Falcon-C SATA 16MB LF F/W:C30F	KH.32007.005
	HDD SEAGATE 2.5" 5400rpm 500GB ST9500325AS Wyatt SATA LF F/W:0001SDM1	KH.50001.011
	HDD TOSHIBA 2.5" 5400rpm 500GB MK5065GSX,Capricorn BS, 320G/P SATA 8MB LF F/W:GJ001J	KH.50004.002
	HDD HGST 2.5" 5400rpm 500GB HTS545050B9A300 Panther B SATA LF F/W:C60F Disk imbalance criteria = 0.014g-cm	KH.50007.010
	HDD WD 2.5" 5400rpm 500GB WD5000BEVT-22A0RT0, ML320M,WD SATA 8MB LF F/W:01.01A01	KH.50008.017
	HDD SEAGATE 2.5" 7200rpm 500GB ST9500420AS Holiday SATA LF F/W:0002SDM1	KH.50001.013
	HDD HGST 2.5" 7200rpm 500GB HTS725050A9A364 SATA 8MB LF F/W: C70E	KH.50007.011
	HDD TOSHIBA 2.5" 5400rpm 640GB MK6465GSX,Capricorn BS,320G/P SATA 8MB LF F/W:GJ002J	KH.64004.001
	HDD WD 2.5" 5400rpm 640GB WD6400BEVT-22A0RT0, ML320 SATA 8MB LF F/W:01.01A01	KH.64008.004
	Flash Disk INTEL SSD NAND 160GB SSDSA2MH160G2C1 MM# 902384 LF	KF.1600N.003
	Flash Disk INTEL SSD NAND 160GB SSDSA2MH160G2AC MM#908113 9.5mm LF+HF	KF.1600N.005
	HDD HOLDER	42.TWG07.002
	HDD BRACKET	33.TWC07.001
KEYBOARD		
	Keyboard ACER TM4T_A10B TM4T 88KS Black US International Texture	KB.I140A.257

CATEGORY	PARTNAME	P/N
LCD		
	LCD MODULE 14" ASSY NON-GLARE LED W/ ANTENNA*2 FOR NON-3G	6M.TWC07.003
	LED LCD AUO 14" WXGA None Glare B140XW03 V1 LF 200nit 8ms 400:1 (power saving)	LK.14005.014
	LED LCD LPL 14" WXGA None Glare LP140WH2-TLM1 LF 200nit 16ms 400:1 (Power saving)	LK.14008.007
	LED LCD SAMSUNG 14" WXGA None Glare LTN140AT12-001 LF 200nit 16ms 500:1 power saving	LK.14006.014
	LED LCD AUO 14" WXGA None Glare B140XW02 V3 LF 200nit 8ms 500:1	LK.14005.009
	LED LCD LPL 14" WXGA None Glare LP140WH2-TLB1 LF 200nit 16ms 500:1	LK.14008.003
	LCD COVER (W/MIC, MIC CABLE, ANT*2 FOR NON-3G)	60.TWC07.005
	LCD BEZEL	60.TWC07.006
	LCD CABLE	50.TWC07.003
	Chicony 1.3M CH9665SN (CNF9157)	AM.21400.067
	Suyin 1.3M SY9665SN	AM.21400.068
	Liteon 1.3M LT9665AL (09P2SF119)	AM.21400.069
	Liteon 1.3M LT6AASP(09P2BF127)	AM.21400.070
LCD		
	LCD MODULE 14" ASSY NON-GLARE LED W/ ANTENNA*4 FOR 3G	6M.TWC07.004
	LED LCD AUO 14" WXGA None Glare B140XW03 V1 LF 200nit 8ms 400:1 (power saving)	LK.14005.014
	LED LCD LPL 14" WXGA None Glare LP140WH2-TLM1 LF 200nit 16ms 400:1 (Power saving)	LK.14008.007
	LED LCD SAMSUNG 14" WXGA None Glare LTN140AT12-001 LF 200nit 16ms 500:1 power saving	LK.14006.014
	LED LCD AUO 14" WXGA None Glare B140XW02 V3 LF 200nit 8ms 500:1	LK.14005.009
	LED LCD LPL 14" WXGA None Glare LP140WH2-TLB1 LF 200nit 16ms 500:1	LK.14008.003

CATEGORY	PARTNAME	P/N
	LCD COVER (W/MIC, MIC CABLE, ANT*4 FOR 3G)	60.TWC07.007
	LCD BEZEL	60.TWC07.006
	LCD CABLE	50.TWC07.003
	Chicony 1.3M CH9665SN (CNF9157)	AM.21400.067
	Suyin 1.3M SY9665SN	AM.21400.068
	Liteon 1.3M LT9665AL (09P2SF119)	AM.21400.069
	Liteon 1.3M LT6AASP(09P2BF127)	AM.21400.070
LCD		
	LCD MODULE 14" ASSY GLARE LED W/ ANTENNA*2 FOR NON-3G	6M.TWC07.005
	LED LCD AUO 14" WXGA Glare B140XW03 V0 LF 200nit 8ms 500:1 (Power saving)	LK.14005.011
	LCD COVER (W/MIC, MIC CABLE, ANT*2 FOR NON-3G)	60.TWC07.005
	LCD BEZEL	60.TWC07.006
	LCD CABLE	50.TWC07.003
	Chicony 1.3M CH9665SN (CNF9157)	AM.21400.067
	Suyin 1.3M SY9665SN	AM.21400.068
	Liteon 1.3M LT9665AL (09P2SF119)	AM.21400.069
	Liteon 1.3M LT6AASP(09P2BF127)	AM.21400.070

CATEGORY	PARTNAME	P/N
LCD		
	LCD MODULE 14" ASSY GLARE LED W/ ANTENNA*4 FOR 3G	6M.TWC07.006
	LED LCD AUO 14" WXGA Glare B140XW03 V0 LF 200nit 8ms 500:1 (Power saving)	LK.14005.011
	LCD COVER (W/MIC, MIC CABLE, ANT*4 FOR 3G)	60.TWC07.007
	LCD BEZEL	60.TWC07.006
	LCD CABLE	50.TWC07.003
	Chicony 1.3M CH9665SN (CNF9157)	AM.21400.067
	Suyin 1.3M SY9665SN	AM.21400.068
	Liteon 1.3M LT9665AL (09P2SF119)	AM.21400.069
	Liteon 1.3M LT6AASP(09P2BF127)	AM.21400.070
MAINBOARD		
	MAIN BOARD HM55 N11P W/CARD READER, W/O CPU RAM	MB.TW506.001
	MAIN BOARD HM55 N11M W/CARD READER, W/O CPU RAM	MB.TW406.001
	MAIN BOARD HM55 UMA W/CARD READER, W/O CPU RAM	MB.TW306.001

CATEGORY	PARTNAME	P/N
MEMORY		
	Memory SAMSUNG SO-DIMM DDRIII 1066 1GB M471B2873EH1-CF8 LF 64*16 0.055um	KN.1GB0B.028
	Memory ELPIDA SO-DIMM DDRIII 1066 2GB EBJ21UE8BDS0-AE-F LF 128*8 0.065um	KN.2GB09.006
	Memory SAMSUNG SO-DIMM DDRIII 1066 4GB M471B5273BH1-CF8 LF 256*8 0.055um	KN.4GB0B.007
	Memory ELPIDA SO-DIMM DDRIII 1333 1GB EBJ10UE8BDS0-DJ-F LF 128*8 0.065um	KN.1GB09.015
	Memory SAMSUNG SO-DIMM DDRIII 1333 1GB M471B2873FHS-CH9 LF 128*8 46nm	KN.1GB0B.035
	Memory NANYA SO-DIMM DDRIII 1333 2GB NT2GC64B8HC0NS-CG LF 128*8 0.065um	KN.2GB03.017
	Memory ELPIDA SO-DIMM DDRIII 1333 2GB EBJ21UE8BDS0-DJ-F LF 128*8 0.065um	KN.2GB09.007
	Memory SAMSUNG SO-DIMM DDRIII 1333 2GB M471B5673FH0-CH9 LF 128*8 46nm	KN.2GB0B.023
	Memory ELPIDA SO-DIMM DDRIII 1333 4GB EBJ41UF8BAS0-DJ-F LF 256*8 0.055um	KN.4GB09.001
	Memory SAMSUNG SO-DIMM DDRIII 1333 4GB M471B5273CH0-CH9 LF 256*8 46nm	KN.4GB0B.010
	Memory HYNIX SO-DIMM DDRIII 1333 1GB HMT112S6TFR8C-H9 LF 128*8 0.055um	KN.1GB0G.026
	Memory KINGSTON SO-DIMM DDRIII 1333 2GB ACR256X64D3S1333C9 LF 128*8 0.065um	KN.2GB07.004
	Memory HYNIX SO-DIMM DDRIII 1333 2GB HMT125S6TFR8C-H9 LF 128*8 0.055um	KN.2GB0G.016
HEATSINK		
	THERMAL MODULE 35W FOR DIS	60.TWC07.008
	THERMAL MODULE 35W FOR UMA	60.TWC07.009
	HEAT SINK	33.TWG07.002
SPEAKER		
	SPEAKER SET (W/ L/R)	23.TWC07.001
MISCELLANEOUS		
	RUBBER - LCD BEZEL TOP	47.TWC07.001
	RUBBER - LCD BEZEL SIDE	47.TWC07.002
	RUBBER FOOT - BASE	47.TWC07.003
	RUBBER - UPPER CASE	47.TWC07.004
	LCD BEZEL SCREW MYLAR	47.TVM07.008
	MYLAR FOR NON SIM CARD	47.TWC07.005
	BLUETOOTH MYLAR	47.TWC07.006

Screw List

CATEGORY	PARTNAME	P/N
SCREW		
	SCREW M2.0*3.0-I(BKAG)(NYLOK) IRON	86.ARE07.002
	SCREW M2.5*3.0-I(BZN)	86.TPK07.003
	SCREW M3*0.5+3.5I	86.N1407.007

Model Definition and Configuration

Acer Aspire 8472

Model	RO	Country	Acer Part No	Description
TM8472-332G16Mnkk	WW	GCTWN	S2.TYV02.001	TM8472-332G16Mnkk W7HP64TWW1 MC UMACFkk_3 1*2G/160/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472-332G16Mnkk	WW	GCTWN	S2.TYW03.001	TM8472-332G16Mnkk W7PR32TWW1 MC UMACKk_3 1*2G/160/6L3.0/5R/na_bgn_1.3C_MA_ES61
TM8472-332G16Mnkk	WW	WW	S2.TYV02.002	TM8472-332G16Mnkk W7HP64TWW1 MC UMACFkk_3 1*2G/160/6L3.0/5R/na_bgn_FP_1.3C_MA_ES62
TM8472-332G16Mnkk	WW	WW	S2.TYW03.002	TM8472-332G16Mnkk W7PR32TWW1 MC UMACKk_3 1*2G/160/6L3.0/5R/na_bgn_1.3C_MA_ES62
TM8472-333G16Mi	WW	GCTWN	S2.TW303.003	TM8472-333G16Mi W7PR32TWW1 MC UMACFkk_3 2G+1G/160/6L3.0/5R/na_bg_FP_1.3C_MA_ES61
TM8472-333G16Mi	WW	GCTWN	S2.TW303.005	TM8472-333G16Mi W7PR32TWW1 MC UMACFkk_3 2G+1G/160/BT/6L3.0/5R/na_bg_FP_1.3C_MA_ES61
TM8472-333G16Mi	WW	WW	S2.TW303.004	TM8472-333G16Mi W7PR32TWW1 MC UMACFkk_3 2G+1G/160/6L3.0/5R/na_bg_FP_1.3C_MA_ES62
TM8472-333G16Mi	WW	WW	S2.TW303.006	TM8472-333G16Mi W7PR32TWW1 MC UMACFkk_3 2G+1G/160/BT/6L3.0/5R/na_bg_FP_1.3C_MA_ES62
TM8472-352G25Mnkk	AAP	Singapore	LX.TW303.268	TM8472-352G25Mnkk W7PR32TRSG1 MC XPP UMACFkk_3 1*2G/250_7.2K/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ZH31
TM8472-352G25Mnkk	AAP	Singapore	LX.TW303.269	TM8472-352G25Mnkk W7PR32TRSG1 MC XPP UMACFkk_3 1*2G/250_7.2K/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472-352G25Mnkk	EMEA	South Africa	LX.TW303.293	TM8472-352G25Mnkk EM W7PR32EMTRZA2 MC XPP UMACFkk_3 1*2G/250_7.2K/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472-352G32Mnkk	AAP	Singapore	LX.TW303.270	TM8472-352G32Mnkk W7PR32TRSG1 MC XPP UMACFkk_3 1*2G/320_7.2K/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ZH31
TM8472-352G32Mnkk	AAP	Singapore	LX.TW303.271	TM8472-352G32Mnkk W7PR32TRSG1 MC XPP UMACFkk_3 1*2G/320_7.2K/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61

Model	RO	Country	Acer Part No	Description
TM8472-352G32Mnkk	EMEA	South Africa	LX.TW303.294	TM8472-352G32Mnkk EM W7PR32EMTRZA2 MC XPP UMACFkk_3 1*2G/320_7.2K/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472-352G32Mnkk	EMEA	South Africa	LX.TWC03.002	TM8472-352G32Mnkk EM W7PR32EMTRZA2 MC XPP UMACkk_3 1*2G/320_7.2K/BT/6L3.0/5R/na_bgn_1.3C_MA_ES61
TM8472-352G50Mnkk	EMEA	South Africa	LX.TW303.295	TM8472-352G50Mnkk EM W7PR32EMTRZA2 MC XPP UMACFkk_3 1*2G/500_7.2K/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472-354G16Mnkk	EMEA	Algeria	LX.TXM03.051	TM8472-354G16Mnkk EM W7PR32EMTRDZ1 MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_ES81
TM8472-354G16Mnkk	EMEA	Austria	LX.TXM03.006	TM8472-354G16Mnkk W7PR32TRAT1 MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_DE62
TM8472-354G16Mnkk	EMEA	Baltic	LX.TXM03.001	TM8472-354G16Mnkk W7PR32TRBC3 MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_SV21
TM8472-354G16Mnkk	EMEA	Baltic	LX.TXM03.002	TM8472-354G16Mnkk W7PR32TRBC5 MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_LT11
TM8472-354G16Mnkk	EMEA	Baltic	LX.TXM03.025	TM8472-354G16Mnkk W7PR32TRBC4 MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_LT11
TM8472-354G16Mnkk	EMEA	Belgium	LX.TXM03.008	TM8472-354G16Mnkk W7PR32TRBE1 MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_NL12
TM8472-354G16Mnkk	EMEA	Cyprus	LX.TXM03.018	TM8472-354G16Mnkk W7PR32TRCY1 MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_ES63
TM8472-354G16Mnkk	EMEA	Czech	LX.TXM03.012	TM8472-354G16Mnkk W7PR32TRCZ2 MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_SK12
TM8472-354G16Mnkk	EMEA	Denmark	LX.TXM03.013	TM8472-354G16Mnkk W7PR32TRDK2 MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_ENS2
TM8472-354G16Mnkk	EMEA	Finland	LX.TXM03.005	TM8472-354G16Mnkk W7PR32TRFI2 MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_FI12

Model	RO	Country	Acer Part No	Description
TM8472-354G16Mnkk	EMEA	France	LX.TXM03.029	TM8472-354G16Mnkk W7PR32TRFR1 MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_ES82
TM8472-354G16Mnkk	EMEA	Germany	LX.TXM03.027	TM8472-354G16Mnkk W7PR32TRDE1 MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_DE62
TM8472-354G16Mnkk	EMEA	Greece	LX.TXM03.014	TM8472-354G16Mnkk W7PR32TRGR1 MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_EL32
TM8472-354G16Mnkk	EMEA	Holland	LX.TXM03.030	TM8472-354G16Mnkk W7PR32TRNL1 MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_NL12
TM8472-354G16Mnkk	EMEA	Hungary	LX.TXM03.015	TM8472-354G16Mnkk W7PR32TRHU1 MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_HU12
TM8472-354G16Mnkk	EMEA	Israel	LX.TXM03.024	TM8472-354G16Mnkk W7PR32TRIL1 MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_HE53
TM8472-354G16Mnkk	EMEA	Israel	LX.TXM03.026	TM8472-354G16Mnkk W7PR32TRIL1 MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_HE32
TM8472-354G16Mnkk	EMEA	Italy	LX.TXM03.009	TM8472-354G16Mnkk W7PR32TRIT1 MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_IT11
TM8472-354G16Mnkk	EMEA	Luxembourg	LX.TXM03.033	TM8472-354G16Mnkk W7PR32TRLU3 MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_IT42
TM8472-354G16Mnkk	EMEA	Middle East	LX.TXM03.036	TM8472-354G16Mnkk EM W7PR32EMTRME6 MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_ES61
TM8472-354G16Mnkk	EMEA	Middle East	LX.TXM03.037	TM8472-354G16Mnkk EM W7PR32EMTRME9 MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_ES81
TM8472-354G16Mnkk	EMEA	Middle East	LX.TXM03.039	TM8472-354G16Mnkk EM W7PR32EMTRME4 MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_RU62

Model	RO	Country	Acer Part No	Description
TM8472-354G16Mnkk	EMEA	Middle East	LX.TXM03.041	TM8472-354G16Mnkk EM W7PR32EMTRME2 MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_AR21
TM8472-354G16Mnkk	EMEA	Middle East	LX.TXM03.045	TM8472-354G16Mnkk EM W7PR32EMTRME2 MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_AR11
TM8472-354G16Mnkk	EMEA	Middle East	LX.TXM03.046	TM8472-354G16Mnkk EM W7PR32EMTRME9 MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_AR52
TM8472-354G16Mnkk	EMEA	Middle East	LX.TXM03.048	TM8472-354G16Mnkk EM W7PR32EMTRMEB MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_ES61
TM8472-354G16Mnkk	EMEA	Middle East	LX.TXM03.049	TM8472-354G16Mnkk EM W7PR32EMTRME3 MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_ES81
TM8472-354G16Mnkk	EMEA	Middle East	LX.TXM03.050	TM8472-354G16Mnkk EM W7PR32EMTRMEB MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_ARA1
TM8472-354G16Mnkk	EMEA	Norway	LX.TXM03.023	TM8472-354G16Mnkk W7PR32TRNO1 MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_NO12
TM8472-354G16Mnkk	EMEA	Norway	LX.TXM03.034	TM8472-354G16Mnkk W7PR32TRNO3 MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_ENS2
TM8472-354G16Mnkk	EMEA	Poland	LX.TXM03.032	TM8472-354G16Mnkk W7PR32TRPL1 MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_PL72
TM8472-354G16Mnkk	EMEA	Portugal	LX.TXM03.011	TM8472-354G16Mnkk W7PR32TRPT1 MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_PT12
TM8472-354G16Mnkk	EMEA	South Africa	LX.TXM03.038	TM8472-354G16Mnkk EM W7PR32EMTRZA4 MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_ENA1

Model	RO	Country	Acer Part No	Description
TM8472-354G16Mnkk	EMEA	South Africa	LX.TXM03.040	TM8472-354G16Mnkk EM W7PR32EMTRZA5 MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_ES61
TM8472-354G16Mnkk	EMEA	South Africa	LX.TXM03.042	TM8472-354G16Mnkk EM W7PR32EMTRZA2 MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_ES61
TM8472-354G16Mnkk	EMEA	South Africa	LX.TXM03.043	TM8472-354G16Mnkk EM W7PR32EMTRZA1 MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_ES81
TM8472-354G16Mnkk	EMEA	South Africa	LX.TXM03.047	TM8472-354G16Mnkk EM W7PR32EMTRZA6 MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_PT11
TM8472-354G16Mnkk	EMEA	Spain	LX.TXM03.028	TM8472-354G16Mnkk W7PR32TRES1 MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_ES52
TM8472-354G16Mnkk	EMEA	Sweden	LX.TXM03.010	TM8472-354G16Mnkk W7PR32TRSE1 MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_FI12
TM8472-354G16Mnkk	EMEA	Switzerland	LX.TXM03.031	TM8472-354G16Mnkk W7PR32TRCH1 MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_IT42
TM8472-354G16Mnkk	EMEA	Turkey	LX.TXM03.044	TM8472-354G16Mnkk EM W7PR32EMTRTR1 MC XPP UMAGCFkk_3 2*2G/S160G_2.5/BT/9L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_TR41
TM8472-354G25Mn	WW	GCTWN	S2.TXM03.001	TM8472-354G25Mn W7PR32TWW1 MC UMAGCFkk_3 2*2G/250/BT/6L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_ES61
TM8472-354G25Mn	WW	WW	S2.TXM03.002	TM8472-354G25Mn W7PR32TWW1 MC UMAGCFkk_3 2*2G/250/BT/6L3.0/5R/na_bgn_FP_1.3C_F33-900_MA_ES62
TM8472-354G25Mnkk	EMEA	South Africa	LX.TW303.282	TM8472-354G25Mnkk EM W7PR32EMTRZA2 MC XPP UMAGCFkk_3 2*2G/250_7.2K/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472-354G32Mnkk	EMEA	South Africa	LX.TW303.301	TM8472-354G32Mnkk EM W7PR32EMTRZA2 MC XPP UMAGCFkk_3 2*2G/320_7.2K/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61

Model	RO	Country	Acer Part No	Description
TM8472-354G50Mnkk	EMEA	South Africa	LX.TW303.299	TM8472-354G50Mnkk EM W7PR32EMTRZA2 MC XPP UMACFkk_3 2*2G/500_7.2K/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472-522G50Mnkk	AAP	Thailand	LX.TW303.305	TM8472-522G50Mnkk EM W7PR32EMTRTH1 MC UMACFkk_3 1*2G/500_7.2K/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_TH41
TM8472-524G25Mnkk	EMEA	South Africa	LX.TW303.292	TM8472-524G25Mnkk EM W7PR32EMTRZA2 MC XPP UMACFkk_3 2*2G/250_7.2K/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472-524G32Mnkk	TWN	GCTWN	LX.TYV03.001	TM8472-524G32Mnkk W7PR32TRTW1 MC UMACFkk_3 2*2G/320_7.2K/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_TC11
TM8472-524G32Mnkk	AAP	Singapore	LX.TW303.276	TM8472-524G32Mnkk W7PR32TRSG1 MC XPP UMACFkk_3 2*2G/320_7.2K/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ZH31
TM8472-524G32Mnkk	AAP	Singapore	LX.TW303.277	TM8472-524G32Mnkk W7PR32TRSG1 MC XPP UMACFkk_3 2*2G/320_7.2K/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472-524G32Mnkk	EMEA	South Africa	LX.TW303.291	TM8472-524G32Mnkk EM W7PR32EMTRZA2 MC XPP UMACFkk_3 2*2G/320_7.2K/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472-524G32Mnkk	PA	USA	LX.TW303.036	TM8472-524G32Mnkk W7PR32TRUS1 MC UMACFkk_3 2*2G/320_7.2K/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_FRB3
TM8472-524G32Mnkk	PA	USA	LX.TYV03.003	TM8472-524G32Mnkk W7PR32TRUS1 MC UMACFkk_3 2*2G/320_7.2K/6L3.0/5R/na_bgn_FP_1.3C_MA_FRB3
TM8472-524G50Mnkk	EMEA	South Africa	LX.TW303.290	TM8472-524G50Mnkk EM W7PR32EMTRZA2 MC XPP UMACFkk_3 2*2G/500_7.2K/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472-542G50Mnkk	AAP	Thailand	LX.TW303.308	TM8472-542G50Mnkk EM W7PR32EMTRTH1 MC UMACFkk_3 1*2G/500_7.2K/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_TH41
TM8472-544G32Mnkk	AAP	Singapore	LX.TW303.280	TM8472-544G32Mnkk W7PR32TRSG1 MC XPP UMACFkk_3 2*2G/320_7.2K/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ZH31
TM8472-544G32Mnkk	AAP	Singapore	LX.TW303.281	TM8472-544G32Mnkk W7PR32TRSG1 MC XPP UMACFkk_3 2*2G/320_7.2K/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472-544G50Mnk	EMEA	South Africa	LX.TW303.261	TM8472-544G50Mnk EM W7PR32EMTRZA2 MC XPP UMACFkk_3 2*2G/500_7.2K/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61

Model	RO	Country	Acer Part No	Description
TM8472-5452G32Mnkk	AAP	Singapore	LX.TW303.272	TM8472-5452G32Mnkk W7PR32TRSG1 MC XPP UMACFkk_3 1*2G/320_7.2K/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ZH31
TM8472-5452G32Mnkk	AAP	Singapore	LX.TW303.273	TM8472-5452G32Mnkk W7PR32TRSG1 MC XPP UMACFkk_3 1*2G/320_7.2K/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472-5454G25Mnkk	EMEA	South Africa	LX.TW303.283	TM8472-5454G25Mnkk EM W7PR32EMTRZA2 MC XPP UMACFkk_3 2*2G/250_7.2K/BT/6L3.0/ 5R/na_bgn_FP_1.3C_MA_ES61
TM8472-5454G32Mnk	EMEA	Germany	LX.TXM03.052	TM8472-5454G32Mnk W7PR32TRDE1 MC UMAGCFkk_3 2*2G/320/BT/9L3.0/ 5R/na_bgn_FP_1.3C_F33- 900_MA_DE62
TM8472-5454G32Mnkk	AAP	Australia/New Zealand	LX.TXM03.053	TM8472-5454G32Mnkk W7PR32TRAU1 MC XPP UMAGCFkk_3 2*2G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_F33-900_MA_ES61
TM8472-5454G32Mnkk	EMEA	South Africa	LX.TW303.284	TM8472-5454G32Mnkk EM W7PR32EMTRZA2 MC XPP UMACFkk_3 2*2G/320_7.2K/BT/6L3.0/ 5R/na_bgn_FP_1.3C_MA_ES61
TM8472-5454G32Mnkk	EMEA	South Africa	LX.TXM03.056	TM8472-5454G32Mnkk EM W7PR32EMTSA2 MC XPP UMAGCFkk_3 2*2G/320_7.2K/BT/ 6L3.0/5R/na_bgn_FP_1.3C_F33- 900_MA_ES61
TM8472-5454G50Mnkk	EMEA	South Africa	LX.TW303.285	TM8472-5454G50Mnkk EM W7PR32EMTRZA2 MC XPP UMACFkk_3 2*2G/500_7.2K/BT/6L3.0/ 5R/na_bgn_FP_1.3C_MA_ES61
TM8472-5454G50Mnkk	EMEA	South Africa	LX.TWC03.003	TM8472-5454G50Mnkk EM W7PR32EMTRZA2 MC XPP UMACKk_3 2*2G/500_7.2K/BT/6L3.0/ 5R/na_bgn_1.3C_MA_ES61
TM8472-5454G50Mnkk	EMEA	South Africa	LX.TXM03.054	TM8472-5454G50Mnkk EM W7PR32EMTSA2 MC XPP UMAGCFkk_3 2*2G/500_7.2K/BT/ 6L3.0/5R/na_bgn_FP_1.3C_F33- 900_MA_ES61
TM8472-5454G64Mnkk	EMEA	South Africa	LX.TXM03.055	TM8472-5454G64Mnkk EM W7PR32EMTSA2 MC XPP UMAGCFkk_3 2*2G/640/BT/6L3.0/5R/ na_bgn_FP_1.3C_F33-900_MA_ES61
TM8472-622G50Mnkk	AAP	Thailand	LX.TW303.304	TM8472-622G50Mnkk EM W7PR32EMTRTH1 MC UMACFkk_3 1*2G/500_7.2K/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_TH41
TM8472-623G32Mnkk	EMEA	Middle East	LX.TYW02.001	TM8472-623G32Mnkk EM W7HP64EMTSMEB MC UMACKk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_1.3C_MA_ARA1

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472-332G16Mnkk	GCTWN	S2.TYV02.001	TM8472_U MACFkk_3	Ci3330M	UMA	N
TM8472-332G16Mnkk	GCTWN	S2.TYW03.001	TM8472_U MACkk_3	Ci3330M	UMA	N
TM8472-332G16Mnkk	WW	S2.TYV02.002	TM8472_U MACFkk_3	Ci3330M	UMA	N
TM8472-332G16Mnkk	WW	S2.TYW03.002	TM8472_U MACkk_3	Ci3330M	UMA	N
TM8472-333G16Mi	GCTWN	S2.TW303.003	TM8472T_ UMACFkk_3	Ci3330M	UMA	N
TM8472-333G16Mi	GCTWN	S2.TW303.005	TM8472T_ UMACFkk_3	Ci3330M	UMA	N
TM8472-333G16Mi	WW	S2.TW303.004	TM8472T_ UMACFkk_3	Ci3330M	UMA	N
TM8472-333G16Mi	WW	S2.TW303.006	TM8472T_ UMACFkk_3	Ci3330M	UMA	N
TM8472-352G25Mnkk	Singapore	LX.TW303.268	TM8472T_ UMACFkk_3	Ci3350M	UMA	N
TM8472-352G25Mnkk	Singapore	LX.TW303.269	TM8472T_ UMACFkk_3	Ci3350M	UMA	N
TM8472-352G25Mnkk	South Africa	LX.TW303.293	TM8472T_ UMACFkk_3	Ci3350M	UMA	N
TM8472-352G32Mnkk	Singapore	LX.TW303.270	TM8472T_ UMACFkk_3	Ci3350M	UMA	N
TM8472-352G32Mnkk	Singapore	LX.TW303.271	TM8472T_ UMACFkk_3	Ci3350M	UMA	N
TM8472-352G32Mnkk	South Africa	LX.TW303.294	TM8472T_ UMACFkk_3	Ci3350M	UMA	N
TM8472-352G32Mnkk	South Africa	LX.TWC03.002	TM8472T_ UMACkk_3	Ci3350M	UMA	N
TM8472-352G50Mnkk	South Africa	LX.TW303.295	TM8472T_ UMACFkk_3	Ci3350M	UMA	N

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472-354G16Mnkk	Algeria	LX.TXM03.051	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G16Mnkk	Austria	LX.TXM03.006	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G16Mnkk	Baltic	LX.TXM03.001	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G16Mnkk	Baltic	LX.TXM03.002	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G16Mnkk	Baltic	LX.TXM03.025	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G16Mnkk	Belgium	LX.TXM03.008	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G16Mnkk	Cyprus	LX.TXM03.018	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G16Mnkk	Czech	LX.TXM03.012	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G16Mnkk	Denmark	LX.TXM03.013	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G16Mnkk	Finland	LX.TXM03.005	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G16Mnkk	France	LX.TXM03.029	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G16Mnkk	Germany	LX.TXM03.027	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G16Mnkk	Greece	LX.TXM03.014	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G16Mnkk	Holland	LX.TXM03.030	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G16Mnkk	Hungary	LX.TXM03.015	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G16Mnkk	Israel	LX.TXM03.024	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G16Mnkk	Israel	LX.TXM03.026	TM8472_U MAGCFkk_3	Ci3350M	UMA	N

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472-354G16Mnkk	Italy	LX.TXM03.009	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G16Mnkk	Luxembourg	LX.TXM03.033	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G16Mnkk	Middle East	LX.TXM03.036	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G16Mnkk	Middle East	LX.TXM03.037	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G16Mnkk	Middle East	LX.TXM03.039	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G16Mnkk	Middle East	LX.TXM03.041	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G16Mnkk	Middle East	LX.TXM03.045	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G16Mnkk	Middle East	LX.TXM03.046	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G16Mnkk	Middle East	LX.TXM03.048	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G16Mnkk	Middle East	LX.TXM03.049	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G16Mnkk	Middle East	LX.TXM03.050	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G16Mnkk	Norway	LX.TXM03.023	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G16Mnkk	Norway	LX.TXM03.034	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G16Mnkk	Poland	LX.TXM03.032	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G16Mnkk	Portugal	LX.TXM03.011	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G16Mnkk	South Africa	LX.TXM03.038	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G16Mnkk	South Africa	LX.TXM03.040	TM8472_U MAGCFkk_3	Ci3350M	UMA	N

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472-354G16Mnkk	South Africa	LX.TXM03.042	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G16Mnkk	South Africa	LX.TXM03.043	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G16Mnkk	South Africa	LX.TXM03.047	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G16Mnkk	Spain	LX.TXM03.028	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G16Mnkk	Sweden	LX.TXM03.010	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G16Mnkk	Switzerland	LX.TXM03.031	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G16Mnkk	Turkey	LX.TXM03.044	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G25Mn	GCTWN	S2.TXM03.001	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G25Mn	WW	S2.TXM03.002	TM8472_U MAGCFkk_3	Ci3350M	UMA	N
TM8472-354G25Mnkk	South Africa	LX.TW303.282	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472-354G32Mnkk	South Africa	LX.TW303.301	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472-354G50Mnkk	South Africa	LX.TW303.299	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472-522G50Mnkk	Thailand	LX.TW303.305	TM8472T_UMACFkk_3	Ci5520M	UMA	N
TM8472-524G25Mnkk	South Africa	LX.TW303.292	TM8472T_UMACFkk_3	Ci5520M	UMA	N
TM8472-524G32Mnkk	GCTWN	LX.TYV03.001	TM8472_U MACFkk_3	Ci5520M	UMA	N
TM8472-524G32Mnkk	Singapore	LX.TW303.276	TM8472T_UMACFkk_3	Ci5520M	UMA	N
TM8472-524G32Mnkk	Singapore	LX.TW303.277	TM8472T_UMACFkk_3	Ci5520M	UMA	N

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472-524G32Mnkk	South Africa	LX.TW303.291	TM8472T_UMACFkk_3	Ci5520M	UMA	N
TM8472-524G32Mnkk	USA	LX.TW303.036	TM8472_UMACFkk_3	Ci5520M	UMA	N
TM8472-524G32Mnkk	USA	LX.TYV03.003	TM8472_UMACFkk_3	Ci5520M	UMA	N
TM8472-524G50Mnkk	South Africa	LX.TW303.290	TM8472T_UMACFkk_3	Ci5520M	UMA	N
TM8472-542G50Mnkk	Thailand	LX.TW303.308	TM8472T_UMACFkk_3	Ci5540M	UMA	N
TM8472-544G32Mnkk	Singapore	LX.TW303.280	TM8472T_UMACFkk_3	Ci5540M	UMA	N
TM8472-544G32Mnkk	Singapore	LX.TW303.281	TM8472T_UMACFkk_3	Ci5540M	UMA	N
TM8472-544G50Mnk	South Africa	LX.TW303.261	TM8472T_UMACFkk_3	Ci5540M	UMA	N
TM8472-5452G32Mnkk	Singapore	LX.TW303.272	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472-5452G32Mnkk	Singapore	LX.TW303.273	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472-5454G25Mnkk	South Africa	LX.TW303.283	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472-5454G32Mnk	Germany	LX.TXM03.052	TM8472_UMAGCFkk_3	Ci5450M	UMA	N
TM8472-5454G32Mnkk	Australia/New Zealand	LX.TXM03.053	TM8472_UMAGCFkk_3	Ci5450M	UMA	N
TM8472-5454G32Mnkk	South Africa	LX.TW303.284	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472-5454G32Mnkk	South Africa	LX.TXM03.056	TM8472_UMAGCFkk_3	Ci5450M	UMA	N
TM8472-5454G50Mnkk	South Africa	LX.TW303.285	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472-5454G50Mnkk	South Africa	LX.TWC03.003	TM8472T_UMACkk_3	Ci5450M	UMA	N

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472-5454G50Mnkk	South Africa	LX.TXM03.054	TM8472_U MAGCFkk_3	Ci5450M	UMA	N
TM8472-5454G64Mnkk	South Africa	LX.TXM03.055	TM8472_U MAGCFkk_3	Ci5450M	UMA	N
TM8472-622G50Mnkk	Thailand	LX.TW303.304	TM8472T_UMACFkk_3	Ci7620M	UMA	N
TM8472-623G32Mnkk	Middle East	LX.TYW02.001	TM8472_U MACkk_3	Ci7620M	UMA	N

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472-332G16Mnkk	GCTWN	S2.TYV02.001	SO2GBIII10	N	N160GB5.4KS	NSM8XS
TM8472-332G16Mnkk	GCTWN	S2.TYW03.001	SO2GBIII10	N	N160GB5.4KS	NSM8XS
TM8472-332G16Mnkk	WW	S2.TYV02.002	SO2GBIII10	N	N160GB5.4KS	NSM8XS
TM8472-332G16Mnkk	WW	S2.TYW03.002	SO2GBIII10	N	N160GB5.4KS	NSM8XS
TM8472-333G16Mi	GCTWN	S2.TW303.003	SO2GBIII10	SO1GBIII10	N160GB5.4KS	NSM8XS
TM8472-333G16Mi	GCTWN	S2.TW303.005	SO2GBIII10	SO1GBIII10	N160GB5.4KS	NSM8XS
TM8472-333G16Mi	WW	S2.TW303.004	SO2GBIII10	SO1GBIII10	N160GB5.4KS	NSM8XS
TM8472-333G16Mi	WW	S2.TW303.006	SO2GBIII10	SO1GBIII10	N160GB5.4KS	NSM8XS
TM8472-352G25Mnkk	Singapore	LX.TW303.268	SO2GBIII10	N	N250GB7.2KS	NSM8XS
TM8472-352G25Mnkk	Singapore	LX.TW303.269	SO2GBIII10	N	N250GB7.2KS	NSM8XS
TM8472-352G25Mnkk	South Africa	LX.TW303.293	SO2GBIII10	N	N250GB7.2KS	NSM8XS
TM8472-352G32Mnkk	Singapore	LX.TW303.270	SO2GBIII10	N	N320GB7.2KS	NSM8XS
TM8472-352G32Mnkk	Singapore	LX.TW303.271	SO2GBIII10	N	N320GB7.2KS	NSM8XS
TM8472-352G32Mnkk	South Africa	LX.TW303.294	SO2GBIII10	N	N320GB7.2KS	NSM8XS
TM8472-352G32Mnkk	South Africa	LX.TWC03.002	SO2GBIII10	N	N320GB7.2KS	NSM8XS
TM8472-352G50Mnkk	South Africa	LX.TW303.295	SO2GBIII10	N	N500GB7.2KS	NSM8XS
TM8472-354G16Mnkk	Algeria	LX.TXM03.051	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472-354G16Mnkk	Austria	LX.TXM03.006	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472-354G16Mnkk	Baltic	LX.TXM03.001	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472-354G16Mnkk	Baltic	LX.TXM03.002	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472-354G16Mnkk	Baltic	LX.TXM03.025	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472-354G16Mnkk	Belgium	LX.TXM03.008	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472-354G16Mnkk	Cyprus	LX.TXM03.018	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472-354G16Mnkk	Czech	LX.TXM03.012	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472-354G16Mnkk	Denmark	LX.TXM03.013	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472-354G16Mnkk	Finland	LX.TXM03.005	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472-354G16Mnkk	France	LX.TXM03.029	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472-354G16Mnkk	Germany	LX.TXM03.027	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472-354G16Mnkk	Greece	LX.TXM03.014	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472-354G16Mnkk	Holland	LX.TXM03.030	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472-354G16Mnkk	Hungary	LX.TXM03.015	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472-354G16Mnkk	Israel	LX.TXM03.024	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472-354G16Mnkk	Israel	LX.TXM03.026	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472-354G16Mnkk	Italy	LX.TXM03.009	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472-354G16Mnkk	Luxembourg	LX.TXM03.033	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472-354G16Mnkk	Middle East	LX.TXM03.036	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472-354G16Mnkk	Middle East	LX.TXM03.037	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472-354G16Mnkk	Middle East	LX.TXM03.039	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472-354G16Mnkk	Middle East	LX.TXM03.041	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472-354G16Mnkk	Middle East	LX.TXM03.045	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472-354G16Mnkk	Middle East	LX.TXM03.046	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472-354G16Mnkk	Middle East	LX.TXM03.048	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472-354G16Mnkk	Middle East	LX.TXM03.049	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472-354G16Mnkk	Middle East	LX.TXM03.050	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472-354G16Mnkk	Norway	LX.TXM03.023	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472-354G16Mnkk	Norway	LX.TXM03.034	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472-354G16Mnkk	Poland	LX.TXM03.032	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472-354G16Mnkk	Portugal	LX.TXM03.011	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472-354G16Mnkk	South Africa	LX.TXM03.038	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472-354G16Mnkk	South Africa	LX.TXM03.040	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472-354G16Mnkk	South Africa	LX.TXM03.042	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472-354G16Mnkk	South Africa	LX.TXM03.043	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472-354G16Mnkk	South Africa	LX.TXM03.047	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472-354G16Mnkk	Spain	LX.TXM03.028	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472-354G16Mnkk	Sweden	LX.TXM03.010	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472-354G16Mnkk	Switzerland	LX.TXM03.031	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472-354G16Mnkk	Turkey	LX.TXM03.044	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472-354G25Mn	GCTWN	S2.TXM03.001	SO2GBIII10	SO2GBIII10	N250GB5.4KS	NSM8XS
TM8472-354G25Mn	WW	S2.TXM03.002	SO2GBIII10	SO2GBIII10	N250GB5.4KS	NSM8XS
TM8472-354G25Mnkk	South Africa	LX.TW303.282	SO2GBIII10	SO2GBIII10	N250GB7.2KS	NSM8XS
TM8472-354G32Mnkk	South Africa	LX.TW303.301	SO2GBIII10	SO2GBIII10	N320GB7.2KS	NSM8XS
TM8472-354G50Mnkk	South Africa	LX.TW303.299	SO2GBIII10	SO2GBIII10	N500GB7.2KS	NSM8XS
TM8472-522G50Mnkk	Thailand	LX.TW303.305	SO2GBIII10	N	N500GB7.2KS	NSM8XS
TM8472-524G25Mnkk	South Africa	LX.TW303.292	SO2GBIII10	SO2GBIII10	N250GB7.2KS	NSM8XS
TM8472-524G32Mnkk	GCTWN	LX.TYV03.001	SO2GBIII10	SO2GBIII10	N320GB7.2KS	NSM8XS
TM8472-524G32Mnkk	Singapore	LX.TW303.276	SO2GBIII10	SO2GBIII10	N320GB7.2KS	NSM8XS
TM8472-524G32Mnkk	Singapore	LX.TW303.277	SO2GBIII10	SO2GBIII10	N320GB7.2KS	NSM8XS
TM8472-524G32Mnkk	South Africa	LX.TW303.291	SO2GBIII10	SO2GBIII10	N320GB7.2KS	NSM8XS
TM8472-524G32Mnkk	USA	LX.TW303.036	SO2GBIII10	SO2GBIII10	N320GB7.2KS	NSM8XS

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472-524G32Mnkk	USA	LX.TYV03.003	SO2GBIII10	SO2GBIII10	N320GB7.2KS	NSM8XS
TM8472-524G50Mnkk	South Africa	LX.TW303.290	SO2GBIII10	SO2GBIII10	N500GB7.2KS	NSM8XS
TM8472-542G50Mnkk	Thailand	LX.TW303.308	SO2GBIII10	N	N500GB7.2KS	NSM8XS
TM8472-544G32Mnkk	Singapore	LX.TW303.280	SO2GBIII10	SO2GBIII10	N320GB7.2KS	NSM8XS
TM8472-544G32Mnkk	Singapore	LX.TW303.281	SO2GBIII10	SO2GBIII10	N320GB7.2KS	NSM8XS
TM8472-544G50Mnk	South Africa	LX.TW303.261	SO2GBIII10	SO2GBIII10	N500GB7.2KS	NSM8XS
TM8472-5452G32Mnkk	Singapore	LX.TW303.272	SO2GBIII10	N	N320GB7.2KS	NSM8XS
TM8472-5452G32Mnkk	Singapore	LX.TW303.273	SO2GBIII10	N	N320GB7.2KS	NSM8XS
TM8472-5454G25Mnkk	South Africa	LX.TW303.283	SO2GBIII10	SO2GBIII10	N250GB7.2KS	NSM8XS
TM8472-5454G32Mnk	Germany	LX.TXM03.052	SO2GBIII10	SO2GBIII10	N320GB5.4KS	NSM8XS
TM8472-5454G32Mnkk	Australia/ New Zealand	LX.TXM03.053	SO2GBIII10	SO2GBIII10	N320GB5.4KS	NSM8XS
TM8472-5454G32Mnkk	South Africa	LX.TW303.284	SO2GBIII10	SO2GBIII10	N320GB7.2KS	NSM8XS
TM8472-5454G32Mnkk	South Africa	LX.TXM03.056	SO2GBIII10	SO2GBIII10	N320GB7.2KS	NSM8XS
TM8472-5454G50Mnkk	South Africa	LX.TW303.285	SO2GBIII10	SO2GBIII10	N500GB7.2KS	NSM8XS
TM8472-5454G50Mnkk	South Africa	LX.TWC03.003	SO2GBIII10	SO2GBIII10	N500GB7.2KS	NSM8XS
TM8472-5454G50Mnkk	South Africa	LX.TXM03.054	SO2GBIII10	SO2GBIII10	N500GB7.2KS	NSM8XS
TM8472-5454G64Mnkk	South Africa	LX.TXM03.055	SO2GBIII10	SO2GBIII10	N640GB5.4KS	NSM8XS

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472-622G50Mnkk	Thailand	LX.TW303.304	SO2GBIII10	N	N500GB7.2KS	NSM8XS
TM8472-623G32Mnkk	Middle East	LX.TYW02.001	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472-332G16Mnkk	GCTWN	S2.TYV02.001	3rd WiFi 2x2 BGN	N	SS801U	6CELL3.0
TM8472-332G16Mnkk	GCTWN	S2.TYW03.001	3rd WiFi 2x2 BGN	N	N	6CELL3.0
TM8472-332G16Mnkk	WW	S2.TYV02.002	3rd WiFi 2x2 BGN	N	SS801U	6CELL3.0
TM8472-332G16Mnkk	WW	S2.TYW03.002	3rd WiFi 2x2 BGN	N	N	6CELL3.0
TM8472-333G16Mi	GCTWN	S2.TW303.003	3rd WiFi BG	N	SS801U	6CELL3.0
TM8472-333G16Mi	GCTWN	S2.TW303.005	3rd WiFi BG	BT 2.1	SS801U	6CELL3.0
TM8472-333G16Mi	WW	S2.TW303.004	3rd WiFi BG	N	SS801U	6CELL3.0
TM8472-333G16Mi	WW	S2.TW303.006	3rd WiFi BG	BT 2.1	SS801U	6CELL3.0
TM8472-352G25Mnkk	Singapore	LX.TW303.268	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472-352G25Mnkk	Singapore	LX.TW303.269	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472-352G25Mnkk	South Africa	LX.TW303.293	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472-352G32Mnkk	Singapore	LX.TW303.270	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472-352G32Mnkk	Singapore	LX.TW303.271	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472-352G32Mnkk	South Africa	LX.TW303.294	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472-352G32Mnkk	South Africa	LX.TWC03.002	3rd WiFi 2x2 BGN	BT 3.0	N	6CELL3.0
TM8472-352G50Mnkk	South Africa	LX.TW303.295	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472-354G16Mnkk	Algeria	LX.TXM03.051	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472-354G16Mnkk	Austria	LX.TXM03.006	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472-354G16Mnkk	Baltic	LX.TXM03.001	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472-354G16Mnkk	Baltic	LX.TXM03.002	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472-354G16Mnkk	Baltic	LX.TXM03.025	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472-354G16Mnkk	Belgium	LX.TXM03.008	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472-354G16Mnkk	Cyprus	LX.TXM03.018	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472-354G16Mnkk	Czech	LX.TXM03.012	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472-354G16Mnkk	Denmark	LX.TXM03.013	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472-354G16Mnkk	Finland	LX.TXM03.005	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472-354G16Mnkk	France	LX.TXM03.029	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472-354G16Mnkk	Germany	LX.TXM03.027	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472-354G16Mnkk	Greece	LX.TXM03.014	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472-354G16Mnkk	Holland	LX.TXM03.030	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472-354G16Mnkk	Hungary	LX.TXM03.015	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472-354G16Mnkk	Israel	LX.TXM03.024	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472-354G16Mnkk	Israel	LX.TXM03.026	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472-354G16Mnkk	Italy	LX.TXM03.009	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472-354G16Mnkk	Luxembourg	LX.TXM03.033	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472-354G16Mnkk	Middle East	LX.TXM03.036	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472-354G16Mnkk	Middle East	LX.TXM03.037	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472-354G16Mnkk	Middle East	LX.TXM03.039	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472-354G16Mnkk	Middle East	LX.TXM03.041	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472-354G16Mnkk	Middle East	LX.TXM03.045	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472-354G16Mnkk	Middle East	LX.TXM03.046	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472-354G16Mnkk	Middle East	LX.TXM03.048	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472-354G16Mnkk	Middle East	LX.TXM03.049	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472-354G16Mnkk	Middle East	LX.TXM03.050	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472-354G16Mnkk	Norway	LX.TXM03.023	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472-354G16Mnkk	Norway	LX.TXM03.034	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472-354G16Mnkk	Poland	LX.TXM03.032	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472-354G16Mnkk	Portugal	LX.TXM03.011	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472-354G16Mnkk	South Africa	LX.TXM03.038	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472-354G16Mnkk	South Africa	LX.TXM03.040	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472-354G16Mnkk	South Africa	LX.TXM03.042	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472-354G16Mnkk	South Africa	LX.TXM03.043	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472-354G16Mnkk	South Africa	LX.TXM03.047	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472-354G16Mnkk	Spain	LX.TXM03.028	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472-354G16Mnkk	Sweden	LX.TXM03.010	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472-354G16Mnkk	Switzerland	LX.TXM03.031	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472-354G16Mnkk	Turkey	LX.TXM03.044	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472-354G25Mn	GCTWN	S2.TXM03.001	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472-354G25Mn	WW	S2.TXM03.002	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472-354G25Mnkk	South Africa	LX.TW303.282	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472-354G32Mnkk	South Africa	LX.TW303.301	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472-354G50Mnkk	South Africa	LX.TW303.299	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472-522G50Mnkk	Thailand	LX.TW303.305	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472-524G25Mnkk	South Africa	LX.TW303.292	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472-524G32Mnkk	GCTWN	LX.TYV03.001	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472-524G32Mnkk	Singapore	LX.TW303.276	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472-524G32Mnkk	Singapore	LX.TW303.277	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472-524G32Mnkk	South Africa	LX.TW303.291	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472-524G32Mnkk	USA	LX.TW303.036	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472-524G32Mnkk	USA	LX.TYV03.003	3rd WiFi 2x2 BGN	N	SS801U	6CELL3.0
TM8472-524G50Mnkk	South Africa	LX.TW303.290	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472-542G50Mnkk	Thailand	LX.TW303.308	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472-544G32Mnkk	Singapore	LX.TW303.280	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472-544G32Mnkk	Singapore	LX.TW303.281	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472-544G50Mnk	South Africa	LX.TW303.261	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472-5452G32Mnkk	Singapore	LX.TW303.272	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472-5452G32Mnkk	Singapore	LX.TW303.273	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472-5454G25Mnkk	South Africa	LX.TW303.283	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472-5454G32Mnk	Germany	LX.TXM03.052	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472-5454G32Mnkk	Australia/ New Zealand	LX.TXM03.053	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472-5454G32Mnkk	South Africa	LX.TW303.284	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472-5454G32Mnkk	South Africa	LX.TXM03.056	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472-5454G50Mnkk	South Africa	LX.TW303.285	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472-5454G50Mnkk	South Africa	LX.TWC03.003	3rd WiFi 2x2 BGN	BT 3.0	N	6CELL3.0
TM8472-5454G50Mnkk	South Africa	LX.TXM03.054	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472-5454G64Mnkk	South Africa	LX.TXM03.055	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472-622G50Mnkk	Thailand	LX.TW303.304	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472-623G32Mnkk	Middle East	LX.TYW02.001	3rd WiFi 2x2 BGN	BT 3.0	N	6CELL3.0

Acer Aspire 8472G

Model	RO	Country	Acer Part No	Description
TM8472G-332G16Mnkk	WW	GCTWN	S2.TWD03.001	TM8472G-332G16Mnkk W7PR32TWW1 MC N11PGE11GBCkk_3V3 1*2G/160/ 6L3.0/5R/na_bgn_1.3C_MA_ES61
TM8472G-332G16Mnkk	WW	GCTWN	S2.TYR02.001	TM8472G-332G16Mnkk W7HP64TWW1 MC N11PGE11GBCFkk_3V3 1*2G/160/ 9L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472G-332G16Mnkk	WW	GCTWN	S2.TYS02.001	TM8472G-332G16Mnkk W7HP64TWW1 MC N11PGE11GBCkk_3V3 1*2G/160/ 6L3.0/5R/na_bgn_1.3C_MA_ES61
TM8472G-332G16Mnkk	WW	WW	S2.TWD03.002	TM8472G-332G16Mnkk W7PR32TWW1 MC N11PGE11GBCkk_3V3 1*2G/160/ 6L3.0/5R/na_bgn_1.3C_MA_ES62
TM8472G-332G16Mnkk	WW	WW	S2.TYR02.002	TM8472G-332G16Mnkk W7HP64TWW1 MC N11PGE11GBCFkk_3V3 1*2G/160/ 9L3.0/5R/na_bgn_FP_1.3C_MA_ES62
TM8472G-332G16Mnkk	WW	WW	S2.TYS02.002	TM8472G-332G16Mnkk W7HP64TWW1 MC N11PGE11GBCkk_3V3 1*2G/160/ 6L3.0/5R/na_bgn_1.3C_MA_ES62
TM8472G-333G32Mnkk	WW	GCTWN	S2.TXL03.001	TM8472G-333G32Mnkk W7PR32TWW1 MC N11MGE1512GCKk_3V3 2G+1G/320/ BT/6L3.0/5R/na_bgn_1.3C_F33-900_MA_ES61
TM8472G-333G32Mnkk	WW	WW	S2.TXL03.002	TM8472G-333G32Mnkk W7PR32TWW1 MC N11MGE1512GCKk_3V3 2G+1G/320/ BT/6L3.0/5R/na_bgn_1.3C_F33-900_MA_ES62
TM8472G-338G64Mnkk	WW	GCTWN	S2.TYP02.001	TM8472G-338G64Mnkk W7HP64TWW1 MC N11MGE1512CFkk_3V3 2*4G/640/BT/ 9L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472G-338G64Mnkk	WW	WW	S2.TYP02.002	TM8472G-338G64Mnkk W7HP64TWW1 MC N11MGE1512CFkk_3V3 2*4G/640/BT/ 9L3.0/5R/na_bgn_FP_1.3C_MA_ES62

Model	RO	Country	Acer Part No	Description
TM8472G-352G25Mnkk	EMEA	South Africa	LX.TW403.107	TM8472G-352G25Mnkk EM W7PR32EMTRZA2 MC XPP N11MGE1512CFkk_3V3 1*2G/250_7.2K/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472G-352G32Mnkk	EMEA	South Africa	LX.TW403.108	TM8472G-352G32Mnkk EM W7PR32EMTRZA2 MC XPP N11MGE1512CFkk_3V3 1*2G/320_7.2K/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472G-352G50Mnkk	TWN	GCTWN	LX.TYP03.003	TM8472G-352G50Mnkk W7PR32TRTW1 MC XPP N11MGE1512CFkk_3V3 1*2G/500_7.2K/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_TC11
TM8472G-352G50Mnkk	EMEA	South Africa	LX.TW403.109	TM8472G-352G50Mnkk EM W7PR32EMTRZA2 MC XPP N11MGE1512CFkk_3V3 1*2G/500_7.2K/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472G-354G25Mnkk	EMEA	South Africa	LX.TW403.115	TM8472G-354G25Mnkk EM W7PR32EMTRZA2 MC XPP N11MGE1512CFkk_3V3 2*2G/250_7.2K/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472G-354G32Mnkk	EMEA	South Africa	LX.TW403.114	TM8472G-354G32Mnkk EM W7PR32EMTRZA2 MC XPP N11MGE1512CFkk_3V3 2*2G/320_7.2K/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472G-354G50Mnkk	EMEA	South Africa	LX.TW403.113	TM8472G-354G50Mnkk EM W7PR32EMTRZA2 MC XPP N11MGE1512CFkk_3V3 2*2G/500_7.2K/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472G-434G16Mnkk	EMEA	Holland	LX.TXL03.003	TM8472G-434G16Mnkk W7PR32TSNL1 MC XPP N11MGE1512GCkk_3V3 2*2G/S160G_2.5/BT/6L3.0/5R/na_bgn_1.3C_F33-900_MA_NL11
TM8472G-434G25Mn	WW	WW	S2.TW403.006	TM8472G-434G25Mn W7PR32TWW1 MC N11MGE1512CFkk_3V3 2*2G/250/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES62
TM8472G-522G50Mnkk	TWN	GCTWN	LX.TYP03.002	TM8472G-522G50Mnkk W7PR32TRTW1 MC XPP N11MGE1512CFkk_3V3 1*2G/500_7.2K/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_TC11
TM8472G-522G50Mnkk	AAP	Thailand	LX.TW403.126	TM8472G-522G50Mnkk EM W7PR32EMTRTH1 MC N11MGE1512CFkk_3V3 1*2G/500_7.2K/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_TH41

Model	RO	Country	Acer Part No	Description
TM8472G-524G32Mnkk	AAP	Singapore	LX.TW403.095	TM8472G-524G32Mnkk W7PR32TRSG1 MC XPP N11MGE1512CFkk_3V3 2*2G/ 320_7.2K/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ZH31
TM8472G-524G32Mnkk	AAP	Singapore	LX.TW403.096	TM8472G-524G32Mnkk W7PR32TRSG1 MC XPP N11MGE1512CFkk_3V3 2*2G/ 320_7.2K/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472G-524G32Mnkk	EMEA	South Africa	LX.TW403.123	TM8472G-524G32Mnkk EM W7PR32EMTRZA2 MC XPP N11MGE1512CFkk_3V3 2*2G/ 320_7.2K/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472G-524G50Mnkk	AAP	Australia/New Zealand	LX.TXL03.002	TM8472G-524G50Mnkk W7PR32TRAU1 MC XPP N11MGE1512GCKk_3V3 2*2G/500_L/ 6L3.0/5R/na_bgn_1.3C_F33- 900_MA_ES61
TM8472G-524G50Mnkk	EMEA	South Africa	LX.TW403.122	TM8472G-524G50Mnkk EM W7PR32EMTRZA2 MC XPP N11MGE1512CFkk_3V3 2*2G/ 500_7.2K/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472G-528G32Bn	WW	GCTWN	S2.TW503.003	TM8472G-528G32Bn W7PR32TWW1 MC N11PGE11GBCFkk_3V3 2*4G/320/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472G-528G32Bn	WW	GCTWN	S2.TW503.005	TM8472G-528G32Bn W7PR32TWW1 MC N11PGE11GBCFkk_3V3 2*4G/320/ BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472G-528G32Bn	WW	WW	S2.TW503.004	TM8472G-528G32Bn W7PR32TWW1 MC N11PGE11GBCFkk_3V3 2*4G/320/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ES62
TM8472G-528G32Bn	WW	WW	S2.TW503.006	TM8472G-528G32Bn W7PR32TWW1 MC N11PGE11GBCFkk_3V3 2*4G/320/ BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES62
TM8472G-542G50Mnkk	AAP	Thailand	LX.TW403.128	TM8472G-542G50Mnkk EM W7PR32EMTRTH1 MC N11MGE1512CFkk_3V3 1*2G/ 500_7.2K/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_TH41
TM8472G-544G50Mnkk	AAP	Singapore	LX.TW403.104	TM8472G-544G50Mnkk W7PR32TRSG1 MC XPP N11MGE1512CFkk_3V3 2*2G/ 500_7.2K/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ZH31
TM8472G-544G50Mnkk	AAP	Singapore	LX.TW403.105	TM8472G-544G50Mnkk W7PR32TRSG1 MC XPP N11MGE1512CFkk_3V3 2*2G/ 500_7.2K/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61

Model	RO	Country	Acer Part No	Description
TM8472G-5452G50Mnkk	TWN	GCTWN	LX.TYP03.001	TM8472G-5452G50Mnkk W7PR32TRTW1 MC XPP N11MGE1512CFkk_3V3 1*2G/ 500_7.2K/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_TC11
TM8472G-5454G32Mnkk	AAP	Singapore	LX.TW403.097	TM8472G-5454G32Mnkk W7PR32TRSG1 MC XPP N11MGE1512CFkk_3V3 2*2G/ 320_7.2K/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ZH31
TM8472G-5454G32Mnkk	AAP	Singapore	LX.TW403.098	TM8472G-5454G32Mnkk W7PR32TRSG1 MC XPP N11MGE1512CFkk_3V3 2*2G/ 320_7.2K/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472G-5454G32Mnkk	EMEA	South Africa	LX.TW403.116	TM8472G-5454G32Mnkk EM W7PR32EMTRZA2 MC XPP N11MGE1512CFkk_3V3 2*2G/ 320_7.2K/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472G-5454G50Mnkk	EMEA	South Africa	LX.TW403.117	TM8472G-5454G50Mnkk EM W7PR32EMTRZA2 MC XPP N11MGE1512CFkk_3V3 2*2G/ 500_7.2K/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472G-5454G50Mnkk	EMEA	Switzerland	LX.TXL03.001	TM8472G-5454G50Mnkk W7PR32TRCH1 MC XPP N11MGE1512GCkk_3V3 2*2G/500_L/ BT/9L3.0/5R/na_bgn_1.3C_F33- 900_MA_IT42
TM8472G-5454G50Mnkk	EMEA	UK	LX.TW403.106	TM8472G-5454G50Mnkk W7PR32TRGB1 MC XPP N11MGE1512CFkk_3V3 2*2G/ 500_7.2K/BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_ES62
TM8472G-546G50Mnkk	WW	GCTWN	S2.TYQ0C.001	TM8472G-546G50MnkkLINPUSTWW1 N11MGE1512Ckk_3V3 2G+4G/ 500_7.2K/6L3.0/5R/ na_bgn_1.3C_MA_ENX1
TM8472G-546G50Mnkk	WW	WW	S2.TYQ0C.002	TM8472G-546G50MnkkLINPUSTWW1 N11MGE1512Ckk_3V3 2G+4G/ 500_7.2K/6L3.0/5R/ na_bgn_1.3C_MA_EN11
TM8472G-622G50Mnkk	AAP	Thailand	LX.TW403.127	TM8472G-622G50Mnkk EM W7PR32EMTRTH1 MC N11MGE1512CFkk_3V3 1*2G/ 500_7.2K/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_TH41

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472G-332G16Mnkk	GCTWN	S2.TWD03.001	TM8472TG_N11PGE1 1GBCKk_3V3	Ci3330M	N11PGE1	1G-DDR3 (64*16*8)
TM8472G-332G16Mnkk	GCTWN	S2.TYR02.001	TM8472G_N11PGE11 GBCFk_3V3	Ci3330M	N11PGE1	1G-DDR3 (64*16*8)
TM8472G-332G16Mnkk	GCTWN	S2.TYS02.001	TM8472G_N11PGE11 GBCKk_3V3	Ci3330M	N11PGE1	1G-DDR3 (64*16*8)
TM8472G-332G16Mnkk	WW	S2.TWD03.002	TM8472TG_N11PGE1 1GBCKk_3V3	Ci3330M	N11PGE1	1G-DDR3 (64*16*8)
TM8472G-332G16Mnkk	WW	S2.TYR02.002	TM8472G_N11PGE11 GBCFk_3V3	Ci3330M	N11PGE1	1G-DDR3 (64*16*8)
TM8472G-332G16Mnkk	WW	S2.TYS02.002	TM8472G_N11PGE11 GBCKk_3V3	Ci3330M	N11PGE1	1G-DDR3 (64*16*8)
TM8472G-333G32Mnkk	GCTWN	S2.TXL03.001	TM8472G_N11MGE15 12GCKk_3V3	Ci3330M	N11MGE1	512M-DDR3 (64*16*4)
TM8472G-333G32Mnkk	WW	S2.TXL03.002	TM8472G_N11MGE15 12GCKk_3V3	Ci3330M	N11MGE1	512M-DDR3 (64*16*4)
TM8472G-338G64Mnkk	GCTWN	S2.TYP02.001	TM8472G_N11MGE15 12CFk_3V3	Ci3330M	N11MGE1	512M-DDR3 (64*16*4)
TM8472G-338G64Mnkk	WW	S2.TYP02.002	TM8472G_N11MGE15 12CFk_3V3	Ci3330M	N11MGE1	512M-DDR3 (64*16*4)
TM8472G-352G25Mnkk	South Africa	LX.TW403.107	TM8472TG_N11MGE1 512CFk_3V3	Ci3350M	N11MGE1	512M-DDR3 (64*16*4)
TM8472G-352G32Mnkk	South Africa	LX.TW403.108	TM8472TG_N11MGE1 512CFk_3V3	Ci3350M	N11MGE1	512M-DDR3 (64*16*4)
TM8472G-352G50Mnkk	GCTWN	LX.TYP03.003	TM8472G_N11MGE15 12CFk_3V3	Ci3350M	N11MGE1	512M-DDR3 (64*16*4)

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472G-352G50Mnkk	South Africa	LX.TW403.109	TM8472TG_N11MGE1 512CFkk_3V3	Ci3350M	N11MGE1	512M-DDR3 (64*16*4)
TM8472G-354G25Mnkk	South Africa	LX.TW403.115	TM8472TG_N11MGE1 512CFkk_3V3	Ci3350M	N11MGE1	512M-DDR3 (64*16*4)
TM8472G-354G32Mnkk	South Africa	LX.TW403.114	TM8472TG_N11MGE1 512CFkk_3V3	Ci3350M	N11MGE1	512M-DDR3 (64*16*4)
TM8472G-354G50Mnkk	South Africa	LX.TW403.113	TM8472TG_N11MGE1 512CFkk_3V3	Ci3350M	N11MGE1	512M-DDR3 (64*16*4)
TM8472G-434G16Mnkk	Holland	LX.TXL03.003	TM8472G_N11MGE15 12GCKk_3V3	Ci5430M	N11MGE1	512M-DDR3 (64*16*4)
TM8472G-434G25Mn	WW	S2.TW403.006	TM8472TG_N11MGE1 512CFkk_3V3	Ci5430M	N11MGE1	512M-DDR3 (64*16*4)
TM8472G-522G50Mnkk	GCTWN	LX.TYP03.002	TM8472G_N11MGE15 12CFkk_3V3	Ci5520M	N11MGE1	512M-DDR3 (64*16*4)
TM8472G-522G50Mnkk	Thailand	LX.TW403.126	TM8472TG_N11MGE1 512CFkk_3V3	Ci5520M	N11MGE1	512M-DDR3 (64*16*4)
TM8472G-524G32Mnkk	Singapore	LX.TW403.095	TM8472TG_N11MGE1 512CFkk_3V3	Ci5520M	N11MGE1	512M-DDR3 (64*16*4)
TM8472G-524G32Mnkk	Singapore	LX.TW403.096	TM8472TG_N11MGE1 512CFkk_3V3	Ci5520M	N11MGE1	512M-DDR3 (64*16*4)
TM8472G-524G32Mnkk	South Africa	LX.TW403.123	TM8472TG_N11MGE1 512CFkk_3V3	Ci5520M	N11MGE1	512M-DDR3 (64*16*4)
TM8472G-524G50Mnkk	Australia/ New Zealand	LX.TXL03.002	TM8472G_N11MGE15 12GCKk_3V3	Ci5520M	N11MGE1	512M-DDR3 (64*16*4)
TM8472G-524G50Mnkk	South Africa	LX.TW403.122	TM8472TG_N11MGE1 512CFkk_3V3	Ci5520M	N11MGE1	512M-DDR3 (64*16*4)

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472G-528G32Bn	GCTWN	S2.TW503.003	TM8472TG_N11PGE1 1GBCFkk_3V3	Ci5520M	N11PGE1	1G-DDR3 (64*16*8)
TM8472G-528G32Bn	GCTWN	S2.TW503.005	TM8472TG_N11PGE1 1GBCFkk_3V3	Ci5520M	N11PGE1	1G-DDR3 (64*16*8)
TM8472G-528G32Bn	WW	S2.TW503.004	TM8472TG_N11PGE1 1GBCFkk_3V3	Ci5520M	N11PGE1	1G-DDR3 (64*16*8)
TM8472G-528G32Bn	WW	S2.TW503.006	TM8472TG_N11PGE1 1GBCFkk_3V3	Ci5520M	N11PGE1	1G-DDR3 (64*16*8)
TM8472G-542G50Mnkk	Thailand	LX.TW403.128	TM8472TG_N11MGE1 512CFkk_3V3	Ci5540M	N11MGE1	512M-DDR3 (64*16*4)
TM8472G-544G50Mnkk	Singapore	LX.TW403.104	TM8472TG_N11MGE1 512CFkk_3V3	Ci5540M	N11MGE1	512M-DDR3 (64*16*4)
TM8472G-544G50Mnkk	Singapore	LX.TW403.105	TM8472TG_N11MGE1 512CFkk_3V3	Ci5540M	N11MGE1	512M-DDR3 (64*16*4)
TM8472G-5452G50Mnkk	GCTWN	LX.TYP03.001	TM8472G_N11MGE15 12CFkk_3V3	Ci5450M	N11MGE1	512M-DDR3 (64*16*4)
TM8472G-5454G32Mnkk	Singapore	LX.TW403.097	TM8472TG_N11MGE1 512CFkk_3V3	Ci5450M	N11MGE1	512M-DDR3 (64*16*4)
TM8472G-5454G32Mnkk	Singapore	LX.TW403.098	TM8472TG_N11MGE1 512CFkk_3V3	Ci5450M	N11MGE1	512M-DDR3 (64*16*4)
TM8472G-5454G32Mnkk	South Africa	LX.TW403.116	TM8472TG_N11MGE1 512CFkk_3V3	Ci5450M	N11MGE1	512M-DDR3 (64*16*4)
TM8472G-5454G50Mnkk	South Africa	LX.TW403.117	TM8472TG_N11MGE1 512CFkk_3V3	Ci5450M	N11MGE1	512M-DDR3 (64*16*4)
TM8472G-5454G50Mnkk	Switzerland	LX.TXL03.001	TM8472G_N11MGE15 12GCKk_3V3	Ci5450M	N11MGE1	512M-DDR3 (64*16*4)

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472G-5454G50Mnkk	UK	LX.TW403.106	TM8472TG_N11MGE1512CFkk_3V3	Ci5450M	N11MGE1	512M-DDR3 (64*16*4)
TM8472G-546G50Mnkk	GCTWN	S2.TYQ0C.001	TM8472G_N11MGE1512Ckk_3V3	Ci5540M	N11MGE1	512M-DDR3 (64*16*4)
TM8472G-546G50Mnkk	WW	S2.TYQ0C.002	TM8472G_N11MGE1512Ckk_3V3	Ci5540M	N11MGE1	512M-DDR3 (64*16*4)
TM8472G-622G50Mnkk	Thailand	LX.TW403.127	TM8472TG_N11MGE1512CFkk_3V3	Ci7620M	N11MGE1	512M-DDR3 (64*16*4)

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472G-332G16Mnkk	GCTWN	S2.TWD03.001	SO2GBIII10	N	N160GB5.4KS	NSM8XS
TM8472G-332G16Mnkk	GCTWN	S2.TYR02.001	SO2GBIII10	N	N160GB5.4KS	NSM8XS
TM8472G-332G16Mnkk	GCTWN	S2.TYS02.001	SO2GBIII10	N	N160GB5.4KS	NSM8XS
TM8472G-332G16Mnkk	WW	S2.TWD03.002	SO2GBIII10	N	N160GB5.4KS	NSM8XS
TM8472G-332G16Mnkk	WW	S2.TYR02.002	SO2GBIII10	N	N160GB5.4KS	NSM8XS
TM8472G-332G16Mnkk	WW	S2.TYS02.002	SO2GBIII10	N	N160GB5.4KS	NSM8XS
TM8472G-333G32Mnkk	GCTWN	S2.TXL03.001	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472G-333G32Mnkk	WW	S2.TXL03.002	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472G-338G64Mnkk	GCTWN	S2.TYP02.001	SO4GBIII10	SO4GBIII10	N640GB5.4KS	NSM8XS
TM8472G-338G64Mnkk	WW	S2.TYP02.002	SO4GBIII10	SO4GBIII10	N640GB5.4KS	NSM8XS
TM8472G-352G25Mnkk	South Africa	LX.TW403.107	SO2GBIII10	N	N250GB7.2KS	NSM8XS

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472G-352G32Mnkk	South Africa	LX.TW403.108	SO2GBIII10	N	N320GB7.2KS	NSM8XS
TM8472G-352G50Mnkk	GCTWN	LX.TYP03.003	SO2GBIII10	N	N500GB7.2KS	NSM8XS
TM8472G-352G50Mnkk	South Africa	LX.TW403.109	SO2GBIII10	N	N500GB7.2KS	NSM8XS
TM8472G-354G25Mnkk	South Africa	LX.TW403.115	SO2GBIII10	SO2GBIII10	N250GB7.2KS	NSM8XS
TM8472G-354G32Mnkk	South Africa	LX.TW403.114	SO2GBIII10	SO2GBIII10	N320GB7.2KS	NSM8XS
TM8472G-354G50Mnkk	South Africa	LX.TW403.113	SO2GBIII10	SO2GBIII10	N500GB7.2KS	NSM8XS
TM8472G-434G16Mnkk	Holland	LX.TXL03.003	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472G-434G25Mn	WW	S2.TW403.006	SO2GBIII10	SO2GBIII10	N250GB5.4KS	NSM8XS
TM8472G-522G50Mnkk	GCTWN	LX.TYP03.002	SO2GBIII10	N	N500GB7.2KS	NSM8XS
TM8472G-522G50Mnkk	Thailand	LX.TW403.126	SO2GBIII10	N	N500GB7.2KS	NSM8XS
TM8472G-524G32Mnkk	Singapore	LX.TW403.095	SO2GBIII10	SO2GBIII10	N320GB7.2KS	NSM8XS
TM8472G-524G32Mnkk	Singapore	LX.TW403.096	SO2GBIII10	SO2GBIII10	N320GB7.2KS	NSM8XS
TM8472G-524G32Mnkk	South Africa	LX.TW403.123	SO2GBIII10	SO2GBIII10	N320GB7.2KS	NSM8XS
TM8472G-524G50Mnkk	Australia/ New Zealand	LX.TXL03.002	SO2GBIII10	SO2GBIII10	N500GB5.4KS	NSM8XS
TM8472G-524G50Mnkk	South Africa	LX.TW403.122	SO2GBIII10	SO2GBIII10	N500GB7.2KS	NSM8XS
TM8472G-528G32Bn	GCTWN	S2.TW503.003	SO4GBIII10	SO4GBIII10	N320GB5.4KS	NBDCB4XS
TM8472G-528G32Bn	GCTWN	S2.TW503.005	SO4GBIII10	SO4GBIII10	N320GB5.4KS	NBDCB4XS
TM8472G-528G32Bn	WW	S2.TW503.004	SO4GBIII10	SO4GBIII10	N320GB5.4KS	NBDCB4XS

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472G-528G32Bn	WW	S2.TW503.006	SO4GBIII10	SO4GBIII10	N320GB5.4KS	NBDCB4XS
TM8472G-542G50Mnkk	Thailand	LX.TW403.128	SO2GBIII10	N	N500GB7.2KS	NSM8XS
TM8472G-544G50Mnkk	Singapore	LX.TW403.104	SO2GBIII10	SO2GBIII10	N500GB7.2KS	NSM8XS
TM8472G-544G50Mnkk	Singapore	LX.TW403.105	SO2GBIII10	SO2GBIII10	N500GB7.2KS	NSM8XS
TM8472G-5452G50Mnkk	GCTWN	LX.TYP03.001	SO2GBIII10	N	N500GB7.2KS	NSM8XS
TM8472G-5454G32Mnkk	Singapore	LX.TW403.097	SO2GBIII10	SO2GBIII10	N320GB7.2KS	NSM8XS
TM8472G-5454G32Mnkk	Singapore	LX.TW403.098	SO2GBIII10	SO2GBIII10	N320GB7.2KS	NSM8XS
TM8472G-5454G32Mnkk	South Africa	LX.TW403.116	SO2GBIII10	SO2GBIII10	N320GB7.2KS	NSM8XS
TM8472G-5454G50Mnkk	South Africa	LX.TW403.117	SO2GBIII10	SO2GBIII10	N500GB7.2KS	NSM8XS
TM8472G-5454G50Mnkk	Switzerland	LX.TXL03.001	SO2GBIII10	SO2GBIII10	N500GB5.4KS	NSM8XS
TM8472G-5454G50Mnkk	UK	LX.TW403.106	SO2GBIII10	SO2GBIII10	N500GB7.2KS	NSM8XS
TM8472G-546G50Mnkk	GCTWN	S2.TYQ0C.001	SO2GBIII10	SO4GBIII10	N500GB7.2KS	NSM8XS
TM8472G-546G50Mnkk	WW	S2.TYQ0C.002	SO2GBIII10	SO4GBIII10	N500GB7.2KS	NSM8XS
TM8472G-622G50Mnkk	Thailand	LX.TW403.127	SO2GBIII10	N	N500GB7.2KS	NSM8XS

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472G-332G16Mnkk	GCTWN	S2.TWD03.001	3rd WiFi 2x2 BGN	N	N	6CELL3.0
TM8472G-332G16Mnkk	GCTWN	S2.TYR02.001	3rd WiFi 2x2 BGN	N	SS801U	9CELL3.0

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472G-332G16Mnkk	GCTWN	S2.TYS02.001	3rd WiFi 2x2 BGN	N	N	6CELL3.0
TM8472G-332G16Mnkk	WW	S2.TWD03.002	3rd WiFi 2x2 BGN	N	N	6CELL3.0
TM8472G-332G16Mnkk	WW	S2.TYR02.002	3rd WiFi 2x2 BGN	N	SS801U	9CELL3.0
TM8472G-332G16Mnkk	WW	S2.TYS02.002	3rd WiFi 2x2 BGN	N	N	6CELL3.0
TM8472G-333G32Mnkk	GCTWN	S2.TXL03.001	3rd WiFi 2x2 BGN	BT 3.0	N	6CELL3.0
TM8472G-333G32Mnkk	WW	S2.TXL03.002	3rd WiFi 2x2 BGN	BT 3.0	N	6CELL3.0
TM8472G-338G64Mnkk	GCTWN	S2.TYP02.001	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472G-338G64Mnkk	WW	S2.TYP02.002	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472G-352G25Mnkk	South Africa	LX.TW403.107	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472G-352G32Mnkk	South Africa	LX.TW403.108	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472G-352G50Mnkk	GCTWN	LX.TYP03.003	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472G-352G50Mnkk	South Africa	LX.TW403.109	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472G-354G25Mnkk	South Africa	LX.TW403.115	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472G-354G32Mnkk	South Africa	LX.TW403.114	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472G-354G50Mnkk	South Africa	LX.TW403.113	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472G-434G16Mnkk	Holland	LX.TXL03.003	3rd WiFi 2x2 BGN	BT 3.0	N	6CELL3.0
TM8472G-434G25Mn	WW	S2.TW403.006	3rd WiFi 2x2 BGN	BT 2.1	SS801U	6CELL3.0

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472G-522G50Mnkk	GCTWN	LX.TYP03.002	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472G-522G50Mnkk	Thailand	LX.TW403.126	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472G-524G32Mnkk	Singapore	LX.TW403.095	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472G-524G32Mnkk	Singapore	LX.TW403.096	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472G-524G32Mnkk	South Africa	LX.TW403.123	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472G-524G50Mnkk	Australia/ New Zealand	LX.TXL03.002	3rd WiFi 2x2 BGN	N	N	6CELL3.0
TM8472G-524G50Mnkk	South Africa	LX.TW403.122	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472G-528G32Bn	GCTWN	S2.TW503.003	3rd WiFi 2x2 BGN	N	SS801U	6CELL3.0
TM8472G-528G32Bn	GCTWN	S2.TW503.005	3rd WiFi 2x2 BGN	BT 2.1	SS801U	6CELL3.0
TM8472G-528G32Bn	WW	S2.TW503.004	3rd WiFi 2x2 BGN	N	SS801U	6CELL3.0
TM8472G-528G32Bn	WW	S2.TW503.006	3rd WiFi 2x2 BGN	BT 2.1	SS801U	6CELL3.0
TM8472G-542G50Mnkk	Thailand	LX.TW403.128	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472G-544G50Mnkk	Singapore	LX.TW403.104	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472G-544G50Mnkk	Singapore	LX.TW403.105	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472G-5452G50Mnkk	GCTWN	LX.TYP03.001	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472G-5454G32Mnkk	Singapore	LX.TW403.097	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472G-5454G32Mnkk	Singapore	LX.TW403.098	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472G-5454G32Mnkk	South Africa	LX.TW403.116	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472G-5454G50Mnkk	South Africa	LX.TW403.117	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472G-5454G50Mnkk	Switzerland	LX.TXL03.001	3rd WiFi 2x2 BGN	BT 3.0	N	9CELL3.0
TM8472G-5454G50Mnkk	UK	LX.TW403.106	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472G-546G50Mnkk	GCTWN	S2.TYQ0C.001	3rd WiFi 2x2 BGN	N	N	6CELL3.0
TM8472G-546G50Mnkk	WW	S2.TYQ0C.002	3rd WiFi 2x2 BGN	N	N	6CELL3.0
TM8472G-622G50Mnkk	Thailand	LX.TW403.127	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0

Acer Aspire 8472T

Model	RO	Country	Acer Part No	Description
TM8472T-332G16Mnkk	WW	GCTWN	S2.TW303.001	TM8472T-332G16Mnkk W7PR32TWW1 MC UMACFkk_3 1*2G/ 160/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472T-332G16Mnkk	WW	GCTWN	S2.TWC03.001	TM8472T-332G16Mnkk W7PR32TWW1 MC UMACKk_3 1*2G/ 160/6L3.0/5R/na_bgn_1.3C_MA_ES61
TM8472T-332G16Mnkk	WW	WW	S2.TW303.002	TM8472T-332G16Mnkk W7PR32TWW1 MC UMACFkk_3 1*2G/ 160/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES62
TM8472T-332G16Mnkk	WW	WW	S2.TWC03.002	TM8472T-332G16Mnkk W7PR32TWW1 MC UMACKk_3 1*2G/ 160/6L3.0/5R/na_bgn_1.3C_MA_ES62
TM8472T-332G25Mnkk	TWN	GCTWN	LX.TW303.017	TM8472T-332G25Mnkk W7PR32TRTW1 MC XPP UMACFkk_3 1*2G/250/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_TC11
TM8472T-332G25Mnkk	EMEA	South Africa	LX.TW303.001	TM8472T-332G25Mnkk EM W7PR32EMTRZA2 MC XPP UMACFkk_3 1*2G/250/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472T-332G32Mnkk	TWN	GCTWN	LX.TW303.012	TM8472T-332G32Mnkk W7PR32TRTW1 MC XPP UMACFkk_3 1*2G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_TC11

Model	RO	Country	Acer Part No	Description
TM8472T-332G32Mnkk	EMEA	Middle East	LX.TW303.041	TM8472T-332G32Mnkk EM W7PR32EMTRME2 MC UMACFkk_3 1*2G/320/BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_AR21
TM8472T-332G32Mnkk	AAP	Singapore	LX.TW303.040	TM8472T-332G32Mnkk W7PR32TRSG1 MC XPP UMACFkk_3 1*2G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ZH31
TM8472T-332G32Mnkk	EMEA	South Africa	LX.TW303.002	TM8472T-332G32Mnkk EM W7PR32EMTRZA2 MC XPP UMACFkk_3 1*2G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472T-332G50Mnkk	TWN	GCTWN	LX.TW303.013	TM8472T-332G50Mnkk W7PR32TRTW1 MC XPP UMACFkk_3 1*2G/500_L/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_TC11
TM8472T-332G50Mnkk	EMEA	South Africa	LX.TW303.003	TM8472T-332G50Mnkk EM W7PR32EMTRZA2 MC XPP UMACFkk_3 1*2G/500_L/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472T-332G64Mnkk	EMEA	South Africa	LX.TW303.004	TM8472T-332G64Mnkk EM W7PR32EMTRZA2 MC XPP UMACFkk_3 1*2G/640/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472T-333G25Mnkk	WW	GCTWN	S2.TW303.007	TM8472T-333G25Mnkk W7PR32TWW1 MC UMACFkk_3 1G+2G/250/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472T-333G25Mnkk	WW	WW	S2.TW303.008	TM8472T-333G25Mnkk W7PR32TWW1 MC UMACFkk_3 1G+2G/250/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES62
TM8472T-333G32Mnkk	EMEA	Algeria	LX.TW303.201	TM8472T-333G32Mnkk EM W7PR32EMTRDZ1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES81
TM8472T-333G32Mnkk	EMEA	Austria	LX.TW303.162	TM8472T-333G32Mnkk W7PR32TRAT1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_DE62
TM8472T-333G32Mnkk	EMEA	Baltic	LX.TW303.155	TM8472T-333G32Mnkk W7PR32TRBC3 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_SV21
TM8472T-333G32Mnkk	EMEA	Baltic	LX.TW303.156	TM8472T-333G32Mnkk W7PR32TRBC5 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_LT11
TM8472T-333G32Mnkk	EMEA	Baltic	LX.TW303.177	TM8472T-333G32Mnkk W7PR32TRBC4 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_LT11

Model	RO	Country	Acer Part No	Description
TM8472T-333G32Mnkk	EMEA	Belgium	LX.TW303.159	TM8472T-333G32Mnkk W7PR32TRBE1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_NL12
TM8472T-333G32Mnkk	EMEA	Cyprus	LX.TW303.172	TM8472T-333G32Mnkk W7PR32TRCY1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES63
TM8472T-333G32Mnkk	EMEA	Czech	LX.TW303.153	TM8472T-333G32Mnkk W7PR32TRCZ2 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_SK12
TM8472T-333G32Mnkk	EMEA	Denmark	LX.TW303.154	TM8472T-333G32Mnkk W7PR32TRDK2 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ENS2
TM8472T-333G32Mnkk	EMEA	Finland	LX.TW303.161	TM8472T-333G32Mnkk W7PR32TRFI2 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_FI12
TM8472T-333G32Mnkk	EMEA	France	LX.TW303.166	TM8472T-333G32Mnkk W7PR32TRFR1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES82
TM8472T-333G32Mnkk	EMEA	Germany	LX.TW303.179	TM8472T-333G32Mnkk W7PR32TRDE1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_DE62
TM8472T-333G32Mnkk	EMEA	Greece	LX.TW303.167	TM8472T-333G32Mnkk W7PR32TRGR1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_EL32
TM8472T-333G32Mnkk	EMEA	Holland	LX.TW303.181	TM8472T-333G32Mnkk W7PR32TRNL1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_NL12
TM8472T-333G32Mnkk	EMEA	Hungary	LX.TW303.168	TM8472T-333G32Mnkk W7PR32TRHU1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_HU12
TM8472T-333G32Mnkk	EMEA	Israel	LX.TW303.176	TM8472T-333G32Mnkk W7PR32TRIL1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_HE53
TM8472T-333G32Mnkk	EMEA	Israel	LX.TW303.178	TM8472T-333G32Mnkk W7PR32TRIL1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_HE32
TM8472T-333G32Mnkk	EMEA	Italy	LX.TW303.165	TM8472T-333G32Mnkk W7PR32TRIT1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_IT11
TM8472T-333G32Mnkk	EMEA	Italy	LX.TW303.309	TM8472T-333G32Mnkk W7PR32TRIT1 MC XPP UMACFkk_3 2G+1G/320/6L3.0/5R/na_bgn_FP_1.3C_MA_IT11
TM8472T-333G32Mnkk	EMEA	Italy	LX.TW303.310	TM8472T-333G32Mnkk W7PR32TRIT1 MC UMACFkk_3 2G+1G/320/6L3.0/5R/na_bgn_FP_1.3C_MA_IT11

Model	RO	Country	Acer Part No	Description
TM8472T-333G32Mnkk	EMEA	Italy	LX.TW303.311	TM8472T-333G32Mnkk W7PR32TRIT1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_IT11
TM8472T-333G32Mnkk	EMEA	Luxembourg	LX.TW303.184	TM8472T-333G32Mnkk W7PR32TRLU3 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_IT42
TM8472T-333G32Mnkk	EMEA	Middle East	LX.TW303.187	TM8472T-333G32Mnkk EM W7PR32EMTRME6 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472T-333G32Mnkk	EMEA	Middle East	LX.TW303.188	TM8472T-333G32Mnkk EM W7PR32EMTRME9 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES81
TM8472T-333G32Mnkk	EMEA	Middle East	LX.TW303.190	TM8472T-333G32Mnkk EM W7PR32EMTRME4 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_RU62
TM8472T-333G32Mnkk	EMEA	Middle East	LX.TW303.192	TM8472T-333G32Mnkk EM W7PR32EMTRME2 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_AR21
TM8472T-333G32Mnkk	EMEA	Middle East	LX.TW303.197	TM8472T-333G32Mnkk EM W7PR32EMTRMEB MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472T-333G32Mnkk	EMEA	Middle East	LX.TW303.198	TM8472T-333G32Mnkk EM W7PR32EMTRME3 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES81
TM8472T-333G32Mnkk	EMEA	Middle East	LX.TW303.199	TM8472T-333G32Mnkk EM W7PR32EMTRMEB MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ARA1
TM8472T-333G32Mnkk	EMEA	Middle East	LX.TW303.202	TM8472T-333G32Mnkk EM W7PR32EMTRME2 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_AR11
TM8472T-333G32Mnkk	EMEA	Middle East	LX.TW303.203	TM8472T-333G32Mnkk EM W7PR32EMTRME9 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_AR52
TM8472T-333G32Mnkk	EMEA	Norway	LX.TW303.160	TM8472T-333G32Mnkk W7PR32TRNO1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_NO12
TM8472T-333G32Mnkk	EMEA	Norway	LX.TW303.185	TM8472T-333G32Mnkk W7PR32TRNO3 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ENS2

Model	RO	Country	Acer Part No	Description
TM8472T-333G32Mnkk	EMEA	Poland	LX.TW303.183	TM8472T-333G32Mnkk W7PR32TRPL1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_PL72
TM8472T-333G32Mnkk	EMEA	Portugal	LX.TW303.152	TM8472T-333G32Mnkk W7PR32TRPT1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_PT12
TM8472T-333G32Mnkk	EMEA	South Africa	LX.TW303.189	TM8472T-333G32Mnkk EM W7PR32EMTRZA4 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ENA1
TM8472T-333G32Mnkk	EMEA	South Africa	LX.TW303.191	TM8472T-333G32Mnkk EM W7PR32EMTRZA5 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472T-333G32Mnkk	EMEA	South Africa	LX.TW303.193	TM8472T-333G32Mnkk EM W7PR32EMTRZA2 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472T-333G32Mnkk	EMEA	South Africa	LX.TW303.194	TM8472T-333G32Mnkk EM W7PR32EMTRZA1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES81
TM8472T-333G32Mnkk	EMEA	South Africa	LX.TW303.196	TM8472T-333G32Mnkk EM W7PR32EMTRZA6 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_PT11
TM8472T-333G32Mnkk	EMEA	Spain	LX.TW303.164	TM8472T-333G32Mnkk W7PR32TRES1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES52
TM8472T-333G32Mnkk	EMEA	Sweden	LX.TW303.180	TM8472T-333G32Mnkk W7PR32TRSE1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_FI12
TM8472T-333G32Mnkk	EMEA	Switzerland	LX.TW303.182	TM8472T-333G32Mnkk W7PR32TRCH1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_IT42
TM8472T-333G32Mnkk	EMEA	Turkey	LX.TW303.195	TM8472T-333G32Mnkk EM W7PR32EMTRTR1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_TR41
TM8472T-333G32Mnkk	EMEA	UK	LX.TW303.171	TM8472T-333G32Mnkk W7PR32TRGB1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES62
TM8472T-334G16Mnkk	PA	USA	LX.TWC03.004	TM8472T-334G16Mnkk W7PR32TRUS1 MC UMACkk_3 2*2G/ 160/6L3.0/5R/na_bgn_1.3C_MA_FRB4

Model	RO	Country	Acer Part No	Description
TM8472T-334G25Mnkk	EMEA	South Africa	LX.TW303.005	TM8472T-334G25Mnkk EM W7PR32EMTRZA2 MC XPP UMACFkk_3 2*2G/250/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472T-334G32Mnkk	EMEA	South Africa	LX.TW303.006	TM8472T-334G32Mnkk EM W7PR32EMTRZA2 MC XPP UMACFkk_3 2*2G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472T-334G50Mnkk	EMEA	Italy	LX.TW303.302	TM8472T-334G50Mnkk W7PR32TRIT1 MC XPP UMACFkk_3 2*2G/500_L/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_IT11
TM8472T-334G50Mnkk	EMEA	South Africa	LX.TW303.007	TM8472T-334G50Mnkk EM W7PR32EMTRZA2 MC XPP UMACFkk_3 2*2G/500_L/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472T-334G64Mnkk	EMEA	South Africa	LX.TW303.008	TM8472T-334G64Mnkk EM W7PR32EMTRZA2 MC XPP UMACFkk_3 2*2G/640/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472T-352G16Mnkk	EMEA	South Africa	LX.TW303.297	TM8472T-352G16Mnkk EM W7PR32EMTRZA2 MC XPP UMACFkk_3 1*2G/S160G_2.5/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472T-352G25Mnkk	EMEA	Austria	LX.TWC02.015	TM8472T-352G25Mnkk W7HP64TRAT1 MC UMACkk_3 1*2G/250/BT/6L3.0/5R/na_bgn_1.3C_MA_DE61
TM8472T-352G25Mnkk	EMEA	Baltic	LX.TWC02.022	TM8472T-352G25Mnkk W7HP64TRBC5 MC UMACkk_3 1*2G/250/BT/6L3.0/5R/na_bgn_1.3C_MA_LT11
TM8472T-352G25Mnkk	EMEA	Baltic	LX.TWC02.025	TM8472T-352G25Mnkk W7HP64TRBC3 MC UMACkk_3 1*2G/250/BT/6L3.0/5R/na_bgn_1.3C_MA_SV21
TM8472T-352G25Mnkk	EMEA	Baltic	LX.TWC02.028	TM8472T-352G25Mnkk W7HP64TRBC4 MC UMACkk_3 1*2G/250/BT/6L3.0/5R/na_bgn_1.3C_MA_LT11
TM8472T-352G25Mnkk	EMEA	Belgium	LX.TWC02.024	TM8472T-352G25Mnkk W7HP64TRBE1 MC UMACkk_3 1*2G/250/BT/6L3.0/5R/na_bgn_1.3C_MA_NL11
TM8472T-352G25Mnkk	EMEA	Cyprus	LX.TWC02.001	TM8472T-352G25Mnkk W7HP64TRCY1 MC UMACkk_3 1*2G/250/BT/6L3.0/5R/na_bgn_1.3C_MA_ES61
TM8472T-352G25Mnkk	EMEA	Czech	LX.TWC02.016	TM8472T-352G25Mnkk W7HP64TRCZ2 MC UMACkk_3 1*2G/250/BT/6L3.0/5R/na_bgn_1.3C_MA_SK11

Model	RO	Country	Acer Part No	Description
TM8472T-352G25Mnkk	EMEA	Denmark	LX.TWC02.013	TM8472T-352G25Mnkk W7HP64TRDK1 MC UMACKk_3 1*2G/250/BT/6L3.0/5R/na_bgn_1.3C_MA_NO11
TM8472T-352G25Mnkk	EMEA	Denmark	LX.TWC02.017	TM8472T-352G25Mnkk W7HP64TRDK2 MC UMACKk_3 1*2G/250/BT/6L3.0/5R/na_bgn_1.3C_MA_ENS1
TM8472T-352G25Mnkk	EMEA	Finland	LX.TWC02.003	TM8472T-352G25Mnkk W7HP64TRFI2 MC UMACKk_3 1*2G/250/BT/6L3.0/5R/na_bgn_1.3C_MA_FI11
TM8472T-352G25Mnkk	EMEA	France	LX.TWC02.020	TM8472T-352G25Mnkk W7HP64TRFR1 MC UMACKk_3 1*2G/250/BT/6L3.0/5R/na_bgn_1.3C_MA_ES81
TM8472T-352G25Mnkk	EMEA	Germany	LX.TWC02.014	TM8472T-352G25Mnkk W7HP64TRDE1 MC UMACKk_3 1*2G/250/BT/6L3.0/5R/na_bgn_1.3C_MA_DE61
TM8472T-352G25Mnkk	EMEA	Greece	LX.TWC02.002	TM8472T-352G25Mnkk W7HP64TRGR1 MC UMACKk_3 1*2G/250/BT/6L3.0/5R/na_bgn_1.3C_MA_EL31
TM8472T-352G25Mnkk	EMEA	Holland	LX.TWC02.031	TM8472T-352G25Mnkk W7HP64TRNL1 MC UMACKk_3 1*2G/250/BT/6L3.0/5R/na_bgn_1.3C_MA_NL11
TM8472T-352G25Mnkk	EMEA	Hungary	LX.TWC02.029	TM8472T-352G25Mnkk W7HP64TRHU1 MC UMACKk_3 1*2G/250/BT/6L3.0/5R/na_bgn_1.3C_MA_HU11
TM8472T-352G25Mnkk	EMEA	Israel	LX.TWC02.004	TM8472T-352G25Mnkk W7HP64TRIL1 MC UMACKk_3 1*2G/250/BT/6L3.0/5R/na_bgn_1.3C_MA_HE11
TM8472T-352G25Mnkk	EMEA	Italy	LX.TWC02.010	TM8472T-352G25Mnkk W7HP64TRIT1 MC UMACKk_3 1*2G/250/BT/6L3.0/5R/na_bgn_1.3C_MA_IT11
TM8472T-352G25Mnkk	EMEA	Luxembourg	LX.TWC02.018	TM8472T-352G25Mnkk W7HP64TRLU3 MC UMACKk_3 1*2G/250/BT/6L3.0/5R/na_bgn_1.3C_MA_IT41
TM8472T-352G25Mnkk	EMEA	Norway	LX.TWC02.032	TM8472T-352G25Mnkk W7HP64TRNO1 MC UMACKk_3 1*2G/250/BT/6L3.0/5R/na_bgn_1.3C_MA_NO11
TM8472T-352G25Mnkk	EMEA	Poland	LX.TWC02.005	TM8472T-352G25Mnkk W7HP64TRPL1 MC UMACKk_3 1*2G/250/BT/6L3.0/5R/na_bgn_1.3C_MA_PL71
TM8472T-352G25Mnkk	EMEA	Portugal	LX.TWC02.021	TM8472T-352G25Mnkk W7HP64TRPT1 MC UMACKk_3 1*2G/250/BT/6L3.0/5R/na_bgn_1.3C_MA_PT11

Model	RO	Country	Acer Part No	Description
TM8472T-352G25Mnkk	AAP	Singapore	LX.TW303.262	TM8472T-352G25Mnkk W7PR32TRSG1 MC XPP UMACFkk_3 1*2G/250/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ZH31
TM8472T-352G25Mnkk	AAP	Singapore	LX.TW303.263	TM8472T-352G25Mnkk W7PR32TRSG1 MC XPP UMACFkk_3 1*2G/250/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472T-352G25Mnkk	EMEA	Spain	LX.TWC02.027	TM8472T-352G25Mnkk W7HP64TRES1 MC UMACkk_3 1*2G/ 250/BT/6L3.0/5R/ na_bgn_1.3C_MA_ES51
TM8472T-352G25Mnkk	EMEA	Sweden	LX.TWC02.023	TM8472T-352G25Mnkk W7HP64TRSE1 MC UMACkk_3 1*2G/ 250/BT/6L3.0/5R/ na_bgn_1.3C_MA_FI11
TM8472T-352G25Mnkk	EMEA	Switzerland	LX.TWC02.033	TM8472T-352G25Mnkk W7HP64TRCH1 MC UMACkk_3 1*2G/ 250/BT/6L3.0/5R/ na_bgn_1.3C_MA_IT41
TM8472T-352G25Mnkk	EMEA	UK	LX.TWC02.009	TM8472T-352G25Mnkk W7HP64TRGB1 MC UMACkk_3 1*2G/ 250/BT/6L3.0/5R/ na_bgn_1.3C_MA_ES61
TM8472T-352G32Mnkk	AAP	Australia/New Zealand	LX.TW302.051	TM8472T-352G32Mnkk W7HP64TRAU1 MC UMACFkk_3 1*2G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472T-352G32Mnkk	AAP	Australia/New Zealand	LX.TW303.257	TM8472T-352G32Mnkk W7PR32TRAU1 MC XPP UMACFkk_3 1*2G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472T-352G32Mnkk	AAP	Indonesia	LX.TW303.038	TM8472T-352G32Mnkk EM W7PR32EMTRID1 MC XPP UMACFkk_3 1*2G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ID21
TM8472T-352G32Mnkk	AAP	Philippines	LX.TW303.256	TM8472T-352G32Mnkk EM W7PR32EMTRPH1 MC UMACFkk_3 1*2G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472T-352G32Mnkk	AAP	Singapore	LX.TW303.264	TM8472T-352G32Mnkk W7PR32TRSG1 MC XPP UMACFkk_3 1*2G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ZH31
TM8472T-352G32Mnkk	AAP	Singapore	LX.TW303.265	TM8472T-352G32Mnkk W7PR32TRSG1 MC XPP UMACFkk_3 1*2G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472T-352G32Mnkk	EMEA	South Africa	LX.TW303.313	TM8472T-352G32Mnkk EM W7PR32EMTSA2 MC XPP UMACFkk_3 1*2G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61

Model	RO	Country	Acer Part No	Description
TM8472T-352G32Mnkk	AAP	Thailand	LX.TW303.033	TM8472T-352G32Mnkk EM W7PR32EMTRTH1 MC UMACFkk_3 1*2G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_TH41
TM8472T-352G64Mnkk	EMEA	South Africa	LX.TW303.296	TM8472T-352G64Mnkk EM W7PR32EMTRZA2 MC XPP UMACFkk_3 1*2G/640/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472T-353G32Mnkk	PA	ACLA-Spanish	LX.TW302.050	TM8472T-353G32Mnkk EM W7HP64EMTREA1 MC UMACFkk_3 2G+1G/320/6L3.0/5R/na_bgn_FP_1.3C_MA_ES51
TM8472T-353G32Mnkk	EMEA	Algeria	LX.TW303.217	TM8472T-353G32Mnkk EM W7PR32EMTRDZ1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES81
TM8472T-353G32Mnkk	EMEA	Austria	LX.TW302.022	TM8472T-353G32Mnkk W7HP64TRAT1 MC UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_DE61
TM8472T-353G32Mnkk	EMEA	Austria	LX.TW303.230	TM8472T-353G32Mnkk W7PR32TRAT1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_DE62
TM8472T-353G32Mnkk	EMEA	Baltic	LX.TW302.023	TM8472T-353G32Mnkk W7HP64TRBC5 MC UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_LT11
TM8472T-353G32Mnkk	EMEA	Baltic	LX.TW302.026	TM8472T-353G32Mnkk W7HP64TRBC3 MC UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_SV21
TM8472T-353G32Mnkk	EMEA	Baltic	LX.TW302.035	TM8472T-353G32Mnkk W7HP64TRBC4 MC UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_LT11
TM8472T-353G32Mnkk	EMEA	Baltic	LX.TW303.223	TM8472T-353G32Mnkk W7PR32TRBC3 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_SV21
TM8472T-353G32Mnkk	EMEA	Baltic	LX.TW303.224	TM8472T-353G32Mnkk W7PR32TRBC5 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_LT11
TM8472T-353G32Mnkk	EMEA	Baltic	LX.TW303.245	TM8472T-353G32Mnkk W7PR32TRBC4 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_LT11
TM8472T-353G32Mnkk	EMEA	Belgium	LX.TW302.025	TM8472T-353G32Mnkk W7HP64TRBE1 MC UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_NL11

Model	RO	Country	Acer Part No	Description
TM8472T-353G32Mnkk	EMEA	Belgium	LX.TW303.227	TM8472T-353G32Mnkk W7PR32TRBE1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_NL12
TM8472T-353G32Mnkk	PA	Canada	LX.TW303.259	TM8472T-353G32Mnkk W7PR32TRCA2 MC UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_FR82
TM8472T-353G32Mnkk	EMEA	Cyprus	LX.TW302.008	TM8472T-353G32Mnkk W7HP64TRCY1 MC UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472T-353G32Mnkk	EMEA	Cyprus	LX.TW303.240	TM8472T-353G32Mnkk W7PR32TRCY1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES63
TM8472T-353G32Mnkk	EMEA	Czech	LX.TW302.015	TM8472T-353G32Mnkk W7HP64TRCZ2 MC UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_SK11
TM8472T-353G32Mnkk	EMEA	Czech	LX.TW303.221	TM8472T-353G32Mnkk W7PR32TRCZ2 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_SK12
TM8472T-353G32Mnkk	EMEA	Denmark	LX.TW302.013	TM8472T-353G32Mnkk W7HP64TRDK1 MC UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_NO11
TM8472T-353G32Mnkk	EMEA	Denmark	LX.TW302.016	TM8472T-353G32Mnkk W7HP64TRDK2 MC UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ENS1
TM8472T-353G32Mnkk	EMEA	Denmark	LX.TW303.222	TM8472T-353G32Mnkk W7PR32TRDK2 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ENS2
TM8472T-353G32Mnkk	EMEA	Finland	LX.TW302.002	TM8472T-353G32Mnkk W7HP64TRFI2 MC UMACFkk_3 2G+1G/320/BT/6L3.0/ 5R/na_bgn_FP_1.3C_MA_FI11
TM8472T-353G32Mnkk	EMEA	Finland	LX.TW303.229	TM8472T-353G32Mnkk W7PR32TRFI2 MC XPP UMACFkk_3 2G+1G/320/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_FI12
TM8472T-353G32Mnkk	EMEA	France	LX.TW302.019	TM8472T-353G32Mnkk W7HP64TRFR1 MC UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES81
TM8472T-353G32Mnkk	EMEA	France	LX.TW303.234	TM8472T-353G32Mnkk W7PR32TRFR1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES82
TM8472T-353G32Mnkk	EMEA	Germany	LX.TW302.014	TM8472T-353G32Mnkk W7HP64TRDE1 MC UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_DE61

Model	RO	Country	Acer Part No	Description
TM8472T-353G32Mnkk	EMEA	Germany	LX.TW302.052	TM8472T-353G32Mnkk W7HP64TSDE1 MC UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_DE61
TM8472T-353G32Mnkk	EMEA	Germany	LX.TW303.047	TM8472T-353G32Mnkk W7PR32TRDE1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_DE62
TM8472T-353G32Mnkk	EMEA	Germany	LX.TW303.247	TM8472T-353G32Mnkk W7PR32TRDE1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_DE62
TM8472T-353G32Mnkk	EMEA	Germany	LX.TW303.315	TM8472T-353G32Mnkk W7PR32TSDE1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_DE61
TM8472T-353G32Mnkk	EMEA	Greece	LX.TW302.001	TM8472T-353G32Mnkk W7HP64TRGR1 MC UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_EL31
TM8472T-353G32Mnkk	EMEA	Greece	LX.TW303.235	TM8472T-353G32Mnkk W7PR32TRGR1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_EL32
TM8472T-353G32Mnkk	EMEA	Holland	LX.TW302.031	TM8472T-353G32Mnkk W7HP64TRNL1 MC UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_NL11
TM8472T-353G32Mnkk	EMEA	Holland	LX.TW303.249	TM8472T-353G32Mnkk W7PR32TRNL1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_NL12
TM8472T-353G32Mnkk	EMEA	Hungary	LX.TW302.029	TM8472T-353G32Mnkk W7HP64TRHU1 MC UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_HU11
TM8472T-353G32Mnkk	EMEA	Hungary	LX.TW303.236	TM8472T-353G32Mnkk W7PR32TRHU1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_HU12
TM8472T-353G32Mnkk	AAP	India	LX.TW30C.001	TM8472T-353G32Mnkk LINPUS MTIN1 UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_XS11
TM8472T-353G32Mnkk	EMEA	Israel	LX.TW302.003	TM8472T-353G32Mnkk W7HP64TRIL1 MC UMACFkk_3 2G+1G/320/BT/6L3.0/ 5R/na_bgn_FP_1.3C_MA_HE11
TM8472T-353G32Mnkk	EMEA	Israel	LX.TW303.244	TM8472T-353G32Mnkk W7PR32TRIL1 MC XPP UMACFkk_3 2G+1G/320/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_HE53
TM8472T-353G32Mnkk	EMEA	Israel	LX.TW303.246	TM8472T-353G32Mnkk W7PR32TRIL1 MC XPP UMACFkk_3 2G+1G/320/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_HE32

Model	RO	Country	Acer Part No	Description
TM8472T-353G32Mnkk	EMEA	Italy	LX.TW302.010	TM8472T-353G32Mnkk W7HP64TRIT1 MC UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_IT11
TM8472T-353G32Mnkk	EMEA	Italy	LX.TW303.042	TM8472T-353G32Mnkk W7PR32TRIT1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_IT11
TM8472T-353G32Mnkk	EMEA	Italy	LX.TW303.233	TM8472T-353G32Mnkk W7PR32TRIT1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_IT11
TM8472T-353G32Mnkk	EMEA	Luxembourg	LX.TW302.017	TM8472T-353G32Mnkk W7HP64TRLU3 MC UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_IT41
TM8472T-353G32Mnkk	EMEA	Luxembourg	LX.TW303.252	TM8472T-353G32Mnkk W7PR32TRLU3 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_IT42
TM8472T-353G32Mnkk	EMEA	Middle East	LX.TW302.036	TM8472T-353G32Mnkk EM W7HP64EMTRME2 MC UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_AR21
TM8472T-353G32Mnkk	EMEA	Middle East	LX.TW302.037	TM8472T-353G32Mnkk EM W7HP64EMTRME2 MC UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_AR11
TM8472T-353G32Mnkk	EMEA	Middle East	LX.TW302.038	TM8472T-353G32Mnkk EM W7HP64EMTRME4 MC UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_RU61
TM8472T-353G32Mnkk	EMEA	Middle East	LX.TW302.039	TM8472T-353G32Mnkk EM W7HP64EMTRME9 MC UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES81
TM8472T-353G32Mnkk	EMEA	Middle East	LX.TW302.040	TM8472T-353G32Mnkk EM W7HP64EMTRME2 MC UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472T-353G32Mnkk	EMEA	Middle East	LX.TW302.041	TM8472T-353G32Mnkk EM W7HP64EMTRMEB MC UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ARA1
TM8472T-353G32Mnkk	EMEA	Middle East	LX.TW302.044	TM8472T-353G32Mnkk EM W7HP64EMTRME3 MC UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES81
TM8472T-353G32Mnkk	EMEA	Middle East	LX.TW302.048	TM8472T-353G32Mnkk EM W7HP64EMTRME6 MC UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472T-353G32Mnkk	EMEA	Middle East	LX.TW303.204	TM8472T-353G32Mnkk EM W7PR32EMTRME6 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61

Model	RO	Country	Acer Part No	Description
TM8472T-353G32Mnkk	EMEA	Middle East	LX.TW303.205	TM8472T-353G32Mnkk EM W7PR32EMTRME9 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES81
TM8472T-353G32Mnkk	EMEA	Middle East	LX.TW303.207	TM8472T-353G32Mnkk EM W7PR32EMTRME4 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_RU62
TM8472T-353G32Mnkk	EMEA	Middle East	LX.TW303.209	TM8472T-353G32Mnkk EM W7PR32EMTRME2 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_AR21
TM8472T-353G32Mnkk	EMEA	Middle East	LX.TW303.214	TM8472T-353G32Mnkk EM W7PR32EMTRMEB MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472T-353G32Mnkk	EMEA	Middle East	LX.TW303.215	TM8472T-353G32Mnkk EM W7PR32EMTRME3 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES81
TM8472T-353G32Mnkk	EMEA	Middle East	LX.TW303.216	TM8472T-353G32Mnkk EM W7PR32EMTRMEB MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ARA1
TM8472T-353G32Mnkk	EMEA	Middle East	LX.TW303.218	TM8472T-353G32Mnkk EM W7PR32EMTRME2 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_AR11
TM8472T-353G32Mnkk	EMEA	Middle East	LX.TW303.219	TM8472T-353G32Mnkk EM W7PR32EMTRME9 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_AR52
TM8472T-353G32Mnkk	EMEA	Norway	LX.TW302.021	TM8472T-353G32Mnkk W7HP64TRNO3 MC UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ENS2
TM8472T-353G32Mnkk	EMEA	Norway	LX.TW302.032	TM8472T-353G32Mnkk W7HP64TRNO1 MC UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_NO11
TM8472T-353G32Mnkk	EMEA	Norway	LX.TW303.228	TM8472T-353G32Mnkk W7PR32TRNO1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_NO12
TM8472T-353G32Mnkk	EMEA	Norway	LX.TW303.253	TM8472T-353G32Mnkk W7PR32TRNO3 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ENS2
TM8472T-353G32Mnkk	EMEA	Poland	LX.TW302.004	TM8472T-353G32Mnkk W7HP64TRPL1 MC UMACFkk_3 2G+1G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_PL71

Model	RO	Country	Acer Part No	Description
TM8472T-353G32Mnkk	EMEA	Poland	LX.TW303.251	TM8472T-353G32Mnkk W7PR32TRPL1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_PL72
TM8472T-353G32Mnkk	EMEA	Portugal	LX.TW302.020	TM8472T-353G32Mnkk W7HP64TRPT1 MC UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_PT11
TM8472T-353G32Mnkk	EMEA	Portugal	LX.TW303.220	TM8472T-353G32Mnkk W7PR32TRPT1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_PT12
TM8472T-353G32Mnkk	EMEA	South Africa	LX.TW302.042	TM8472T-353G32Mnkk EM W7HP64EMTRZA2 MC UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472T-353G32Mnkk	EMEA	South Africa	LX.TW302.043	TM8472T-353G32Mnkk EM W7HP64EMTRZA4 MC UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ENA1
TM8472T-353G32Mnkk	EMEA	South Africa	LX.TW302.045	TM8472T-353G32Mnkk EM W7HP64EMTRZA6 MC UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_PT11
TM8472T-353G32Mnkk	EMEA	South Africa	LX.TW302.046	TM8472T-353G32Mnkk EM W7HP64EMTRZA5 MC UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472T-353G32Mnkk	EMEA	South Africa	LX.TW302.049	TM8472T-353G32Mnkk EM W7HP64EMTRZA1 MC UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES81
TM8472T-353G32Mnkk	EMEA	South Africa	LX.TW303.206	TM8472T-353G32Mnkk EM W7PR32EMTRZA4 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ENA1
TM8472T-353G32Mnkk	EMEA	South Africa	LX.TW303.208	TM8472T-353G32Mnkk EM W7PR32EMTRZA5 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472T-353G32Mnkk	EMEA	South Africa	LX.TW303.210	TM8472T-353G32Mnkk EM W7PR32EMTRZA2 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472T-353G32Mnkk	EMEA	South Africa	LX.TW303.211	TM8472T-353G32Mnkk EM W7PR32EMTRZA1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES81
TM8472T-353G32Mnkk	EMEA	South Africa	LX.TW303.213	TM8472T-353G32Mnkk EM W7PR32EMTRZA6 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_PT11

Model	RO	Country	Acer Part No	Description
TM8472T-353G32Mnkk	EMEA	Spain	LX.TW302.028	TM8472T-353G32Mnkk W7HP64TRES1 MC UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES51
TM8472T-353G32Mnkk	EMEA	Spain	LX.TW303.232	TM8472T-353G32Mnkk W7PR32TRES1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES52
TM8472T-353G32Mnkk	EMEA	Sweden	LX.TW302.024	TM8472T-353G32Mnkk W7HP64TRSE1 MC UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_FI11
TM8472T-353G32Mnkk	EMEA	Sweden	LX.TW303.248	TM8472T-353G32Mnkk W7PR32TRSE1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_FI12
TM8472T-353G32Mnkk	EMEA	Switzerland	LX.TW302.033	TM8472T-353G32Mnkk W7HP64TRCH1 MC UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_IT41
TM8472T-353G32Mnkk	EMEA	Switzerland	LX.TW303.250	TM8472T-353G32Mnkk W7PR32TRCH1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_IT42
TM8472T-353G32Mnkk	EMEA	Turkey	LX.TW302.047	TM8472T-353G32Mnkk EM W7HP64EMTRTR1 MC UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_TR31
TM8472T-353G32Mnkk	EMEA	Turkey	LX.TW303.212	TM8472T-353G32Mnkk EM W7PR32EMTRTR1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_TR41
TM8472T-353G32Mnkk	EMEA	UK	LX.TW302.009	TM8472T-353G32Mnkk W7HP64TRGB1 MC UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472T-353G32Mnkk	EMEA	UK	LX.TW303.239	TM8472T-353G32Mnkk W7PR32TRGB1 MC XPP UMACFkk_3 2G+1G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES62
TM8472T-354G16Mnkk	EMEA	Algeria	LX.TW303.097	TM8472T-354G16Mnkk EM W7PR32EMTRDZ1 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ES81
TM8472T-354G16Mnkk	EMEA	Austria	LX.TW303.054	TM8472T-354G16Mnkk W7PR32TRAT1 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_DE62
TM8472T-354G16Mnkk	EMEA	Baltic	LX.TW303.052	TM8472T-354G16Mnkk W7PR32TRBC3 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_SV21

Model	RO	Country	Acer Part No	Description
TM8472T-354G16Mnkk	EMEA	Baltic	LX.TW303.062	TM8472T-354G16Mnkk W7PR32TRBC5 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_LT11
TM8472T-354G16Mnkk	EMEA	Baltic	LX.TW303.084	TM8472T-354G16Mnkk W7PR32TRBC4 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_LT11
TM8472T-354G16Mnkk	EMEA	Belgium	LX.TW303.065	TM8472T-354G16Mnkk W7PR32TRBE1 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_NL12
TM8472T-354G16Mnkk	EMEA	Cyprus	LX.TW303.079	TM8472T-354G16Mnkk W7PR32TRCY1 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES63
TM8472T-354G16Mnkk	EMEA	Czech	LX.TW303.050	TM8472T-354G16Mnkk W7PR32TRCZ2 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_SK12
TM8472T-354G16Mnkk	EMEA	Denmark	LX.TW303.051	TM8472T-354G16Mnkk W7PR32TRDK2 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ENS2
TM8472T-354G16Mnkk	EMEA	Finland	LX.TW303.053	TM8472T-354G16Mnkk W7PR32TRFI2 MC XPP UMACFkk_3 2*2G/ S160G_2.5/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_FI12
TM8472T-354G16Mnkk	EMEA	France	LX.TW303.058	TM8472T-354G16Mnkk W7PR32TRFR1 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES82
TM8472T-354G16Mnkk	EMEA	Germany	LX.TW303.086	TM8472T-354G16Mnkk W7PR32TRDE1 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_DE62
TM8472T-354G16Mnkk	EMEA	Germany	LX.TW303.316	TM8472T-354G16Mnkk W7PR32TSDE1 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_DE61
TM8472T-354G16Mnkk	EMEA	Greece	LX.TW303.059	TM8472T-354G16Mnkk W7PR32TRGR1 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_EL32
TM8472T-354G16Mnkk	EMEA	Holland	LX.TW303.088	TM8472T-354G16Mnkk W7PR32TRNL1 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_NL12
TM8472T-354G16Mnkk	EMEA	Hungary	LX.TW303.060	TM8472T-354G16Mnkk W7PR32TRHU1 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_HU12

Model	RO	Country	Acer Part No	Description
TM8472T-354G16Mnkk	EMEA	Israel	LX.TW303.083	TM8472T-354G16Mnkk W7PR32TRIL1 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_HE53
TM8472T-354G16Mnkk	EMEA	Israel	LX.TW303.085	TM8472T-354G16Mnkk W7PR32TRIL1 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_HE32
TM8472T-354G16Mnkk	EMEA	Italy	LX.TW303.057	TM8472T-354G16Mnkk W7PR32TRIT1 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_IT11
TM8472T-354G16Mnkk	EMEA	Luxembourg	LX.TW303.091	TM8472T-354G16Mnkk W7PR32TRLU3 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_IT42
TM8472T-354G16Mnkk	EMEA	Middle East	LX.TW303.067	TM8472T-354G16Mnkk EM W7PR32EMTRME6 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472T-354G16Mnkk	EMEA	Middle East	LX.TW303.068	TM8472T-354G16Mnkk EM W7PR32EMTRME9 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES81
TM8472T-354G16Mnkk	EMEA	Middle East	LX.TW303.070	TM8472T-354G16Mnkk EM W7PR32EMTRME4 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_RU62
TM8472T-354G16Mnkk	EMEA	Middle East	LX.TW303.072	TM8472T-354G16Mnkk EM W7PR32EMTRME2 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_AR21
TM8472T-354G16Mnkk	EMEA	Middle East	LX.TW303.094	TM8472T-354G16Mnkk EM W7PR32EMTRMEB MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472T-354G16Mnkk	EMEA	Middle East	LX.TW303.095	TM8472T-354G16Mnkk EM W7PR32EMTRME3 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES81
TM8472T-354G16Mnkk	EMEA	Middle East	LX.TW303.096	TM8472T-354G16Mnkk EM W7PR32EMTRMEB MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ARA1
TM8472T-354G16Mnkk	EMEA	Middle East	LX.TW303.098	TM8472T-354G16Mnkk EM W7PR32EMTRME2 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_AR11
TM8472T-354G16Mnkk	EMEA	Middle East	LX.TW303.099	TM8472T-354G16Mnkk EM W7PR32EMTRME9 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_AR52

Model	RO	Country	Acer Part No	Description
TM8472T-354G16Mnkk	EMEA	Norway	LX.TW303.066	TM8472T-354G16Mnkk W7PR32TRNO1 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_NO12
TM8472T-354G16Mnkk	EMEA	Norway	LX.TW303.092	TM8472T-354G16Mnkk W7PR32TRNO3 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ENS2
TM8472T-354G16Mnkk	EMEA	Poland	LX.TW303.090	TM8472T-354G16Mnkk W7PR32TRPL1 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_PL72
TM8472T-354G16Mnkk	EMEA	Portugal	LX.TW303.049	TM8472T-354G16Mnkk W7PR32TRPT1 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_PT12
TM8472T-354G16Mnkk	EMEA	South Africa	LX.TW303.069	TM8472T-354G16Mnkk EM W7PR32EMTRZA4 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ENA1
TM8472T-354G16Mnkk	EMEA	South Africa	LX.TW303.071	TM8472T-354G16Mnkk EM W7PR32EMTRZA5 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472T-354G16Mnkk	EMEA	South Africa	LX.TW303.073	TM8472T-354G16Mnkk EM W7PR32EMTRZA2 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472T-354G16Mnkk	EMEA	South Africa	LX.TW303.074	TM8472T-354G16Mnkk EM W7PR32EMTRZA1 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ES81
TM8472T-354G16Mnkk	EMEA	South Africa	LX.TW303.076	TM8472T-354G16Mnkk EM W7PR32EMTRZA6 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_PT11
TM8472T-354G16Mnkk	EMEA	Spain	LX.TW303.056	TM8472T-354G16Mnkk W7PR32TRES1 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES52
TM8472T-354G16Mnkk	EMEA	Sweden	LX.TW303.087	TM8472T-354G16Mnkk W7PR32TRSE1 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_FI12
TM8472T-354G16Mnkk	EMEA	Switzerland	LX.TW303.089	TM8472T-354G16Mnkk W7PR32TRCH1 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_IT42
TM8472T-354G16Mnkk	EMEA	Turkey	LX.TW303.075	TM8472T-354G16Mnkk EM W7PR32EMTRTR1 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_TR41

Model	RO	Country	Acer Part No	Description
TM8472T-354G16Mnkk	EMEA	UK	LX.TW303.078	TM8472T-354G16Mnkk W7PR32TRGB1 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES62
TM8472T-354G25Mnkk	EMEA	Spain	LX.TW303.044	TM8472T-354G25Mnkk W7PR32TRES1 MC XPP UMACFkk_3 2*2G/250/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES52
TM8472T-354G32Mnkk	AAP	Australia/New Zealand	LX.TW303.260	TM8472T-354G32Mnkk W7PR32TRAU1 MC XPP UMACFkk_3 2*2G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472T-354G50Mnkk	EMEA	Czech	LX.TW303.312	TM8472T-354G50Mnkk W7PR32TRCZ2 MC XPP UMACFkk_3 2*2G/500_L/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_SK12
TM8472T-354G50Mnkk	EMEA	Italy	LX.TW303.043	TM8472T-354G50Mnkk W7PR32TRIT1 MC XPP UMACFkk_3 2*2G/500_L/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_IT11
TM8472T-354G64Mnkk	EMEA	South Africa	LX.TW303.298	TM8472T-354G64Mnkk EM W7PR32EMTRZA2 MC XPP UMACFkk_3 2*2G/640/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472T-432G16Mnkk	AAP	Thailand	LX.TW303.034	TM8472T-432G16Mnkk EM W7PR32EMTRTH1 MC UMACFkk_3 1*2G/160/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_TH41
TM8472T-432G32Mnkk	AAP	Singapore	LX.TW303.022	TM8472T-432G32Mnkk W7PR32TRSG1 MC XPP UMACFkk_3 1*2G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ZH31
TM8472T-434G25Mnkk	EMEA	South Africa	LX.TW303.015	TM8472T-434G25Mnkk EM W7PR32EMTRZA2 MC XPP UMACFkk_3 2*2G/250/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472T-434G32Mnkk	EMEA	Germany	LX.TW303.303	TM8472T-434G32Mnkk W7PR32TRDE1 MC XPP UMACFkk_3 2*2G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_DE62
TM8472T-434G32Mnkk	AAP	Singapore	LX.TW303.030	TM8472T-434G32Mnkk W7PR32TRSG1 MC XPP UMACFkk_3 2*2G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ZH31
TM8472T-434G32Mnkk	EMEA	South Africa	LX.TW303.011	TM8472T-434G32Mnkk EM W7PR32EMTRZA2 MC XPP UMACFkk_3 2*2G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472T-434G50Mnkk	EMEA	South Africa	LX.TW303.009	TM8472T-434G50Mnkk EM W7PR32EMTRZA2 MC XPP UMACFkk_3 2*2G/500_L/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61

Model	RO	Country	Acer Part No	Description
TM8472T-434G64Mnkk	EMEA	South Africa	LX.TW303.010	TM8472T-434G64Mnkk EM W7PR32EMTRZA2 MC XPP UMACFkk_3 2*2G/640/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472T-522G32Mnkk	AAP	Australia/New Zealand	LX.TW303.037	TM8472T-522G32Mnkk W7PR32TRAU1 MC XPP UMACFkk_3 1*2G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472T-522G32Mnkk	TWN	GCTWN	LX.TW303.016	TM8472T-522G32Mnkk W7PR32TRTW1 MC XPP UMACFkk_3 1*2G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_TC11
TM8472T-522G32Mnkk	AAP	Singapore	LX.TW303.023	TM8472T-522G32Mnkk W7PR32TRSG1 MC XPP UMACFkk_3 1*2G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ZH31
TM8472T-522G32Mnkk	AAP	Thailand	LX.TW303.306	TM8472T-522G32Mnkk EM W7PR32EMTRTH1 MC UMACFkk_3 1*2G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_TH41
TM8472T-524G16Mnkk	EMEA	South Africa	LX.TW303.288	TM8472T-524G16Mnkk EM W7PR32EMTRZA2 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472T-524G25Mnkk	AAP	Australia/New Zealand	LX.TW303.039	TM8472T-524G25Mnkk W7PR32TRAU1 MC XPP UMACFkk_3 2*2G/250/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472T-524G32Mnkk	AAP	Singapore	LX.TW303.274	TM8472T-524G32Mnkk W7PR32TRSG1 MC XPP UMACFkk_3 2*2G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ZH31
TM8472T-524G32Mnkk	AAP	Singapore	LX.TW303.275	TM8472T-524G32Mnkk W7PR32TRSG1 MC XPP UMACFkk_3 2*2G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472T-524G32Mnkk	WW	WW	S2.TWC02.001	TM8472T-524G32Mnkk W7HP64TWW1 MC UMACkk_3 2*2G/320/BT/6L3.0/5R/na_bgn_1.3C_MA_ES62
TM8472T-524G50Mnkk	PA	Canada	LX.TW303.258	TM8472T-524G50Mnkk W7PR32TRCA2 MC UMACFkk_3 2*2G/500_L/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_FR82
TM8472T-524G50Mnkk	AAP	Singapore	LX.TW303.027	TM8472T-524G50Mnkk W7PR32TRSG1 MC XPP UMACFkk_3 2*2G/500_L/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ZH31
TM8472T-524G64Mnkk	AAP	Singapore	LX.TW303.020	TM8472T-524G64Mnkk W7PR32TRSG1 MC XPP UMACFkk_3 2*2G/640/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ZH31

Model	RO	Country	Acer Part No	Description
TM8472T-524G64Mnkk	EMEA	South Africa	LX.TW303.289	TM8472T-524G64Mnkk EM W7PR32EMTRZA2 MC XPP UMACFkk_3 2*2G/640/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472T-542G25Mnkk	EMEA	South Africa	LX.TWC03.001	TM8472T-542G25Mnkk EM W7PR32EMTRZA2 MC XPP UMACkk_3 1*2G/250/BT/6L3.0/5R/na_bgn_1.3C_MA_ES61
TM8472T-542G32Mnkk	TWN	GCTWN	LX.TW303.018	TM8472T-542G32Mnkk W7PR32TRTW1 MC XPP UMACFkk_3 1*2G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_TC11
TM8472T-542G32Mnkk	AAP	Singapore	LX.TW303.024	TM8472T-542G32Mnkk W7PR32TRSG1 MC XPP UMACFkk_3 1*2G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ZH31
TM8472T-542G32Mnkk	AAP	Thailand	LX.TW303.031	TM8472T-542G32Mnkk EM W7PR32EMTRTH1 MC UMACFkk_3 1*2G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_TH41
TM8472T-542G50Mnkk	AAP	Thailand	LX.TW303.045	TM8472T-542G50Mnkk EM W7PR32EMTRTH1 MC UMACFkk_3 1*2G/500_L/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_TH41
TM8472T-544G32Mnkk	AAP	Singapore	LX.TW303.266	TM8472T-544G32Mnkk W7PR32TRSG1 MC XPP UMACFkk_3 2*2G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ZH31
TM8472T-544G32Mnkk	AAP	Singapore	LX.TW303.267	TM8472T-544G32Mnkk W7PR32TRSG1 MC XPP UMACFkk_3 2*2G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472T-5452G32Mnkk	AAP	Singapore	LX.TW303.278	TM8472T-5452G32Mnkk W7PR32TRSG1 MC XPP UMACFkk_3 1*2G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ZH31
TM8472T-5452G32Mnkk	AAP	Singapore	LX.TW303.279	TM8472T-5452G32Mnkk W7PR32TRSG1 MC XPP UMACFkk_3 1*2G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472T-5452G32Mnkk	AAP	Thailand	LX.TW303.307	TM8472T-5452G32Mnkk EM W7PR32EMTRTH1 MC UMACFkk_3 1*2G/320/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_TH41
TM8472T-5452G50Mnkk	AAP	Philippines	LX.TW303.255	TM8472T-5452G50Mnkk EM W7PR32EMTRPH1 MC UMACFkk_3 1*2G/500_L/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472T-5453G25Mnkk	EMEA	Algeria	LX.TW303.114	TM8472T-5453G25Mnkk EM W7PR32EMTRDZ1 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES81

Model	RO	Country	Acer Part No	Description
TM8472T-5453G25Mnkk	EMEA	Austria	LX.TW303.127	TM8472T-5453G25Mnkk W7PR32TRAT1 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_DE62
TM8472T-5453G25Mnkk	EMEA	Baltic	LX.TW303.120	TM8472T-5453G25Mnkk W7PR32TRBC3 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_SV21
TM8472T-5453G25Mnkk	EMEA	Baltic	LX.TW303.121	TM8472T-5453G25Mnkk W7PR32TRBC5 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_LT11
TM8472T-5453G25Mnkk	EMEA	Baltic	LX.TW303.142	TM8472T-5453G25Mnkk W7PR32TRBC4 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_LT11
TM8472T-5453G25Mnkk	EMEA	Belgium	LX.TW303.124	TM8472T-5453G25Mnkk W7PR32TRBE1 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_NL12
TM8472T-5453G25Mnkk	EMEA	Cyprus	LX.TW303.137	TM8472T-5453G25Mnkk W7PR32TRCY1 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES63
TM8472T-5453G25Mnkk	EMEA	Czech	LX.TW303.118	TM8472T-5453G25Mnkk W7PR32TRCZ2 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_SK12
TM8472T-5453G25Mnkk	EMEA	Denmark	LX.TW303.119	TM8472T-5453G25Mnkk W7PR32TRDK2 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ENS2
TM8472T-5453G25Mnkk	EMEA	Finland	LX.TW303.126	TM8472T-5453G25Mnkk W7PR32TRFI2 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_FI12
TM8472T-5453G25Mnkk	EMEA	France	LX.TW303.131	TM8472T-5453G25Mnkk W7PR32TRFR1 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES82
TM8472T-5453G25Mnkk	EMEA	Germany	LX.TW303.144	TM8472T-5453G25Mnkk W7PR32TRDE1 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_DE62
TM8472T-5453G25Mnkk	EMEA	Germany	LX.TW303.317	TM8472T-5453G25Mnkk W7PR32TSDE1 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_DE61
TM8472T-5453G25Mnkk	EMEA	Greece	LX.TW303.132	TM8472T-5453G25Mnkk W7PR32TRGR1 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_EL32

Model	RO	Country	Acer Part No	Description
TM8472T-5453G25Mnkk	EMEA	Holland	LX.TW303.146	TM8472T-5453G25Mnkk W7PR32TRNL1 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_NL12
TM8472T-5453G25Mnkk	EMEA	Hungary	LX.TW303.133	TM8472T-5453G25Mnkk W7PR32TRHU1 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_HU12
TM8472T-5453G25Mnkk	EMEA	Israel	LX.TW303.141	TM8472T-5453G25Mnkk W7PR32TRIL1 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_HE53
TM8472T-5453G25Mnkk	EMEA	Israel	LX.TW303.143	TM8472T-5453G25Mnkk W7PR32TRIL1 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_HE32
TM8472T-5453G25Mnkk	EMEA	Italy	LX.TW303.130	TM8472T-5453G25Mnkk W7PR32TRIT1 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_IT11
TM8472T-5453G25Mnkk	EMEA	Luxembourg	LX.TW303.149	TM8472T-5453G25Mnkk W7PR32TRLU3 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_IT42
TM8472T-5453G25Mnkk	EMEA	Middle East	LX.TW303.101	TM8472T-5453G25Mnkk EM W7PR32EMTRME6 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472T-5453G25Mnkk	EMEA	Middle East	LX.TW303.102	TM8472T-5453G25Mnkk EM W7PR32EMTRME9 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES81
TM8472T-5453G25Mnkk	EMEA	Middle East	LX.TW303.104	TM8472T-5453G25Mnkk EM W7PR32EMTRME4 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_RU62
TM8472T-5453G25Mnkk	EMEA	Middle East	LX.TW303.106	TM8472T-5453G25Mnkk EM W7PR32EMTRME2 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_AR21
TM8472T-5453G25Mnkk	EMEA	Middle East	LX.TW303.111	TM8472T-5453G25Mnkk EM W7PR32EMTRMEB MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472T-5453G25Mnkk	EMEA	Middle East	LX.TW303.112	TM8472T-5453G25Mnkk EM W7PR32EMTRME3 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES81
TM8472T-5453G25Mnkk	EMEA	Middle East	LX.TW303.113	TM8472T-5453G25Mnkk EM W7PR32EMTRMEB MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ARA1

Model	RO	Country	Acer Part No	Description
TM8472T-5453G25Mnkk	EMEA	Middle East	LX.TW303.115	TM8472T-5453G25Mnkk EM W7PR32EMTRME2 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_AR11
TM8472T-5453G25Mnkk	EMEA	Middle East	LX.TW303.116	TM8472T-5453G25Mnkk EM W7PR32EMTRME9 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_AR52
TM8472T-5453G25Mnkk	EMEA	Norway	LX.TW303.125	TM8472T-5453G25Mnkk W7PR32TRNO1 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_NO12
TM8472T-5453G25Mnkk	EMEA	Norway	LX.TW303.150	TM8472T-5453G25Mnkk W7PR32TRNO3 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ENS2
TM8472T-5453G25Mnkk	EMEA	Poland	LX.TW303.148	TM8472T-5453G25Mnkk W7PR32TRPL1 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_PL72
TM8472T-5453G25Mnkk	EMEA	Portugal	LX.TW303.117	TM8472T-5453G25Mnkk W7PR32TRPT1 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_PT12
TM8472T-5453G25Mnkk	EMEA	South Africa	LX.TW303.103	TM8472T-5453G25Mnkk EM W7PR32EMTRZA4 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ENA1
TM8472T-5453G25Mnkk	EMEA	South Africa	LX.TW303.105	TM8472T-5453G25Mnkk EM W7PR32EMTRZA5 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472T-5453G25Mnkk	EMEA	South Africa	LX.TW303.107	TM8472T-5453G25Mnkk EM W7PR32EMTRZA2 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472T-5453G25Mnkk	EMEA	South Africa	LX.TW303.108	TM8472T-5453G25Mnkk EM W7PR32EMTRZA1 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES81
TM8472T-5453G25Mnkk	EMEA	South Africa	LX.TW303.110	TM8472T-5453G25Mnkk EM W7PR32EMTRZA6 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_PT11
TM8472T-5453G25Mnkk	EMEA	Spain	LX.TW303.129	TM8472T-5453G25Mnkk W7PR32TRES1 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_ES52
TM8472T-5453G25Mnkk	EMEA	Sweden	LX.TW303.145	TM8472T-5453G25Mnkk W7PR32TRSE1 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/na_bgn_FP_1.3C_MA_FI12

Model	RO	Country	Acer Part No	Description
TM8472T-5453G25Mnkk	EMEA	Switzerland	LX.TW303.147	TM8472T-5453G25Mnkk W7PR32TRCH1 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_IT42
TM8472T-5453G25Mnkk	EMEA	Turkey	LX.TW303.109	TM8472T-5453G25Mnkk EM W7PR32EMTRTR1 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_TR41
TM8472T-5453G25Mnkk	EMEA	UK	LX.TW303.136	TM8472T-5453G25Mnkk W7PR32TRGB1 MC XPP UMACFkk_3 2G+1G/250/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES62
TM8472T-5454G16Mnkk	EMEA	South Africa	LX.TW303.287	TM8472T-5454G16Mnkk EM W7PR32EMTRZA2 MC XPP UMACFkk_3 2*2G/S160G_2.5/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472T-5454G32Mnkk	EMEA	Germany	LX.TW303.048	TM8472T-5454G32Mnkk W7PR32TRDE1 MC XPP UMACFkk_3 2*2G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_DE62
TM8472T-5454G32Mnkk	EMEA	South Africa	LX.TW303.314	TM8472T-5454G32Mnkk EM W7PR32EMTSZA2 MC XPP UMACFkk_3 2*2G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472T-5454G64Mnkk	EMEA	South Africa	LX.TW303.286	TM8472T-5454G64Mnkk EM W7PR32EMTRZA2 MC XPP UMACFkk_3 2*2G/640/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472T-622G32Mnkk	AAP	Singapore	LX.TW303.025	TM8472T-622G32Mnkk W7PR32TRSG1 MC XPP UMACFkk_3 1*2G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ZH31
TM8472T-622G32Mnkk	AAP	Thailand	LX.TW303.035	TM8472T-622G32Mnkk EM W7PR32EMTRTH1 MC UMACFkk_3 1*2G/320/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_TH41
TM8472T-622G50Mnkk	AAP	Thailand	LX.TW303.046	TM8472T-622G50Mnkk EM W7PR32EMTRTH1 MC UMACFkk_3 1*2G/500_L/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_TH41
TM8472T-624G50Mnkk	AAP	Singapore	LX.TW303.028	TM8472T-624G50Mnkk W7PR32TRSG1 MC XPP UMACFkk_3 2*2G/500_L/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ZH31
TM8472T-624G50Mnkk	AAP	Thailand	LX.TW303.032	TM8472T-624G50Mnkk EM W7PR32EMTRTH1 MC UMACFkk_3 2*2G/500_L/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_TH41
TM8472T-624G64Mnkk	AAP	Singapore	LX.TW303.029	TM8472T-624G64Mnkk W7PR32TRSG1 MC XPP UMACFkk_3 2*2G/640/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ZH31

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472T-332G16Mnkk	GCTWN	S2.TW303.001	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-332G16Mnkk	GCTWN	S2.TWC03.001	TM8472T_UMACkk_3	Ci3330M	UMA	N
TM8472T-332G16Mnkk	WW	S2.TW303.002	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-332G16Mnkk	WW	S2.TWC03.002	TM8472T_UMACkk_3	Ci3330M	UMA	N
TM8472T-332G25Mnkk	GCTWN	LX.TW303.017	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-332G25Mnkk	South Africa	LX.TW303.001	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-332G32Mnkk	GCTWN	LX.TW303.012	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-332G32Mnkk	Middle East	LX.TW303.041	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-332G32Mnkk	Singapore	LX.TW303.040	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-332G32Mnkk	South Africa	LX.TW303.002	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-332G50Mnkk	GCTWN	LX.TW303.013	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-332G50Mnkk	South Africa	LX.TW303.003	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-332G64Mnkk	South Africa	LX.TW303.004	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G25Mnkk	GCTWN	S2.TW303.007	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G25Mnkk	WW	S2.TW303.008	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	Algeria	LX.TW303.201	TM8472T_UMACFkk_3	Ci3330M	UMA	N

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472T-333G32Mnkk	Austria	LX.TW303.162	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	Baltic	LX.TW303.155	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	Baltic	LX.TW303.156	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	Baltic	LX.TW303.177	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	Belgium	LX.TW303.159	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	Cyprus	LX.TW303.172	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	Czech	LX.TW303.153	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	Denmark	LX.TW303.154	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	Finland	LX.TW303.161	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	France	LX.TW303.166	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	Germany	LX.TW303.179	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	Greece	LX.TW303.167	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	Holland	LX.TW303.181	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	Hungary	LX.TW303.168	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	Israel	LX.TW303.176	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	Israel	LX.TW303.178	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	Italy	LX.TW303.165	TM8472T_UMACFkk_3	Ci3330M	UMA	N

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472T-333G32Mnkk	Italy	LX.TW303.309	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	Italy	LX.TW303.310	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	Italy	LX.TW303.311	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	Luxembourg	LX.TW303.184	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	Middle East	LX.TW303.187	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	Middle East	LX.TW303.188	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	Middle East	LX.TW303.190	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	Middle East	LX.TW303.192	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	Middle East	LX.TW303.197	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	Middle East	LX.TW303.198	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	Middle East	LX.TW303.199	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	Middle East	LX.TW303.202	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	Middle East	LX.TW303.203	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	Norway	LX.TW303.160	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	Norway	LX.TW303.185	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	Poland	LX.TW303.183	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	Portugal	LX.TW303.152	TM8472T_UMACFkk_3	Ci3330M	UMA	N

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472T-333G32Mnkk	South Africa	LX.TW303.189	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	South Africa	LX.TW303.191	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	South Africa	LX.TW303.193	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	South Africa	LX.TW303.194	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	South Africa	LX.TW303.196	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	Spain	LX.TW303.164	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	Sweden	LX.TW303.180	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	Switzerland	LX.TW303.182	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	Turkey	LX.TW303.195	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-333G32Mnkk	UK	LX.TW303.171	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-334G16Mnkk	USA	LX.TWC03.004	TM8472T_UMACkk_3	Ci3330M	UMA	N
TM8472T-334G25Mnkk	South Africa	LX.TW303.005	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-334G32Mnkk	South Africa	LX.TW303.006	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-334G50Mnkk	Italy	LX.TW303.302	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-334G50Mnkk	South Africa	LX.TW303.007	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-334G64Mnkk	South Africa	LX.TW303.008	TM8472T_UMACFkk_3	Ci3330M	UMA	N
TM8472T-352G16Mnkk	South Africa	LX.TW303.297	TM8472T_UMACFkk_3	Ci3350M	UMA	N

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472T-352G25Mnkk	Austria	LX.TWC02.015	TM8472T_UMACkk_3	Ci3350M	UMA	N
TM8472T-352G25Mnkk	Baltic	LX.TWC02.022	TM8472T_UMACkk_3	Ci3350M	UMA	N
TM8472T-352G25Mnkk	Baltic	LX.TWC02.025	TM8472T_UMACkk_3	Ci3350M	UMA	N
TM8472T-352G25Mnkk	Baltic	LX.TWC02.028	TM8472T_UMACkk_3	Ci3350M	UMA	N
TM8472T-352G25Mnkk	Belgium	LX.TWC02.024	TM8472T_UMACkk_3	Ci3350M	UMA	N
TM8472T-352G25Mnkk	Cyprus	LX.TWC02.001	TM8472T_UMACkk_3	Ci3350M	UMA	N
TM8472T-352G25Mnkk	Czech	LX.TWC02.016	TM8472T_UMACkk_3	Ci3350M	UMA	N
TM8472T-352G25Mnkk	Denmark	LX.TWC02.013	TM8472T_UMACkk_3	Ci3350M	UMA	N
TM8472T-352G25Mnkk	Denmark	LX.TWC02.017	TM8472T_UMACkk_3	Ci3350M	UMA	N
TM8472T-352G25Mnkk	Finland	LX.TWC02.003	TM8472T_UMACkk_3	Ci3350M	UMA	N
TM8472T-352G25Mnkk	France	LX.TWC02.020	TM8472T_UMACkk_3	Ci3350M	UMA	N
TM8472T-352G25Mnkk	Germany	LX.TWC02.014	TM8472T_UMACkk_3	Ci3350M	UMA	N
TM8472T-352G25Mnkk	Greece	LX.TWC02.002	TM8472T_UMACkk_3	Ci3350M	UMA	N
TM8472T-352G25Mnkk	Holland	LX.TWC02.031	TM8472T_UMACkk_3	Ci3350M	UMA	N
TM8472T-352G25Mnkk	Hungary	LX.TWC02.029	TM8472T_UMACkk_3	Ci3350M	UMA	N
TM8472T-352G25Mnkk	Israel	LX.TWC02.004	TM8472T_UMACkk_3	Ci3350M	UMA	N
TM8472T-352G25Mnkk	Italy	LX.TWC02.010	TM8472T_UMACkk_3	Ci3350M	UMA	N

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472T-352G25Mnkk	Luxembourg	LX.TWC02.018	TM8472T_UMACck_3	Ci3350M	UMA	N
TM8472T-352G25Mnkk	Norway	LX.TWC02.032	TM8472T_UMACck_3	Ci3350M	UMA	N
TM8472T-352G25Mnkk	Poland	LX.TWC02.005	TM8472T_UMACck_3	Ci3350M	UMA	N
TM8472T-352G25Mnkk	Portugal	LX.TWC02.021	TM8472T_UMACck_3	Ci3350M	UMA	N
TM8472T-352G25Mnkk	Singapore	LX.TW303.262	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-352G25Mnkk	Singapore	LX.TW303.263	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-352G25Mnkk	Spain	LX.TWC02.027	TM8472T_UMACck_3	Ci3350M	UMA	N
TM8472T-352G25Mnkk	Sweden	LX.TWC02.023	TM8472T_UMACck_3	Ci3350M	UMA	N
TM8472T-352G25Mnkk	Switzerland	LX.TWC02.033	TM8472T_UMACck_3	Ci3350M	UMA	N
TM8472T-352G25Mnkk	UK	LX.TWC02.009	TM8472T_UMACck_3	Ci3350M	UMA	N
TM8472T-352G32Mnkk	Australia/New Zealand	LX.TW302.051	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-352G32Mnkk	Australia/New Zealand	LX.TW303.257	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-352G32Mnkk	Indonesia	LX.TW303.038	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-352G32Mnkk	Philippines	LX.TW303.256	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-352G32Mnkk	Singapore	LX.TW303.264	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-352G32Mnkk	Singapore	LX.TW303.265	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-352G32Mnkk	South Africa	LX.TW303.313	TM8472T_UMACFkk_3	Ci3350M	UMA	N

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472T-352G32Mnkk	Thailand	LX.TW303.033	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-352G64Mnkk	South Africa	LX.TW303.296	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	ACLA-Spanish	LX.TW302.050	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Algeria	LX.TW303.217	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Austria	LX.TW302.022	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Austria	LX.TW303.230	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Baltic	LX.TW302.023	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Baltic	LX.TW302.026	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Baltic	LX.TW302.035	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Baltic	LX.TW303.223	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Baltic	LX.TW303.224	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Baltic	LX.TW303.245	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Belgium	LX.TW302.025	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Belgium	LX.TW303.227	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Canada	LX.TW303.259	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Cyprus	LX.TW302.008	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Cyprus	LX.TW303.240	TM8472T_UMACFkk_3	Ci3350M	UMA	N

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472T-353G32Mnkk	Czech	LX.TW302.015	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Czech	LX.TW303.221	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Denmark	LX.TW302.013	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Denmark	LX.TW302.016	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Denmark	LX.TW303.222	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Finland	LX.TW302.002	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Finland	LX.TW303.229	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	France	LX.TW302.019	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	France	LX.TW303.234	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Germany	LX.TW302.014	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Germany	LX.TW302.052	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Germany	LX.TW303.047	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Germany	LX.TW303.247	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Germany	LX.TW303.315	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Greece	LX.TW302.001	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Greece	LX.TW303.235	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Holland	LX.TW302.031	TM8472T_UMACFkk_3	Ci3350M	UMA	N

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472T-353G32Mnkk	Holland	LX.TW303.249	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Hungary	LX.TW302.029	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Hungary	LX.TW303.236	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	India	LX.TW30C.001	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Israel	LX.TW302.003	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Israel	LX.TW303.244	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Israel	LX.TW303.246	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Italy	LX.TW302.010	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Italy	LX.TW303.042	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Italy	LX.TW303.233	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Luxembourg	LX.TW302.017	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Luxembourg	LX.TW303.252	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Middle East	LX.TW302.036	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Middle East	LX.TW302.037	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Middle East	LX.TW302.038	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Middle East	LX.TW302.039	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Middle East	LX.TW302.040	TM8472T_UMACFkk_3	Ci3350M	UMA	N

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472T-353G32Mnkk	Middle East	LX.TW302.041	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Middle East	LX.TW302.044	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Middle East	LX.TW302.048	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Middle East	LX.TW303.204	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Middle East	LX.TW303.205	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Middle East	LX.TW303.207	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Middle East	LX.TW303.209	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Middle East	LX.TW303.214	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Middle East	LX.TW303.215	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Middle East	LX.TW303.216	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Middle East	LX.TW303.218	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Middle East	LX.TW303.219	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Norway	LX.TW302.021	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Norway	LX.TW302.032	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Norway	LX.TW303.228	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Norway	LX.TW303.253	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Poland	LX.TW302.004	TM8472T_UMACFkk_3	Ci3350M	UMA	N

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472T-353G32Mnkk	Poland	LX.TW303.251	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Portugal	LX.TW302.020	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Portugal	LX.TW303.220	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	South Africa	LX.TW302.042	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	South Africa	LX.TW302.043	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	South Africa	LX.TW302.045	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	South Africa	LX.TW302.046	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	South Africa	LX.TW302.049	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	South Africa	LX.TW303.206	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	South Africa	LX.TW303.208	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	South Africa	LX.TW303.210	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	South Africa	LX.TW303.211	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	South Africa	LX.TW303.213	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Spain	LX.TW302.028	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Spain	LX.TW303.232	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Sweden	LX.TW302.024	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Sweden	LX.TW303.248	TM8472T_UMACFkk_3	Ci3350M	UMA	N

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472T-353G32Mnkk	Switzerland	LX.TW302.033	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Switzerland	LX.TW303.250	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Turkey	LX.TW302.047	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	Turkey	LX.TW303.212	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	UK	LX.TW302.009	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-353G32Mnkk	UK	LX.TW303.239	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	Algeria	LX.TW303.097	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	Austria	LX.TW303.054	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	Baltic	LX.TW303.052	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	Baltic	LX.TW303.062	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	Baltic	LX.TW303.084	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	Belgium	LX.TW303.065	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	Cyprus	LX.TW303.079	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	Czech	LX.TW303.050	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	Denmark	LX.TW303.051	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	Finland	LX.TW303.053	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	France	LX.TW303.058	TM8472T_UMACFkk_3	Ci3350M	UMA	N

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472T-354G16Mnkk	Germany	LX.TW303.086	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	Germany	LX.TW303.316	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	Greece	LX.TW303.059	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	Holland	LX.TW303.088	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	Hungary	LX.TW303.060	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	Israel	LX.TW303.083	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	Israel	LX.TW303.085	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	Italy	LX.TW303.057	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	Luxembourg	LX.TW303.091	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	Middle East	LX.TW303.067	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	Middle East	LX.TW303.068	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	Middle East	LX.TW303.070	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	Middle East	LX.TW303.072	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	Middle East	LX.TW303.094	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	Middle East	LX.TW303.095	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	Middle East	LX.TW303.096	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	Middle East	LX.TW303.098	TM8472T_UMACFkk_3	Ci3350M	UMA	N

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472T-354G16Mnkk	Middle East	LX.TW303.099	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	Norway	LX.TW303.066	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	Norway	LX.TW303.092	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	Poland	LX.TW303.090	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	Portugal	LX.TW303.049	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	South Africa	LX.TW303.069	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	South Africa	LX.TW303.071	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	South Africa	LX.TW303.073	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	South Africa	LX.TW303.074	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	South Africa	LX.TW303.076	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	Spain	LX.TW303.056	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	Sweden	LX.TW303.087	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	Switzerland	LX.TW303.089	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	Turkey	LX.TW303.075	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G16Mnkk	UK	LX.TW303.078	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G25Mnkk	Spain	LX.TW303.044	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G32Mnkk	Australia/ New Zealand	LX.TW303.260	TM8472T_UMACFkk_3	Ci3350M	UMA	N

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472T-354G50Mnkk	Czech	LX.TW303.312	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G50Mnkk	Italy	LX.TW303.043	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-354G64Mnkk	South Africa	LX.TW303.298	TM8472T_UMACFkk_3	Ci3350M	UMA	N
TM8472T-432G16Mnkk	Thailand	LX.TW303.034	TM8472T_UMACFkk_3	Ci5430M	UMA	N
TM8472T-432G32Mnkk	Singapore	LX.TW303.022	TM8472T_UMACFkk_3	Ci5430M	UMA	N
TM8472T-434G25Mnkk	South Africa	LX.TW303.015	TM8472T_UMACFkk_3	Ci5430M	UMA	N
TM8472T-434G32Mnkk	Germany	LX.TW303.303	TM8472T_UMACFkk_3	Ci5430M	UMA	N
TM8472T-434G32Mnkk	Singapore	LX.TW303.030	TM8472T_UMACFkk_3	Ci5430M	UMA	N
TM8472T-434G32Mnkk	South Africa	LX.TW303.011	TM8472T_UMACFkk_3	Ci5430M	UMA	N
TM8472T-434G50Mnkk	South Africa	LX.TW303.009	TM8472T_UMACFkk_3	Ci5430M	UMA	N
TM8472T-434G64Mnkk	South Africa	LX.TW303.010	TM8472T_UMACFkk_3	Ci5430M	UMA	N
TM8472T-522G32Mnkk	Australia/ New Zealand	LX.TW303.037	TM8472T_UMACFkk_3	Ci5520M	UMA	N
TM8472T-522G32Mnkk	GCTWN	LX.TW303.016	TM8472T_UMACFkk_3	Ci5520M	UMA	N
TM8472T-522G32Mnkk	Singapore	LX.TW303.023	TM8472T_UMACFkk_3	Ci5520M	UMA	N
TM8472T-522G32Mnkk	Thailand	LX.TW303.306	TM8472T_UMACFkk_3	Ci5520M	UMA	N
TM8472T-524G16Mnkk	South Africa	LX.TW303.288	TM8472T_UMACFkk_3	Ci5520M	UMA	N
TM8472T-524G25Mnkk	Australia/ New Zealand	LX.TW303.039	TM8472T_UMACFkk_3	Ci5520M	UMA	N

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472T-524G32Mnkk	Singapore	LX.TW303.274	TM8472T_UMACFkk_3	Ci5520M	UMA	N
TM8472T-524G32Mnkk	Singapore	LX.TW303.275	TM8472T_UMACFkk_3	Ci5520M	UMA	N
TM8472T-524G32Mnkk	WW	S2.TWC02.001	TM8472T_UMACkk_3	Ci5520M	UMA	N
TM8472T-524G50Mnkk	Canada	LX.TW303.258	TM8472T_UMACFkk_3	Ci5520M	UMA	N
TM8472T-524G50Mnkk	Singapore	LX.TW303.027	TM8472T_UMACFkk_3	Ci5520M	UMA	N
TM8472T-524G64Mnkk	Singapore	LX.TW303.020	TM8472T_UMACFkk_3	Ci5520M	UMA	N
TM8472T-524G64Mnkk	South Africa	LX.TW303.289	TM8472T_UMACFkk_3	Ci5520M	UMA	N
TM8472T-542G25Mnkk	South Africa	LX.TWC03.001	TM8472T_UMACkk_3	Ci5540M	UMA	N
TM8472T-542G32Mnkk	GCTWN	LX.TW303.018	TM8472T_UMACFkk_3	Ci5540M	UMA	N
TM8472T-542G32Mnkk	Singapore	LX.TW303.024	TM8472T_UMACFkk_3	Ci5540M	UMA	N
TM8472T-542G32Mnkk	Thailand	LX.TW303.031	TM8472T_UMACFkk_3	Ci5540M	UMA	N
TM8472T-542G50Mnkk	Thailand	LX.TW303.045	TM8472T_UMACFkk_3	Ci5540M	UMA	N
TM8472T-544G32Mnkk	Singapore	LX.TW303.266	TM8472T_UMACFkk_3	Ci5540M	UMA	N
TM8472T-544G32Mnkk	Singapore	LX.TW303.267	TM8472T_UMACFkk_3	Ci5540M	UMA	N
TM8472T-5452G32Mnkk	Singapore	LX.TW303.278	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5452G32Mnkk	Singapore	LX.TW303.279	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5452G32Mnkk	Thailand	LX.TW303.307	TM8472T_UMACFkk_3	Ci5450M	UMA	N

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472T-5452G50M nkk	Philippines	LX.TW303.255	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25M nkk	Algeria	LX.TW303.114	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25M nkk	Austria	LX.TW303.127	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25M nkk	Baltic	LX.TW303.120	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25M nkk	Baltic	LX.TW303.121	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25M nkk	Baltic	LX.TW303.142	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25M nkk	Belgium	LX.TW303.124	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25M nkk	Cyprus	LX.TW303.137	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25M nkk	Czech	LX.TW303.118	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25M nkk	Denmark	LX.TW303.119	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25M nkk	Finland	LX.TW303.126	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25M nkk	France	LX.TW303.131	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25M nkk	Germany	LX.TW303.144	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25M nkk	Germany	LX.TW303.317	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25M nkk	Greece	LX.TW303.132	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25M nkk	Holland	LX.TW303.146	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25M nkk	Hungary	LX.TW303.133	TM8472T_UMACFkk_3	Ci5450M	UMA	N

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472T-5453G25M nkk	Israel	LX.TW303.141	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25M nkk	Israel	LX.TW303.143	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25M nkk	Italy	LX.TW303.130	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25M nkk	Luxembourg	LX.TW303.149	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25M nkk	Middle East	LX.TW303.101	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25M nkk	Middle East	LX.TW303.102	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25M nkk	Middle East	LX.TW303.104	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25M nkk	Middle East	LX.TW303.106	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25M nkk	Middle East	LX.TW303.111	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25M nkk	Middle East	LX.TW303.112	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25M nkk	Middle East	LX.TW303.113	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25M nkk	Middle East	LX.TW303.115	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25M nkk	Middle East	LX.TW303.116	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25M nkk	Norway	LX.TW303.125	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25M nkk	Norway	LX.TW303.150	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25M nkk	Poland	LX.TW303.148	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25M nkk	Portugal	LX.TW303.117	TM8472T_UMACFkk_3	Ci5450M	UMA	N

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472T-5453G25Mnkk	South Africa	LX.TW303.103	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25Mnkk	South Africa	LX.TW303.105	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25Mnkk	South Africa	LX.TW303.107	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25Mnkk	South Africa	LX.TW303.108	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25Mnkk	South Africa	LX.TW303.110	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25Mnkk	Spain	LX.TW303.129	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25Mnkk	Sweden	LX.TW303.145	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25Mnkk	Switzerland	LX.TW303.147	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25Mnkk	Turkey	LX.TW303.109	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5453G25Mnkk	UK	LX.TW303.136	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5454G16Mnkk	South Africa	LX.TW303.287	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5454G32Mnkk	Germany	LX.TW303.048	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5454G32Mnkk	South Africa	LX.TW303.314	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-5454G64Mnkk	South Africa	LX.TW303.286	TM8472T_UMACFkk_3	Ci5450M	UMA	N
TM8472T-622G32Mnkk	Singapore	LX.TW303.025	TM8472T_UMACFkk_3	Ci7620M	UMA	N
TM8472T-622G32Mnkk	Thailand	LX.TW303.035	TM8472T_UMACFkk_3	Ci7620M	UMA	N
TM8472T-622G50Mnkk	Thailand	LX.TW303.046	TM8472T_UMACFkk_3	Ci7620M	UMA	N

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472T-624G50Mnkk	Singapore	LX.TW303.028	TM8472T_UMACFkk_3	Ci7620M	UMA	N
TM8472T-624G50Mnkk	Thailand	LX.TW303.032	TM8472T_UMACFkk_3	Ci7620M	UMA	N
TM8472T-624G64Mnkk	Singapore	LX.TW303.029	TM8472T_UMACFkk_3	Ci7620M	UMA	N

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472T-332G16Mnkk	GCTWN	S2.TW303.001	SO2GBIII10	N	N160GB5.4KS	NSM8XS
TM8472T-332G16Mnkk	GCTWN	S2.TWC03.001	SO2GBIII10	N	N160GB5.4KS	NSM8XS
TM8472T-332G16Mnkk	WW	S2.TW303.002	SO2GBIII10	N	N160GB5.4KS	NSM8XS
TM8472T-332G16Mnkk	WW	S2.TWC03.002	SO2GBIII10	N	N160GB5.4KS	NSM8XS
TM8472T-332G25Mnkk	GCTWN	LX.TW303.017	SO2GBIII10	N	N250GB5.4KS	NSM8XS
TM8472T-332G25Mnkk	South Africa	LX.TW303.001	SO2GBIII10	N	N250GB5.4KS	NSM8XS
TM8472T-332G32Mnkk	GCTWN	LX.TW303.012	SO2GBIII10	N	N320GB5.4KS	NSM8XS
TM8472T-332G32Mnkk	Middle East	LX.TW303.041	SO2GBIII10	N	N320GB5.4KS	NSM8XS
TM8472T-332G32Mnkk	Singapore	LX.TW303.040	SO2GBIII10	N	N320GB5.4KS	NSM8XS
TM8472T-332G32Mnkk	South Africa	LX.TW303.002	SO2GBIII10	N	N320GB5.4KS	NSM8XS
TM8472T-332G50Mnkk	GCTWN	LX.TW303.013	SO2GBIII10	N	N500GB5.4KS	NSM8XS
TM8472T-332G50Mnkk	South Africa	LX.TW303.003	SO2GBIII10	N	N500GB5.4KS	NSM8XS
TM8472T-332G64Mnkk	South Africa	LX.TW303.004	SO2GBIII10	N	N640GB5.4KS	NSM8XS

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472T-333G25Mnkk	GCTWN	S2.TW303.007	SO1GBIII10	SO2GBIII10	N250GB5.4KS	NSM8XS
TM8472T-333G25Mnkk	WW	S2.TW303.008	SO1GBIII10	SO2GBIII10	N250GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	Algeria	LX.TW303.201	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	Austria	LX.TW303.162	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	Baltic	LX.TW303.155	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	Baltic	LX.TW303.156	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	Baltic	LX.TW303.177	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	Belgium	LX.TW303.159	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	Cyprus	LX.TW303.172	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	Czech	LX.TW303.153	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	Denmark	LX.TW303.154	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	Finland	LX.TW303.161	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	France	LX.TW303.166	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	Germany	LX.TW303.179	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	Greece	LX.TW303.167	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	Holland	LX.TW303.181	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	Hungary	LX.TW303.168	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472T-333G32Mnkk	Israel	LX.TW303.176	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	Israel	LX.TW303.178	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	Italy	LX.TW303.165	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	Italy	LX.TW303.309	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	Italy	LX.TW303.310	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	Italy	LX.TW303.311	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	Luxembourg	LX.TW303.184	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	Middle East	LX.TW303.187	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	Middle East	LX.TW303.188	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	Middle East	LX.TW303.190	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	Middle East	LX.TW303.192	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	Middle East	LX.TW303.197	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	Middle East	LX.TW303.198	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	Middle East	LX.TW303.199	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	Middle East	LX.TW303.202	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	Middle East	LX.TW303.203	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	Norway	LX.TW303.160	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472T-333G32Mnkk	Norway	LX.TW303.185	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	Poland	LX.TW303.183	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	Portugal	LX.TW303.152	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	South Africa	LX.TW303.189	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	South Africa	LX.TW303.191	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	South Africa	LX.TW303.193	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	South Africa	LX.TW303.194	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	South Africa	LX.TW303.196	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	Spain	LX.TW303.164	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	Sweden	LX.TW303.180	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	Switzerland	LX.TW303.182	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	Turkey	LX.TW303.195	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-333G32Mnkk	UK	LX.TW303.171	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-334G16Mnkk	USA	LX.TWC03.004	SO2GBIII10	SO2GBIII10	N160GB5.4KS	NSM8XS
TM8472T-334G25Mnkk	South Africa	LX.TW303.005	SO2GBIII10	SO2GBIII10	N250GB5.4KS	NSM8XS
TM8472T-334G32Mnkk	South Africa	LX.TW303.006	SO2GBIII10	SO2GBIII10	N320GB5.4KS	NSM8XS
TM8472T-334G50Mnkk	Italy	LX.TW303.302	SO2GBIII10	SO2GBIII10	N500GB5.4KS	NSM8XS

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472T-334G50Mnkk	South Africa	LX.TW303.007	SO2GBIII10	SO2GBIII10	N500GB5.4KS	NSM8XS
TM8472T-334G64Mnkk	South Africa	LX.TW303.008	SO2GBIII10	SO2GBIII10	N640GB5.4KS	NSM8XS
TM8472T-352G16Mnkk	South Africa	LX.TW303.297	SO2GBIII10	N	SSD25160	NSM8XS
TM8472T-352G25Mnkk	Austria	LX.TWC02.015	SO2GBIII10	N	N250GB5.4KS	NSM8XS
TM8472T-352G25Mnkk	Baltic	LX.TWC02.022	SO2GBIII10	N	N250GB5.4KS	NSM8XS
TM8472T-352G25Mnkk	Baltic	LX.TWC02.025	SO2GBIII10	N	N250GB5.4KS	NSM8XS
TM8472T-352G25Mnkk	Baltic	LX.TWC02.028	SO2GBIII10	N	N250GB5.4KS	NSM8XS
TM8472T-352G25Mnkk	Belgium	LX.TWC02.024	SO2GBIII10	N	N250GB5.4KS	NSM8XS
TM8472T-352G25Mnkk	Cyprus	LX.TWC02.001	SO2GBIII10	N	N250GB5.4KS	NSM8XS
TM8472T-352G25Mnkk	Czech	LX.TWC02.016	SO2GBIII10	N	N250GB5.4KS	NSM8XS
TM8472T-352G25Mnkk	Denmark	LX.TWC02.013	SO2GBIII10	N	N250GB5.4KS	NSM8XS
TM8472T-352G25Mnkk	Denmark	LX.TWC02.017	SO2GBIII10	N	N250GB5.4KS	NSM8XS
TM8472T-352G25Mnkk	Finland	LX.TWC02.003	SO2GBIII10	N	N250GB5.4KS	NSM8XS
TM8472T-352G25Mnkk	France	LX.TWC02.020	SO2GBIII10	N	N250GB5.4KS	NSM8XS
TM8472T-352G25Mnkk	Germany	LX.TWC02.014	SO2GBIII10	N	N250GB5.4KS	NSM8XS
TM8472T-352G25Mnkk	Greece	LX.TWC02.002	SO2GBIII10	N	N250GB5.4KS	NSM8XS
TM8472T-352G25Mnkk	Holland	LX.TWC02.031	SO2GBIII10	N	N250GB5.4KS	NSM8XS

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472T-352G25Mnkk	Hungary	LX.TWC02.029	SO2GBIII10	N	N250GB5.4KS	NSM8XS
TM8472T-352G25Mnkk	Israel	LX.TWC02.004	SO2GBIII10	N	N250GB5.4KS	NSM8XS
TM8472T-352G25Mnkk	Italy	LX.TWC02.010	SO2GBIII10	N	N250GB5.4KS	NSM8XS
TM8472T-352G25Mnkk	Luxembourg	LX.TWC02.018	SO2GBIII10	N	N250GB5.4KS	NSM8XS
TM8472T-352G25Mnkk	Norway	LX.TWC02.032	SO2GBIII10	N	N250GB5.4KS	NSM8XS
TM8472T-352G25Mnkk	Poland	LX.TWC02.005	SO2GBIII10	N	N250GB5.4KS	NSM8XS
TM8472T-352G25Mnkk	Portugal	LX.TWC02.021	SO2GBIII10	N	N250GB5.4KS	NSM8XS
TM8472T-352G25Mnkk	Singapore	LX.TW303.262	SO2GBIII10	N	N250GB5.4KS	NSM8XS
TM8472T-352G25Mnkk	Singapore	LX.TW303.263	SO2GBIII10	N	N250GB5.4KS	NSM8XS
TM8472T-352G25Mnkk	Spain	LX.TWC02.027	SO2GBIII10	N	N250GB5.4KS	NSM8XS
TM8472T-352G25Mnkk	Sweden	LX.TWC02.023	SO2GBIII10	N	N250GB5.4KS	NSM8XS
TM8472T-352G25Mnkk	Switzerland	LX.TWC02.033	SO2GBIII10	N	N250GB5.4KS	NSM8XS
TM8472T-352G25Mnkk	UK	LX.TWC02.009	SO2GBIII10	N	N250GB5.4KS	NSM8XS
TM8472T-352G32Mnkk	Australia/ New Zealand	LX.TW302.051	SO2GBIII10	N	N320GB5.4KS	NSM8XS
TM8472T-352G32Mnkk	Australia/ New Zealand	LX.TW303.257	SO2GBIII10	N	N320GB5.4KS	NSM8XS
TM8472T-352G32Mnkk	Indonesia	LX.TW303.038	SO2GBIII10	N	N320GB5.4KS	NSM8XS
TM8472T-352G32Mnkk	Philippines	LX.TW303.256	SO2GBIII10	N	N320GB5.4KS	NSM8XS

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472T-352G32Mnkk	Singapore	LX.TW303.264	SO2GBIII10	N	N320GB5.4KS	NSM8XS
TM8472T-352G32Mnkk	Singapore	LX.TW303.265	SO2GBIII10	N	N320GB5.4KS	NSM8XS
TM8472T-352G32Mnkk	South Africa	LX.TW303.313	SO2GBIII10	N	N320GB5.4KS	NSM8XS
TM8472T-352G32Mnkk	Thailand	LX.TW303.033	SO2GBIII10	N	N320GB5.4KS	NSM8XS
TM8472T-352G64Mnkk	South Africa	LX.TW303.296	SO2GBIII10	N	N640GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	ACLA-Spanish	LX.TW302.050	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Algeria	LX.TW303.217	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Austria	LX.TW302.022	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Austria	LX.TW303.230	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Baltic	LX.TW302.023	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Baltic	LX.TW302.026	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Baltic	LX.TW302.035	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Baltic	LX.TW303.223	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Baltic	LX.TW303.224	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Baltic	LX.TW303.245	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Belgium	LX.TW302.025	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Belgium	LX.TW303.227	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472T-353G32Mnkk	Canada	LX.TW303.259	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Cyprus	LX.TW302.008	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Cyprus	LX.TW303.240	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Czech	LX.TW302.015	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Czech	LX.TW303.221	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Denmark	LX.TW302.013	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Denmark	LX.TW302.016	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Denmark	LX.TW303.222	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Finland	LX.TW302.002	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Finland	LX.TW303.229	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	France	LX.TW302.019	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	France	LX.TW303.234	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Germany	LX.TW302.014	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Germany	LX.TW302.052	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Germany	LX.TW303.047	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Germany	LX.TW303.247	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Germany	LX.TW303.315	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472T-353G32Mnkk	Greece	LX.TW302.001	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Greece	LX.TW303.235	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Holland	LX.TW302.031	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Holland	LX.TW303.249	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Hungary	LX.TW302.029	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Hungary	LX.TW303.236	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	India	LX.TW30C.001	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Israel	LX.TW302.003	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Israel	LX.TW303.244	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Israel	LX.TW303.246	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Italy	LX.TW302.010	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Italy	LX.TW303.042	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Italy	LX.TW303.233	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Luxembourg	LX.TW302.017	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Luxembourg	LX.TW303.252	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Middle East	LX.TW302.036	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Middle East	LX.TW302.037	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472T-353G32Mnkk	Middle East	LX.TW302.038	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Middle East	LX.TW302.039	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Middle East	LX.TW302.040	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Middle East	LX.TW302.041	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Middle East	LX.TW302.044	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Middle East	LX.TW302.048	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Middle East	LX.TW303.204	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Middle East	LX.TW303.205	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Middle East	LX.TW303.207	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Middle East	LX.TW303.209	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Middle East	LX.TW303.214	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Middle East	LX.TW303.215	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Middle East	LX.TW303.216	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Middle East	LX.TW303.218	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Middle East	LX.TW303.219	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Norway	LX.TW302.021	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Norway	LX.TW302.032	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472T-353G32Mnkk	Norway	LX.TW303.228	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Norway	LX.TW303.253	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Poland	LX.TW302.004	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Poland	LX.TW303.251	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Portugal	LX.TW302.020	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Portugal	LX.TW303.220	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	South Africa	LX.TW302.042	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	South Africa	LX.TW302.043	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	South Africa	LX.TW302.045	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	South Africa	LX.TW302.046	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	South Africa	LX.TW302.049	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	South Africa	LX.TW303.206	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	South Africa	LX.TW303.208	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	South Africa	LX.TW303.210	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	South Africa	LX.TW303.211	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	South Africa	LX.TW303.213	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Spain	LX.TW302.028	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472T-353G32Mnkk	Spain	LX.TW303.232	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Sweden	LX.TW302.024	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Sweden	LX.TW303.248	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Switzerland	LX.TW302.033	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Switzerland	LX.TW303.250	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Turkey	LX.TW302.047	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	Turkey	LX.TW303.212	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	UK	LX.TW302.009	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-353G32Mnkk	UK	LX.TW303.239	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472T-354G16Mnkk	Algeria	LX.TW303.097	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-354G16Mnkk	Austria	LX.TW303.054	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-354G16Mnkk	Baltic	LX.TW303.052	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-354G16Mnkk	Baltic	LX.TW303.062	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-354G16Mnkk	Baltic	LX.TW303.084	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-354G16Mnkk	Belgium	LX.TW303.065	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-354G16Mnkk	Cyprus	LX.TW303.079	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-354G16Mnkk	Czech	LX.TW303.050	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472T-354G16Mnkk	Denmark	LX.TW303.051	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-354G16Mnkk	Finland	LX.TW303.053	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-354G16Mnkk	France	LX.TW303.058	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-354G16Mnkk	Germany	LX.TW303.086	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-354G16Mnkk	Germany	LX.TW303.316	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-354G16Mnkk	Greece	LX.TW303.059	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-354G16Mnkk	Holland	LX.TW303.088	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-354G16Mnkk	Hungary	LX.TW303.060	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-354G16Mnkk	Israel	LX.TW303.083	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-354G16Mnkk	Israel	LX.TW303.085	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-354G16Mnkk	Italy	LX.TW303.057	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-354G16Mnkk	Luxembourg	LX.TW303.091	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-354G16Mnkk	Middle East	LX.TW303.067	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-354G16Mnkk	Middle East	LX.TW303.068	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-354G16Mnkk	Middle East	LX.TW303.070	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-354G16Mnkk	Middle East	LX.TW303.072	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-354G16Mnkk	Middle East	LX.TW303.094	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472T-354G16Mnkk	Middle East	LX.TW303.095	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-354G16Mnkk	Middle East	LX.TW303.096	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-354G16Mnkk	Middle East	LX.TW303.098	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-354G16Mnkk	Middle East	LX.TW303.099	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-354G16Mnkk	Norway	LX.TW303.066	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-354G16Mnkk	Norway	LX.TW303.092	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-354G16Mnkk	Poland	LX.TW303.090	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-354G16Mnkk	Portugal	LX.TW303.049	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-354G16Mnkk	South Africa	LX.TW303.069	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-354G16Mnkk	South Africa	LX.TW303.071	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-354G16Mnkk	South Africa	LX.TW303.073	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-354G16Mnkk	South Africa	LX.TW303.074	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-354G16Mnkk	South Africa	LX.TW303.076	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-354G16Mnkk	Spain	LX.TW303.056	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-354G16Mnkk	Sweden	LX.TW303.087	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-354G16Mnkk	Switzerland	LX.TW303.089	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-354G16Mnkk	Turkey	LX.TW303.075	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472T-354G16Mnkk	UK	LX.TW303.078	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-354G25Mnkk	Spain	LX.TW303.044	SO2GBIII10	SO2GBIII10	N250GB5.4KS	NSM8XS
TM8472T-354G32Mnkk	Australia/ New Zealand	LX.TW303.260	SO2GBIII10	SO2GBIII10	N320GB5.4KS	NSM8XS
TM8472T-354G50Mnkk	Czech	LX.TW303.312	SO2GBIII10	SO2GBIII10	N500GB5.4KS	NSM8XS
TM8472T-354G50Mnkk	Italy	LX.TW303.043	SO2GBIII10	SO2GBIII10	N500GB5.4KS	NSM8XS
TM8472T-354G64Mnkk	South Africa	LX.TW303.298	SO2GBIII10	SO2GBIII10	N640GB5.4KS	NSM8XS
TM8472T-432G16Mnkk	Thailand	LX.TW303.034	SO2GBIII10	N	N160GB5.4KS	NSM8XS
TM8472T-432G32Mnkk	Singapore	LX.TW303.022	SO2GBIII10	N	N320GB5.4KS	NSM8XS
TM8472T-434G25Mnkk	South Africa	LX.TW303.015	SO2GBIII10	SO2GBIII10	N250GB5.4KS	NSM8XS
TM8472T-434G32Mnkk	Germany	LX.TW303.303	SO2GBIII10	SO2GBIII10	N320GB5.4KS	NSM8XS
TM8472T-434G32Mnkk	Singapore	LX.TW303.030	SO2GBIII10	SO2GBIII10	N320GB5.4KS	NSM8XS
TM8472T-434G32Mnkk	South Africa	LX.TW303.011	SO2GBIII10	SO2GBIII10	N320GB5.4KS	NSM8XS
TM8472T-434G50Mnkk	South Africa	LX.TW303.009	SO2GBIII10	SO2GBIII10	N500GB5.4KS	NSM8XS
TM8472T-434G64Mnkk	South Africa	LX.TW303.010	SO2GBIII10	SO2GBIII10	N640GB5.4KS	NSM8XS
TM8472T-522G32Mnkk	Australia/ New Zealand	LX.TW303.037	SO2GBIII10	N	N320GB5.4KS	NSM8XS
TM8472T-522G32Mnkk	GCTWN	LX.TW303.016	SO2GBIII10	N	N320GB5.4KS	NSM8XS
TM8472T-522G32Mnkk	Singapore	LX.TW303.023	SO2GBIII10	N	N320GB5.4KS	NSM8XS

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472T-522G32Mnkk	Thailand	LX.TW303.306	SO2GBIII10	N	N320GB5.4KS	NSM8XS
TM8472T-524G16Mnkk	South Africa	LX.TW303.288	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-524G25Mnkk	Australia/ New Zealand	LX.TW303.039	SO2GBIII10	SO2GBIII10	N250GB5.4KS	NSM8XS
TM8472T-524G32Mnkk	Singapore	LX.TW303.274	SO2GBIII10	SO2GBIII10	N320GB5.4KS	NSM8XS
TM8472T-524G32Mnkk	Singapore	LX.TW303.275	SO2GBIII10	SO2GBIII10	N320GB5.4KS	NSM8XS
TM8472T-524G32Mnkk	WW	S2.TWC02.001	SO2GBIII10	SO2GBIII10	N320GB5.4KS	NSM8XS
TM8472T-524G50Mnkk	Canada	LX.TW303.258	SO2GBIII10	SO2GBIII10	N500GB5.4KS	NSM8XS
TM8472T-524G50Mnkk	Singapore	LX.TW303.027	SO2GBIII10	SO2GBIII10	N500GB5.4KS	NSM8XS
TM8472T-524G64Mnkk	Singapore	LX.TW303.020	SO2GBIII10	SO2GBIII10	N640GB5.4KS	NSM8XS
TM8472T-524G64Mnkk	South Africa	LX.TW303.289	SO2GBIII10	SO2GBIII10	N640GB5.4KS	NSM8XS
TM8472T-542G25Mnkk	South Africa	LX.TWC03.001	SO2GBIII10	N	N250GB5.4KS	NSM8XS
TM8472T-542G32Mnkk	GCTWN	LX.TW303.018	SO2GBIII10	N	N320GB5.4KS	NSM8XS
TM8472T-542G32Mnkk	Singapore	LX.TW303.024	SO2GBIII10	N	N320GB5.4KS	NSM8XS
TM8472T-542G32Mnkk	Thailand	LX.TW303.031	SO2GBIII10	N	N320GB5.4KS	NSM8XS
TM8472T-542G50Mnkk	Thailand	LX.TW303.045	SO2GBIII10	N	N500GB5.4KS	NSM8XS
TM8472T-544G32Mnkk	Singapore	LX.TW303.266	SO2GBIII10	SO2GBIII10	N320GB5.4KS	NSM8XS
TM8472T-544G32Mnkk	Singapore	LX.TW303.267	SO2GBIII10	SO2GBIII10	N320GB5.4KS	NSM8XS

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472T-5452G32M nkk	Singapore	LX.TW303.278	SO2GBIII10	N	N320GB5.4KS	NSM8XS
TM8472T-5452G32M nkk	Singapore	LX.TW303.279	SO2GBIII10	N	N320GB5.4KS	NSM8XS
TM8472T-5452G32M nkk	Thailand	LX.TW303.307	SO2GBIII10	N	N320GB5.4KS	NSM8XS
TM8472T-5452G50M nkk	Philippines	LX.TW303.255	SO2GBIII10	N	N500GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	Algeria	LX.TW303.114	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	Austria	LX.TW303.127	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	Baltic	LX.TW303.120	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	Baltic	LX.TW303.121	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	Baltic	LX.TW303.142	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	Belgium	LX.TW303.124	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	Cyprus	LX.TW303.137	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	Czech	LX.TW303.118	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	Denmark	LX.TW303.119	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	Finland	LX.TW303.126	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	France	LX.TW303.131	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	Germany	LX.TW303.144	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	Germany	LX.TW303.317	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472T-5453G25M nkk	Greece	LX.TW303.132	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	Holland	LX.TW303.146	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	Hungary	LX.TW303.133	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	Israel	LX.TW303.141	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	Israel	LX.TW303.143	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	Italy	LX.TW303.130	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	Luxembourg	LX.TW303.149	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	Middle East	LX.TW303.101	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	Middle East	LX.TW303.102	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	Middle East	LX.TW303.104	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	Middle East	LX.TW303.106	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	Middle East	LX.TW303.111	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	Middle East	LX.TW303.112	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	Middle East	LX.TW303.113	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	Middle East	LX.TW303.115	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	Middle East	LX.TW303.116	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	Norway	LX.TW303.125	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472T-5453G25M nkk	Norway	LX.TW303.150	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	Poland	LX.TW303.148	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	Portugal	LX.TW303.117	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	South Africa	LX.TW303.103	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	South Africa	LX.TW303.105	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	South Africa	LX.TW303.107	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	South Africa	LX.TW303.108	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	South Africa	LX.TW303.110	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	Spain	LX.TW303.129	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	Sweden	LX.TW303.145	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	Switzerland	LX.TW303.147	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	Turkey	LX.TW303.109	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5453G25M nkk	UK	LX.TW303.136	SO2GBIII10	SO1GBIII10	N250GB5.4KS	NSM8XS
TM8472T-5454G16M nkk	South Africa	LX.TW303.287	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472T-5454G32M nkk	Germany	LX.TW303.048	SO2GBIII10	SO2GBIII10	N320GB5.4KS	NSM8XS
TM8472T-5454G32M nkk	South Africa	LX.TW303.314	SO2GBIII10	SO2GBIII10	N320GB5.4KS	NSM8XS
TM8472T-5454G64M nkk	South Africa	LX.TW303.286	SO2GBIII10	SO2GBIII10	N640GB5.4KS	NSM8XS

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472T-622G32Mnkk	Singapore	LX.TW303.025	SO2GBIII10	N	N320GB5.4KS	NSM8XS
TM8472T-622G32Mnkk	Thailand	LX.TW303.035	SO2GBIII10	N	N320GB5.4KS	NSM8XS
TM8472T-622G50Mnkk	Thailand	LX.TW303.046	SO2GBIII10	N	N500GB5.4KS	NSM8XS
TM8472T-624G50Mnkk	Singapore	LX.TW303.028	SO2GBIII10	SO2GBIII10	N500GB5.4KS	NSM8XS
TM8472T-624G50Mnkk	Thailand	LX.TW303.032	SO2GBIII10	SO2GBIII10	N500GB5.4KS	NSM8XS
TM8472T-624G64Mnkk	Singapore	LX.TW303.029	SO2GBIII10	SO2GBIII10	N640GB5.4KS	NSM8XS

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472T-332G16Mnkk	GCTWN	S2.TW303.001	3rd WiFi 2x2 BGN	N	SS801U	6CELL3.0
TM8472T-332G16Mnkk	GCTWN	S2.TWC03.001	3rd WiFi 2x2 BGN	N	N	6CELL3.0
TM8472T-332G16Mnkk	WW	S2.TW303.002	3rd WiFi 2x2 BGN	N	SS801U	6CELL3.0
TM8472T-332G16Mnkk	WW	S2.TWC03.002	3rd WiFi 2x2 BGN	N	N	6CELL3.0
TM8472T-332G25Mnkk	GCTWN	LX.TW303.017	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-332G25Mnkk	South Africa	LX.TW303.001	3rd WiFi 2x2 BGN	BT 2.1	SS801U	6CELL3.0
TM8472T-332G32Mnkk	GCTWN	LX.TW303.012	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-332G32Mnkk	Middle East	LX.TW303.041	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472T-332G32Mnkk	Singapore	LX.TW303.040	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-332G32Mnkk	South Africa	LX.TW303.002	3rd WiFi 2x2 BGN	BT 2.1	SS801U	6CELL3.0

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472T-332G50Mnkk	GCTWN	LX.TW303.013	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-332G50Mnkk	South Africa	LX.TW303.003	3rd WiFi 2x2 BGN	BT 2.1	SS801U	6CELL3.0
TM8472T-332G64Mnkk	South Africa	LX.TW303.004	3rd WiFi 2x2 BGN	BT 2.1	SS801U	6CELL3.0
TM8472T-333G25Mnkk	GCTWN	S2.TW303.007	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G25Mnkk	WW	S2.TW303.008	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	Algeria	LX.TW303.201	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	Austria	LX.TW303.162	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	Baltic	LX.TW303.155	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	Baltic	LX.TW303.156	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	Baltic	LX.TW303.177	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	Belgium	LX.TW303.159	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	Cyprus	LX.TW303.172	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	Czech	LX.TW303.153	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	Denmark	LX.TW303.154	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	Finland	LX.TW303.161	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	France	LX.TW303.166	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	Germany	LX.TW303.179	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472T-333G32Mnkk	Greece	LX.TW303.167	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	Holland	LX.TW303.181	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	Hungary	LX.TW303.168	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	Israel	LX.TW303.176	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	Israel	LX.TW303.178	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	Italy	LX.TW303.165	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	Italy	LX.TW303.309	3rd WiFi 2x2 BGN	N	SS801U	6CELL3.0
TM8472T-333G32Mnkk	Italy	LX.TW303.310	3rd WiFi 2x2 BGN	N	SS801U	6CELL3.0
TM8472T-333G32Mnkk	Italy	LX.TW303.311	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	Luxembourg	LX.TW303.184	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	Middle East	LX.TW303.187	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	Middle East	LX.TW303.188	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	Middle East	LX.TW303.190	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	Middle East	LX.TW303.192	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	Middle East	LX.TW303.197	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	Middle East	LX.TW303.198	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	Middle East	LX.TW303.199	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472T-333G32Mnkk	Middle East	LX.TW303.202	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	Middle East	LX.TW303.203	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	Norway	LX.TW303.160	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	Norway	LX.TW303.185	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	Poland	LX.TW303.183	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	Portugal	LX.TW303.152	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	South Africa	LX.TW303.189	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	South Africa	LX.TW303.191	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	South Africa	LX.TW303.193	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	South Africa	LX.TW303.194	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	South Africa	LX.TW303.196	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	Spain	LX.TW303.164	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	Sweden	LX.TW303.180	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	Switzerland	LX.TW303.182	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	Turkey	LX.TW303.195	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-333G32Mnkk	UK	LX.TW303.171	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-334G16Mnkk	USA	LX.TWC03.004	3rd WiFi 2x2 BGN	N	N	6CELL3.0

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472T-334G25Mnkk	South Africa	LX.TW303.005	3rd WiFi 2x2 BGN	BT 2.1	SS801U	6CELL3.0
TM8472T-334G32Mnkk	South Africa	LX.TW303.006	3rd WiFi 2x2 BGN	BT 2.1	SS801U	6CELL3.0
TM8472T-334G50Mnkk	Italy	LX.TW303.302	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-334G50Mnkk	South Africa	LX.TW303.007	3rd WiFi 2x2 BGN	BT 2.1	SS801U	6CELL3.0
TM8472T-334G64Mnkk	South Africa	LX.TW303.008	3rd WiFi 2x2 BGN	BT 2.1	SS801U	6CELL3.0
TM8472T-352G16Mnkk	South Africa	LX.TW303.297	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-352G25Mnkk	Austria	LX.TWC02.015	3rd WiFi 2x2 BGN	BT 3.0	N	6CELL3.0
TM8472T-352G25Mnkk	Baltic	LX.TWC02.022	3rd WiFi 2x2 BGN	BT 3.0	N	6CELL3.0
TM8472T-352G25Mnkk	Baltic	LX.TWC02.025	3rd WiFi 2x2 BGN	BT 3.0	N	6CELL3.0
TM8472T-352G25Mnkk	Baltic	LX.TWC02.028	3rd WiFi 2x2 BGN	BT 3.0	N	6CELL3.0
TM8472T-352G25Mnkk	Belgium	LX.TWC02.024	3rd WiFi 2x2 BGN	BT 3.0	N	6CELL3.0
TM8472T-352G25Mnkk	Cyprus	LX.TWC02.001	3rd WiFi 2x2 BGN	BT 3.0	N	6CELL3.0
TM8472T-352G25Mnkk	Czech	LX.TWC02.016	3rd WiFi 2x2 BGN	BT 3.0	N	6CELL3.0
TM8472T-352G25Mnkk	Denmark	LX.TWC02.013	3rd WiFi 2x2 BGN	BT 3.0	N	6CELL3.0
TM8472T-352G25Mnkk	Denmark	LX.TWC02.017	3rd WiFi 2x2 BGN	BT 3.0	N	6CELL3.0
TM8472T-352G25Mnkk	Finland	LX.TWC02.003	3rd WiFi 2x2 BGN	BT 3.0	N	6CELL3.0
TM8472T-352G25Mnkk	France	LX.TWC02.020	3rd WiFi 2x2 BGN	BT 3.0	N	6CELL3.0

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472T-352G25Mnkk	Germany	LX.TWC02.014	3rd WiFi 2x2 BGN	BT 3.0	N	6CELL3.0
TM8472T-352G25Mnkk	Greece	LX.TWC02.002	3rd WiFi 2x2 BGN	BT 3.0	N	6CELL3.0
TM8472T-352G25Mnkk	Holland	LX.TWC02.031	3rd WiFi 2x2 BGN	BT 3.0	N	6CELL3.0
TM8472T-352G25Mnkk	Hungary	LX.TWC02.029	3rd WiFi 2x2 BGN	BT 3.0	N	6CELL3.0
TM8472T-352G25Mnkk	Israel	LX.TWC02.004	3rd WiFi 2x2 BGN	BT 3.0	N	6CELL3.0
TM8472T-352G25Mnkk	Italy	LX.TWC02.010	3rd WiFi 2x2 BGN	BT 3.0	N	6CELL3.0
TM8472T-352G25Mnkk	Luxembourg	LX.TWC02.018	3rd WiFi 2x2 BGN	BT 3.0	N	6CELL3.0
TM8472T-352G25Mnkk	Norway	LX.TWC02.032	3rd WiFi 2x2 BGN	BT 3.0	N	6CELL3.0
TM8472T-352G25Mnkk	Poland	LX.TWC02.005	3rd WiFi 2x2 BGN	BT 3.0	N	6CELL3.0
TM8472T-352G25Mnkk	Portugal	LX.TWC02.021	3rd WiFi 2x2 BGN	BT 3.0	N	6CELL3.0
TM8472T-352G25Mnkk	Singapore	LX.TW303.262	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-352G25Mnkk	Singapore	LX.TW303.263	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-352G25Mnkk	Spain	LX.TWC02.027	3rd WiFi 2x2 BGN	BT 3.0	N	6CELL3.0
TM8472T-352G25Mnkk	Sweden	LX.TWC02.023	3rd WiFi 2x2 BGN	BT 3.0	N	6CELL3.0
TM8472T-352G25Mnkk	Switzerland	LX.TWC02.033	3rd WiFi 2x2 BGN	BT 3.0	N	6CELL3.0
TM8472T-352G25Mnkk	UK	LX.TWC02.009	3rd WiFi 2x2 BGN	BT 3.0	N	6CELL3.0
TM8472T-352G32Mnkk	Australia/ New Zealand	LX.TW302.051	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472T-352G32Mnkk	Australia/ New Zealand	LX.TW303.257	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-352G32Mnkk	Indonesia	LX.TW303.038	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-352G32Mnkk	Philippines	LX.TW303.256	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-352G32Mnkk	Singapore	LX.TW303.264	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-352G32Mnkk	Singapore	LX.TW303.265	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-352G32Mnkk	South Africa	LX.TW303.313	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-352G32Mnkk	Thailand	LX.TW303.033	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-352G64Mnkk	South Africa	LX.TW303.296	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	ACLA-Spanish	LX.TW302.050	3rd WiFi 2x2 BGN	N	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Algeria	LX.TW303.217	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Austria	LX.TW302.022	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Austria	LX.TW303.230	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Baltic	LX.TW302.023	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Baltic	LX.TW302.026	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Baltic	LX.TW302.035	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Baltic	LX.TW303.223	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Baltic	LX.TW303.224	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472T-353G32Mnkk	Baltic	LX.TW303.245	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Belgium	LX.TW302.025	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Belgium	LX.TW303.227	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Canada	LX.TW303.259	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Cyprus	LX.TW302.008	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Cyprus	LX.TW303.240	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Czech	LX.TW302.015	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Czech	LX.TW303.221	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Denmark	LX.TW302.013	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Denmark	LX.TW302.016	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Denmark	LX.TW303.222	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Finland	LX.TW302.002	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Finland	LX.TW303.229	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	France	LX.TW302.019	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	France	LX.TW303.234	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Germany	LX.TW302.014	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Germany	LX.TW302.052	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472T-353G32Mnkk	Germany	LX.TW303.047	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Germany	LX.TW303.247	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Germany	LX.TW303.315	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Greece	LX.TW302.001	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Greece	LX.TW303.235	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Holland	LX.TW302.031	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Holland	LX.TW303.249	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Hungary	LX.TW302.029	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Hungary	LX.TW303.236	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	India	LX.TW30C.001	3rd WiFi 2x2 BGN	BT 2.1	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Israel	LX.TW302.003	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Israel	LX.TW303.244	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Israel	LX.TW303.246	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Italy	LX.TW302.010	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Italy	LX.TW303.042	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Italy	LX.TW303.233	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Luxembourg	LX.TW302.017	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472T-353G32Mnkk	Luxembourg	LX.TW303.252	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Middle East	LX.TW302.036	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Middle East	LX.TW302.037	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Middle East	LX.TW302.038	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Middle East	LX.TW302.039	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Middle East	LX.TW302.040	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Middle East	LX.TW302.041	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Middle East	LX.TW302.044	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Middle East	LX.TW302.048	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Middle East	LX.TW303.204	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Middle East	LX.TW303.205	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Middle East	LX.TW303.207	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Middle East	LX.TW303.209	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Middle East	LX.TW303.214	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Middle East	LX.TW303.215	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Middle East	LX.TW303.216	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Middle East	LX.TW303.218	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472T-353G32Mnkk	Middle East	LX.TW303.219	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Norway	LX.TW302.021	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Norway	LX.TW302.032	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Norway	LX.TW303.228	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Norway	LX.TW303.253	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Poland	LX.TW302.004	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Poland	LX.TW303.251	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Portugal	LX.TW302.020	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Portugal	LX.TW303.220	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	South Africa	LX.TW302.042	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	South Africa	LX.TW302.043	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	South Africa	LX.TW302.045	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	South Africa	LX.TW302.046	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	South Africa	LX.TW302.049	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	South Africa	LX.TW303.206	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	South Africa	LX.TW303.208	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	South Africa	LX.TW303.210	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472T-353G32Mnkk	South Africa	LX.TW303.211	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	South Africa	LX.TW303.213	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Spain	LX.TW302.028	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Spain	LX.TW303.232	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Sweden	LX.TW302.024	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Sweden	LX.TW303.248	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Switzerland	LX.TW302.033	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Switzerland	LX.TW303.250	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Turkey	LX.TW302.047	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	Turkey	LX.TW303.212	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	UK	LX.TW302.009	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-353G32Mnkk	UK	LX.TW303.239	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G16Mnkk	Algeria	LX.TW303.097	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G16Mnkk	Austria	LX.TW303.054	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G16Mnkk	Baltic	LX.TW303.052	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G16Mnkk	Baltic	LX.TW303.062	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G16Mnkk	Baltic	LX.TW303.084	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472T-354G16Mnkk	Belgium	LX.TW303.065	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G16Mnkk	Cyprus	LX.TW303.079	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G16Mnkk	Czech	LX.TW303.050	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G16Mnkk	Denmark	LX.TW303.051	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G16Mnkk	Finland	LX.TW303.053	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G16Mnkk	France	LX.TW303.058	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G16Mnkk	Germany	LX.TW303.086	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G16Mnkk	Germany	LX.TW303.316	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G16Mnkk	Greece	LX.TW303.059	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G16Mnkk	Holland	LX.TW303.088	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G16Mnkk	Hungary	LX.TW303.060	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G16Mnkk	Israel	LX.TW303.083	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G16Mnkk	Israel	LX.TW303.085	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G16Mnkk	Italy	LX.TW303.057	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G16Mnkk	Luxembourg	LX.TW303.091	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G16Mnkk	Middle East	LX.TW303.067	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G16Mnkk	Middle East	LX.TW303.068	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472T-354G16Mnkk	Middle East	LX.TW303.070	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G16Mnkk	Middle East	LX.TW303.072	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G16Mnkk	Middle East	LX.TW303.094	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G16Mnkk	Middle East	LX.TW303.095	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G16Mnkk	Middle East	LX.TW303.096	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G16Mnkk	Middle East	LX.TW303.098	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G16Mnkk	Middle East	LX.TW303.099	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G16Mnkk	Norway	LX.TW303.066	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G16Mnkk	Norway	LX.TW303.092	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G16Mnkk	Poland	LX.TW303.090	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G16Mnkk	Portugal	LX.TW303.049	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G16Mnkk	South Africa	LX.TW303.069	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G16Mnkk	South Africa	LX.TW303.071	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G16Mnkk	South Africa	LX.TW303.073	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G16Mnkk	South Africa	LX.TW303.074	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G16Mnkk	South Africa	LX.TW303.076	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G16Mnkk	Spain	LX.TW303.056	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472T-354G16Mnkk	Sweden	LX.TW303.087	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G16Mnkk	Switzerland	LX.TW303.089	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G16Mnkk	Turkey	LX.TW303.075	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G16Mnkk	UK	LX.TW303.078	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G25Mnkk	Spain	LX.TW303.044	3rd WiFi 2x2 BGN	N	SS801U	6CELL3.0
TM8472T-354G32Mnkk	Australia/ New Zealand	LX.TW303.260	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G50Mnkk	Czech	LX.TW303.312	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G50Mnkk	Italy	LX.TW303.043	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-354G64Mnkk	South Africa	LX.TW303.298	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-432G16Mnkk	Thailand	LX.TW303.034	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-432G32Mnkk	Singapore	LX.TW303.022	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-434G25Mnkk	South Africa	LX.TW303.015	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-434G32Mnkk	Germany	LX.TW303.303	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-434G32Mnkk	Singapore	LX.TW303.030	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-434G32Mnkk	South Africa	LX.TW303.011	3rd WiFi 2x2 BGN	BT 2.1	SS801U	6CELL3.0
TM8472T-434G50Mnkk	South Africa	LX.TW303.009	3rd WiFi 2x2 BGN	BT 2.1	SS801U	6CELL3.0
TM8472T-434G64Mnkk	South Africa	LX.TW303.010	3rd WiFi 2x2 BGN	BT 2.1	SS801U	6CELL3.0

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472T-522G32Mnkk	Australia/ New Zealand	LX.TW303.037	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-522G32Mnkk	GCTWN	LX.TW303.016	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-522G32Mnkk	Singapore	LX.TW303.023	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-522G32Mnkk	Thailand	LX.TW303.306	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-524G16Mnkk	South Africa	LX.TW303.288	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-524G25Mnkk	Australia/ New Zealand	LX.TW303.039	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-524G32Mnkk	Singapore	LX.TW303.274	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-524G32Mnkk	Singapore	LX.TW303.275	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-524G32Mnkk	WW	S2.TWC02.001	3rd WiFi 2x2 BGN	BT 3.0	N	6CELL3.0
TM8472T-524G50Mnkk	Canada	LX.TW303.258	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-524G50Mnkk	Singapore	LX.TW303.027	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-524G64Mnkk	Singapore	LX.TW303.020	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-524G64Mnkk	South Africa	LX.TW303.289	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-542G25Mnkk	South Africa	LX.TWC03.001	3rd WiFi 2x2 BGN	BT 3.0	N	6CELL3.0
TM8472T-542G32Mnkk	GCTWN	LX.TW303.018	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-542G32Mnkk	Singapore	LX.TW303.024	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-542G32Mnkk	Thailand	LX.TW303.031	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472T-542G50Mnkk	Thailand	LX.TW303.045	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-544G32Mnkk	Singapore	LX.TW303.266	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-544G32Mnkk	Singapore	LX.TW303.267	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5452G32Mnkk	Singapore	LX.TW303.278	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5452G32Mnkk	Singapore	LX.TW303.279	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5452G32Mnkk	Thailand	LX.TW303.307	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5452G50Mnkk	Philippines	LX.TW303.255	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25Mnkk	Algeria	LX.TW303.114	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25Mnkk	Austria	LX.TW303.127	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25Mnkk	Baltic	LX.TW303.120	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25Mnkk	Baltic	LX.TW303.121	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25Mnkk	Baltic	LX.TW303.142	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25Mnkk	Belgium	LX.TW303.124	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25Mnkk	Cyprus	LX.TW303.137	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25Mnkk	Czech	LX.TW303.118	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25Mnkk	Denmark	LX.TW303.119	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25Mnkk	Finland	LX.TW303.126	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472T-5453G25M nkk	France	LX.TW303.131	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25M nkk	Germany	LX.TW303.144	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25M nkk	Germany	LX.TW303.317	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25M nkk	Greece	LX.TW303.132	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25M nkk	Holland	LX.TW303.146	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25M nkk	Hungary	LX.TW303.133	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25M nkk	Israel	LX.TW303.141	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25M nkk	Israel	LX.TW303.143	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25M nkk	Italy	LX.TW303.130	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25M nkk	Luxembourg	LX.TW303.149	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25M nkk	Middle East	LX.TW303.101	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25M nkk	Middle East	LX.TW303.102	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25M nkk	Middle East	LX.TW303.104	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25M nkk	Middle East	LX.TW303.106	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25M nkk	Middle East	LX.TW303.111	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25M nkk	Middle East	LX.TW303.112	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25M nkk	Middle East	LX.TW303.113	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472T-5453G25M nkk	Middle East	LX.TW303.115	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25M nkk	Middle East	LX.TW303.116	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25M nkk	Norway	LX.TW303.125	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25M nkk	Norway	LX.TW303.150	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25M nkk	Poland	LX.TW303.148	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25M nkk	Portugal	LX.TW303.117	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25M nkk	South Africa	LX.TW303.103	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25M nkk	South Africa	LX.TW303.105	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25M nkk	South Africa	LX.TW303.107	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25M nkk	South Africa	LX.TW303.108	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25M nkk	South Africa	LX.TW303.110	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25M nkk	Spain	LX.TW303.129	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25M nkk	Sweden	LX.TW303.145	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25M nkk	Switzerland	LX.TW303.147	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25M nkk	Turkey	LX.TW303.109	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5453G25M nkk	UK	LX.TW303.136	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5454G16M nkk	South Africa	LX.TW303.287	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472T-5454G32Mnkk	Germany	LX.TW303.048	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5454G32Mnkk	South Africa	LX.TW303.314	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-5454G64Mnkk	South Africa	LX.TW303.286	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-622G32Mnkk	Singapore	LX.TW303.025	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-622G32Mnkk	Thailand	LX.TW303.035	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-622G50Mnkk	Thailand	LX.TW303.046	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-624G50Mnkk	Singapore	LX.TW303.028	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-624G50Mnkk	Thailand	LX.TW303.032	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472T-624G64Mnkk	Singapore	LX.TW303.029	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0

Acer Aspire 8472TG

Model	RO	Country	Acer Part No	Description
TM8472TG - 332G16Mn kk	WW	GCTWN	S2.TW403.00 1	TM8472TG-332G16Mnkk W7PR32TWW1 MC N11MGE1512CFkk_3V3 1*2G/160/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472TG - 332G16Mn kk	WW	GCTWN	S2.TW503.00 1	TM8472TG-332G16Mnkk W7PR32TWW1 MC N11PGE11GBCFkk_3V3 1*2G/160/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472TG - 332G16Mn kk	WW	GCTWN	S2.TWE03.00 1	TM8472TG-332G16Mnkk W7PR32TWW1 MC N11MGE1512Ckk_3V3 1*2G/160/ 6L3.0/5R/na_bgn_1.3C_MA_ES61
TM8472TG - 332G16Mn kk	WW	WW	S2.TW403.00 2	TM8472TG-332G16Mnkk W7PR32TWW1 MC N11MGE1512CFkk_3V3 1*2G/160/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ES62
TM8472TG - 332G16Mn kk	WW	WW	S2.TW503.00 2	TM8472TG-332G16Mnkk W7PR32TWW1 MC N11PGE11GBCFkk_3V3 1*2G/160/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ES62
TM8472TG - 332G16Mn kk	WW	WW	S2.TWE03.00 2	TM8472TG-332G16Mnkk W7PR32TWW1 MC N11MGE1512Ckk_3V3 1*2G/160/ 6L3.0/5R/na_bgn_1.3C_MA_ES62
TM8472TG - 332G32Mn kk	EMEA	Middle East	LX.TW403.01 6	TM8472TG-332G32Mnkk EM W7PR32EMTRME2 MC XPP N11MGE1512CFkk_3V3 1*2G/320/BT/ 9L3.0/5R/na_bgn_FP_1.3C_MA_AR21
TM8472TG - 332G50Mn kk	TWN	GCTWN	LX.TW403.00 8	TM8472TG-332G50Mnkk W7PR32TRTW1 MC XPP N11MGE1512CFkk_3V3 1*2G/500_L/ BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_TC11
TM8472TG - 334G32Mn kk	CHINA	Hong Kong	LX.TWE02.00 1	TM8472TG-334G32Mnkk W7HP64TRHK2 MC N11MGE1512Ckk_3V3 2*2G/320/BT/ 6L3.0/5R/na_bgn_1.3C_MA_ZH34
TM8472TG - 334G32Mn kk	EMEA	South Africa	LX.TW403.00 1	TM8472TG-334G32Mnkk EM W7PR32EMTRZA2 MC XPP N11MGE1512CFkk_3V3 2*2G/320/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472TG - 334G32Mn kk	EMEA	South Africa	LX.TW503.00 1	TM8472TG-334G32Mnkk EM W7PR32EMTRZA2 MC XPP N11PGE11GBCFkk_3V3 2*2G/320/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472TG - 334G50Mn kk	EMEA	South Africa	LX.TW403.00 2	TM8472TG-334G50Mnkk EM W7PR32EMTRZA2 MC XPP N11MGE1512CFkk_3V3 2*2G/500_L/ BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61

Model	RO	Country	Acer Part No	Description
TM8472TG - 334G50Mn kk	EMEA	South Africa	LX.TW503.00 2	TM8472TG-334G50Mnkk EM W7PR32EMTRZA2 MC XPP N11PGE11GBCFkk_3V3 2*2G/500_L/ BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472TG - 334G64Mn kk	EMEA	South Africa	LX.TW403.00 3	TM8472TG-334G64Mnkk EM W7PR32EMTRZA2 MC XPP N11MGE1512CFkk_3V3 2*2G/640/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472TG - 334G64Mn kk	EMEA	South Africa	LX.TW503.00 3	TM8472TG-334G64Mnkk EM W7PR32EMTRZA2 MC XPP N11PGE11GBCFkk_3V3 2*2G/640/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472TG - 352G16Mn kk	EMEA	South Africa	LX.TW403.111	TM8472TG-352G16Mnkk EM W7PR32EMTRZA2 MC XPP N11MGE1512CFkk_3V3 1*2G/ S160G_2.5/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472TG - 352G32Mn kk	TWN	GCTWN	LX.TW403.00 9	TM8472TG-352G32Mnkk W7PR32TRTW1 MC XPP N11MGE1512CFkk_3V3 1*2G/320/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_TC11
TM8472TG - 352G32Mn kk	AAP	Thailand	LX.TW403.01 1	TM8472TG-352G32Mnkk EM W7PR32EMTRTH1 MC N11MGE1512CFkk_3V3 1*2G/320/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_TH41
TM8472TG - 352G64Mn kk	EMEA	South Africa	LX.TW403.11 0	TM8472TG-352G64Mnkk EM W7PR32EMTRZA2 MC XPP N11MGE1512CFkk_3V3 1*2G/640/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472TG - 353G32Mn kk	EMEA	Poland	LX.TW403.13 1	TM8472TG-353G32Mnkk W7PR32TRPL1 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_PL72
TM8472TG - 354G32Mn kk	EMEA	Germany	LX.TW502.00 1	TM8472TG-354G32Mnkk W7HP64TRDE1 MC N11PGE11GBCFkk_3V3 2*2G/320/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_DE61
TM8472TG - 354G32Mn kk	EMEA	Poland	LX.TW503.02 3	TM8472TG-354G32Mnkk W7PR32TRPL1 MC XPP N11PGE11GBCFkk_3V3 2*2G/320/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_PL72
TM8472TG - 354G64Mn kk	EMEA	South Africa	LX.TW403.11 2	TM8472TG-354G64Mnkk EM W7PR32EMTRZA2 MC XPP N11MGE1512CFkk_3V3 2*2G/640/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472TG - 432G50Mn kk	TWN	GCTWN	LX.TW403.00 7	TM8472TG-432G50Mnkk W7PR32TRTW1 MC XPP N11MGE1512CFkk_3V3 1*2G/500_L/ BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_TC11

Model	RO	Country	Acer Part No	Description
TM8472TG - 434G25Mn kk	WW	GCTWN	S2.TW403.00 3	TM8472TG-434G25Mnkk W7PR32TWW1 MC N11MGE1512CFkk_3V3 2*2G/250/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472TG - 434G25Mn kk	WW	GCTWN	S2.TW403.00 5	TM8472TG-434G25Mnkk W7PR32TWW1 MC N11MGE1512CFkk_3V3 2*2G/250/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472TG - 434G25Mn kk	WW	WW	S2.TW403.00 4	TM8472TG-434G25Mnkk W7PR32TWW1 MC N11MGE1512CFkk_3V3 2*2G/250/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ES62
TM8472TG - 434G32Mn kk	EMEA	Middle East	LX.TW403.01 7	TM8472TG-434G32Mnkk EM W7PR32EMTRME2 MC XPP N11MGE1512CFkk_3V3 2*2G/320/BT/ 9L3.0/5R/na_bgn_FP_1.3C_MA_AR21
TM8472TG - 434G32Mn kk	EMEA	South Africa	LX.TW403.00 4	TM8472TG-434G32Mnkk EM W7PR32EMTRZA2 MC XPP N11MGE1512CFkk_3V3 2*2G/320/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472TG - 434G32Mn kk	EMEA	South Africa	LX.TW503.00 4	TM8472TG-434G32Mnkk EM W7PR32EMTRZA2 MC XPP N11PGE11GBCFkk_3V3 2*2G/320/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472TG - 434G50Mi kk	EMEA	Russia	LX.TW403.01 0	TM8472TG-434G50Mikk W7PR32RUTRRU1 MC XPP N11MGE1512CFkk_3V3 2*2G/500_L/ BT/6L3.0/5R/ na_bg_FP_1.3C_MA_RU61
TM8472TG - 434G50Mn kk	EMEA	South Africa	LX.TW403.00 5	TM8472TG-434G50Mnkk EM W7PR32EMTRZA2 MC XPP N11MGE1512CFkk_3V3 2*2G/500_L/ BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472TG - 434G50Mn kk	EMEA	South Africa	LX.TW503.00 5	TM8472TG-434G50Mnkk EM W7PR32EMTRZA2 MC XPP N11PGE11GBCFkk_3V3 2*2G/500_L/ BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472TG - 434G64Mn kk	EMEA	South Africa	LX.TW403.00 6	TM8472TG-434G64Mnkk EM W7PR32EMTRZA2 MC XPP N11MGE1512CFkk_3V3 2*2G/640/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472TG - 434G64Mn kk	EMEA	South Africa	LX.TW503.00 6	TM8472TG-434G64Mnkk EM W7PR32EMTRZA2 MC XPP N11PGE11GBCFkk_3V3 2*2G/640/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472TG - 522G32Mn kk	AAP	Thailand	LX.TW403.01 2	TM8472TG-522G32Mnkk EM W7PR32EMTRTH1 MC N11MGE1512CFkk_3V3 1*2G/320/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_TH41

Model	RO	Country	Acer Part No	Description
TM8472TG - 522G50Mn kk	TWN	GCTWN	LX.TW403.01 3	TM8472TG-522G50Mnkk W7PR32TRTW1 MC XPP N11MGE1512CFkk_3V3 1*2G/500_L/ BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_TC11
TM8472TG - 524G16Mn kk	EMEA	South Africa	LX.TW403.12 0	TM8472TG-524G16Mnkk EM W7PR32EMTRZA2 MC XPP N11MGE1512CFkk_3V3 2*2G/ S160G_2.5/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472TG - 524G16Mn kk	EMEA	South Africa	LX.TW503.01 8	TM8472TG-524G16Mnkk EM W7PR32EMTRZA2 MC XPP N11PGE11GBCFkk_3V3 2*2G/ S160G_2.5/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472TG - 524G25Mn kk	EMEA	South Africa	LX.TW503.02 2	TM8472TG-524G25Mnkk EM W7PR32EMTRZA2 MC XPP N11PGE11GBCFkk_3V3 2*2G/ 250_7.2K/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472TG - 524G32Mn kk	AAP	Australia/New Zealand	LX.TW503.01 3	TM8472TG-524G32Mnkk W7PR32TRAU1 MC XPP N11PGE11GBCFkk_3V3 2*2G/320/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472TG - 524G32Mn kk	AAP	Singapore	LX.TW403.01 9	TM8472TG-524G32Mnkk W7PR32TRSG1 MC N11MGE1512CFkk_3V3 2*2G/320/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ZH31
TM8472TG - 524G32Mn kk	AAP	Singapore	LX.TW403.09 3	TM8472TG-524G32Mnkk W7PR32TRSG1 MC XPP N11MGE1512CFkk_3V3 2*2G/320/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ZH31
TM8472TG - 524G32Mn kk	AAP	Singapore	LX.TW403.09 4	TM8472TG-524G32Mnkk W7PR32TRSG1 MC XPP N11MGE1512CFkk_3V3 2*2G/320/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472TG - 524G32Mn kk	EMEA	South Africa	LX.TW503.02 1	TM8472TG-524G32Mnkk EM W7PR32EMTRZA2 MC XPP N11PGE11GBCFkk_3V3 2*2G/ 320_7.2K/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472TG - 524G50Mn kk	AAP	Singapore	LX.TW503.00 7	TM8472TG-524G50Mnkk W7PR32TRSG1 MC XPP N11PGE11GBCFkk_3V3 2*2G/500_L/ BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ZH31
TM8472TG - 524G50Mn kk	EMEA	South Africa	LX.TW503.02 0	TM8472TG-524G50Mnkk EM W7PR32EMTRZA2 MC XPP N11PGE11GBCFkk_3V3 2*2G/ 500_7.2K/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472TG - 524G64Mn kk	AAP	Singapore	LX.TW503.01 1	TM8472TG-524G64Mnkk W7PR32TRSG1 MC XPP N11PGE11GBCFkk_3V3 2*2G/640/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ZH31

Model	RO	Country	Acer Part No	Description
TM8472TG - 524G64Mn kk	EMEA	South Africa	LX.TW403.12 1	TM8472TG-524G64Mnkk EM W7PR32EMTRZA2 MC XPP N11MGE1512CFkk_3V3 2*2G/640/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472TG - 524G64Mn kk	EMEA	South Africa	LX.TW503.01 9	TM8472TG-524G64Mnkk EM W7PR32EMTRZA2 MC XPP N11PGE11GBCFkk_3V3 2*2G/640/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472TG - 542G32Mn kk	AAP	Thailand	LX.TW403.01 4	TM8472TG-542G32Mnkk EM W7PR32EMTRTH1 MC N11MGE1512CFkk_3V3 1*2G/320/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_TH41
TM8472TG - 542G50Mn kk	AAP	Thailand	LX.TW403.02 5	TM8472TG-542G50Mnkk EM W7PR32EMTRTH1 MC N11MGE1512CFkk_3V3 1*2G/500_L/ BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_TH41
TM8472TG - 544G16Mn kk	WW	GCTWN	S2.TW403.00 7	TM8472TG-544G16Mnkk W7PR32TWW1 MC N11MGE1512CFkk_3V3 2*2G/ S160G_2.5/BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472TG - 544G16Mn kk	WW	WW	S2.TW403.00 8	TM8472TG-544G16Mnkk W7PR32TWW1 MC N11MGE1512CFkk_3V3 2*2G/ S160G_2.5/BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_ES62
TM8472TG - 544G50Mn kk	AAP	Singapore	LX.TW403.09 9	TM8472TG-544G50Mnkk W7PR32TRSG1 MC XPP N11MGE1512CFkk_3V3 2*2G/500_L/ BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ZH31
TM8472TG - 544G50Mn kk	AAP	Singapore	LX.TW403.10 1	TM8472TG-544G50Mnkk W7PR32TRSG1 MC XPP N11MGE1512CFkk_3V3 2*2G/500_L/ BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472TG - 544G50Mn kk	AAP	Singapore	LX.TW503.00 8	TM8472TG-544G50Mnkk W7PR32TRSG1 MC XPP N11PGE11GBCFkk_3V3 2*2G/500_L/ BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ZH31
TM8472TG - 5452G32M nkk	AAP	Thailand	LX.TW403.12 5	TM8472TG-5452G32Mnkk EM W7PR32EMTRTH1 MC N11MGE1512CFkk_3V3 1*2G/320/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_TH41
TM8472TG - 5452G50M nkk	AAP	Malaysia	LX.TW403.13 3	TM8472TG-5452G50Mnkk EM W7PR32EMTRMY1 MC N11MGE1512CFkk_3V3 1*2G/500_L/ BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61

Model	RO	Country	Acer Part No	Description
TM8472TG - 5453G32M nkk	EMEA	Algeria	LX.TW403.04 6	TM8472TG-5453G32Mnkk EM W7PR32EMTRDZ1 MC N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_ES81
TM8472TG - 5453G32M nkk	EMEA	Algeria	LX.TW403.09 0	TM8472TG-5453G32Mnkk EM W7PR32EMTRDZ1 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_ES81
TM8472TG - 5453G32M nkk	EMEA	Austria	LX.TW403.05 2	TM8472TG-5453G32Mnkk W7PR32TRAT1 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_DE62
TM8472TG - 5453G32M nkk	EMEA	Baltic	LX.TW403.03 8	TM8472TG-5453G32Mnkk W7PR32TRBC3 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_SV21
TM8472TG - 5453G32M nkk	EMEA	Baltic	LX.TW403.03 9	TM8472TG-5453G32Mnkk W7PR32TRBC5 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_LT11
TM8472TG - 5453G32M nkk	EMEA	Baltic	LX.TW403.06 7	TM8472TG-5453G32Mnkk W7PR32TRBC4 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_LT11
TM8472TG - 5453G32M nkk	EMEA	Belgium	LX.TW403.04 2	TM8472TG-5453G32Mnkk W7PR32TRBE1 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_NL12
TM8472TG - 5453G32M nkk	EMEA	Cyprus	LX.TW403.06 2	TM8472TG-5453G32Mnkk W7PR32TRCY1 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_ES63
TM8472TG - 5453G32M nkk	EMEA	Czech	LX.TW403.05 0	TM8472TG-5453G32Mnkk W7PR32TRCZ2 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_SK12
TM8472TG - 5453G32M nkk	EMEA	Denmark	LX.TW403.03 7	TM8472TG-5453G32Mnkk W7PR32TRDK2 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_ENS2
TM8472TG - 5453G32M nkk	EMEA	Finland	LX.TW403.05 1	TM8472TG-5453G32Mnkk W7PR32TRFI2 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_FI12

Model	RO	Country	Acer Part No	Description
TM8472TG - 5453G32M nkk	EMEA	France	LX.TW403.05 6	TM8472TG-5453G32Mnkk W7PR32TRFR1 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_ES82
TM8472TG - 5453G32M nkk	EMEA	Germany	LX.TW403.06 9	TM8472TG-5453G32Mnkk W7PR32TRDE1 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_DE62
TM8472TG - 5453G32M nkk	EMEA	Greece	LX.TW403.05 7	TM8472TG-5453G32Mnkk W7PR32TRGR1 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_EL32
TM8472TG - 5453G32M nkk	EMEA	Holland	LX.TW403.07 1	TM8472TG-5453G32Mnkk W7PR32TRNL1 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_NL12
TM8472TG - 5453G32M nkk	EMEA	Hungary	LX.TW403.05 8	TM8472TG-5453G32Mnkk W7PR32TRHU1 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_HU12
TM8472TG - 5453G32M nkk	EMEA	Israel	LX.TW403.06 6	TM8472TG-5453G32Mnkk W7PR32TRIL1 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_HE53
TM8472TG - 5453G32M nkk	EMEA	Israel	LX.TW403.06 8	TM8472TG-5453G32Mnkk W7PR32TRIL1 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_HE32
TM8472TG - 5453G32M nkk	EMEA	Italy	LX.TW403.05 5	TM8472TG-5453G32Mnkk W7PR32TRIT1 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_IT11
TM8472TG - 5453G32M nkk	EMEA	Luxembourg	LX.TW403.07 4	TM8472TG-5453G32Mnkk W7PR32TRLU3 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_IT42
TM8472TG - 5453G32M nkk	EMEA	Middle East	LX.TW403.02 6	TM8472TG-5453G32Mnkk EM W7PR32EMTRME6 MC N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472TG - 5453G32M nkk	EMEA	Middle East	LX.TW403.02 7	TM8472TG-5453G32Mnkk EM W7PR32EMTRME9 MC N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_ES81

Model	RO	Country	Acer Part No	Description
TM8472TG - 5453G32M nkk	EMEA	Middle East	LX.TW403.02 9	TM8472TG-5453G32Mnkk EM W7PR32EMTRME4 MC N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_RU62
TM8472TG - 5453G32M nkk	EMEA	Middle East	LX.TW403.03 1	TM8472TG-5453G32Mnkk EM W7PR32EMTRME2 MC N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_AR21
TM8472TG - 5453G32M nkk	EMEA	Middle East	LX.TW403.03 6	TM8472TG-5453G32Mnkk EM W7PR32EMTRMEB MC N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472TG - 5453G32M nkk	EMEA	Middle East	LX.TW403.04 4	TM8472TG-5453G32Mnkk EM W7PR32EMTRME3 MC N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_ES81
TM8472TG - 5453G32M nkk	EMEA	Middle East	LX.TW403.04 5	TM8472TG-5453G32Mnkk EM W7PR32EMTRMEB MC N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_ARA1
TM8472TG - 5453G32M nkk	EMEA	Middle East	LX.TW403.04 7	TM8472TG-5453G32Mnkk EM W7PR32EMTRME2 MC N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_AR11
TM8472TG - 5453G32M nkk	EMEA	Middle East	LX.TW403.04 8	TM8472TG-5453G32Mnkk EM W7PR32EMTRME9 MC N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_AR52
TM8472TG - 5453G32M nkk	EMEA	Middle East	LX.TW403.07 7	TM8472TG-5453G32Mnkk EM W7PR32EMTRME6 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472TG - 5453G32M nkk	EMEA	Middle East	LX.TW403.07 8	TM8472TG-5453G32Mnkk EM W7PR32EMTRME9 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_ES81
TM8472TG - 5453G32M nkk	EMEA	Middle East	LX.TW403.08 0	TM8472TG-5453G32Mnkk EM W7PR32EMTRME4 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_RU62
TM8472TG - 5453G32M nkk	EMEA	Middle East	LX.TW403.08 2	TM8472TG-5453G32Mnkk EM W7PR32EMTRME2 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_AR21

Model	RO	Country	Acer Part No	Description
TM8472TG - 5453G32M nkk	EMEA	Middle East	LX.TW403.08 7	TM8472TG-5453G32Mnkk EM W7PR32EMTRMEB MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472TG - 5453G32M nkk	EMEA	Middle East	LX.TW403.08 8	TM8472TG-5453G32Mnkk EM W7PR32EMTRME3 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_ES81
TM8472TG - 5453G32M nkk	EMEA	Middle East	LX.TW403.08 9	TM8472TG-5453G32Mnkk EM W7PR32EMTRMEB MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_ARA1
TM8472TG - 5453G32M nkk	EMEA	Middle East	LX.TW403.09 1	TM8472TG-5453G32Mnkk EM W7PR32EMTRME2 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_AR11
TM8472TG - 5453G32M nkk	EMEA	Middle East	LX.TW403.09 2	TM8472TG-5453G32Mnkk EM W7PR32EMTRME9 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_AR52
TM8472TG - 5453G32M nkk	EMEA	Norway	LX.TW403.04 3	TM8472TG-5453G32Mnkk W7PR32TRNO1 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_NO12
TM8472TG - 5453G32M nkk	EMEA	Norway	LX.TW403.07 5	TM8472TG-5453G32Mnkk W7PR32TRNO3 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_ENS2
TM8472TG - 5453G32M nkk	EMEA	Poland	LX.TW403.07 3	TM8472TG-5453G32Mnkk W7PR32TRPL1 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_PL72
TM8472TG - 5453G32M nkk	EMEA	Portugal	LX.TW403.04 9	TM8472TG-5453G32Mnkk W7PR32TRPT1 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_PT12
TM8472TG - 5453G32M nkk	EMEA	South Africa	LX.TW403.02 8	TM8472TG-5453G32Mnkk EM W7PR32EMTRZA4 MC N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_ENA1
TM8472TG - 5453G32M nkk	EMEA	South Africa	LX.TW403.03 0	TM8472TG-5453G32Mnkk EM W7PR32EMTRZA5 MC N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_ES61

Model	RO	Country	Acer Part No	Description
TM8472TG - 5453G32M nkk	EMEA	South Africa	LX.TW403.03 2	TM8472TG-5453G32Mnkk EM W7PR32EMTRZA2 MC N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472TG - 5453G32M nkk	EMEA	South Africa	LX.TW403.03 3	TM8472TG-5453G32Mnkk EM W7PR32EMTRZA1 MC N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_ES81
TM8472TG - 5453G32M nkk	EMEA	South Africa	LX.TW403.03 5	TM8472TG-5453G32Mnkk EM W7PR32EMTRZA6 MC N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_PT11
TM8472TG - 5453G32M nkk	EMEA	South Africa	LX.TW403.07 9	TM8472TG-5453G32Mnkk EM W7PR32EMTRZA4 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_ENA1
TM8472TG - 5453G32M nkk	EMEA	South Africa	LX.TW403.08 1	TM8472TG-5453G32Mnkk EM W7PR32EMTRZA5 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472TG - 5453G32M nkk	EMEA	South Africa	LX.TW403.08 3	TM8472TG-5453G32Mnkk EM W7PR32EMTRZA2 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472TG - 5453G32M nkk	EMEA	South Africa	LX.TW403.08 4	TM8472TG-5453G32Mnkk EM W7PR32EMTRZA1 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_ES81
TM8472TG - 5453G32M nkk	EMEA	South Africa	LX.TW403.08 6	TM8472TG-5453G32Mnkk EM W7PR32EMTRZA6 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_PT11
TM8472TG - 5453G32M nkk	EMEA	Spain	LX.TW403.05 4	TM8472TG-5453G32Mnkk W7PR32TRES1 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_ES52
TM8472TG - 5453G32M nkk	EMEA	Sweden	LX.TW403.07 0	TM8472TG-5453G32Mnkk W7PR32TRSE1 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_FI12
TM8472TG - 5453G32M nkk	EMEA	Switzerland	LX.TW403.07 2	TM8472TG-5453G32Mnkk W7PR32TRCH1 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_IT42

Model	RO	Country	Acer Part No	Description
TM8472TG - 5453G32M nkk	EMEA	Turkey	LX.TW403.03 4	TM8472TG-5453G32Mnkk EM W7PR32EMTRTR1 MC N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_TR41
TM8472TG - 5453G32M nkk	EMEA	Turkey	LX.TW403.08 5	TM8472TG-5453G32Mnkk EM W7PR32EMTRTR1 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_TR41
TM8472TG - 5453G32M nkk	EMEA	UK	LX.TW403.06 1	TM8472TG-5453G32Mnkk W7PR32TRGB1 MC XPP N11MGE1512CFkk_3V3 2G+1G/320/ BT/9L3.0/5R/ na_bgn_FP_1.3C_MA_ES62
TM8472TG - 5454G16M nkk	EMEA	South Africa	LX.TW403.11 9	TM8472TG-5454G16Mnkk EM W7PR32EMTRZA2 MC XPP N11MGE1512CFkk_3V3 2*2G/ S160G_2.5/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472TG - 5454G16M nkk	EMEA	South Africa	LX.TW503.01 7	TM8472TG-5454G16Mnkk EM W7PR32EMTRZA2 MC XPP N11PGE11GBCFkk_3V3 2*2G/ S160G_2.5/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472TG - 5454G32M nkk	AAP	Singapore	LX.TW403.10 2	TM8472TG-5454G32Mnkk W7PR32TRSG1 MC XPP N11MGE1512CFkk_3V3 2*2G/320/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ZH31
TM8472TG - 5454G32M nkk	AAP	Singapore	LX.TW403.10 3	TM8472TG-5454G32Mnkk W7PR32TRSG1 MC XPP N11MGE1512CFkk_3V3 2*2G/320/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472TG - 5454G32M nkk	EMEA	South Africa	LX.TW503.01 4	TM8472TG-5454G32Mnkk EM W7PR32EMTRZA2 MC XPP N11PGE11GBCFkk_3V3 2*2G/ 320_7.2K/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472TG - 5454G50M nkk	CHINA	China	LX.TW402.00 2	TM8472TG-5454G50Mnkk W7HP64SCTRCN1 MC N11MGE1512CFkk_3V3 2*2G/500_L/ 6L3.0/5R/na_bgn_FP_1.3C_MA_SC12
TM8472TG - 5454G50M nkk	EMEA	Denmark	LX.TW403.13 2	TM8472TG-5454G50Mnkk W7PR32TRDK2 MC XPP N11MGE1512CFkk_3V3 2*2G/500_L/ BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ENS2
TM8472TG - 5454G50M nkk	AAP	Indonesia	LX.TW403.12 4	TM8472TG-5454G50Mnkk EM W7PR32EMTRID1 MC XPP N11MGE1512CFkk_3V3 2*2G/500_L/ BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ID21

Model	RO	Country	Acer Part No	Description
TM8472TG - 5454G50M nkk	EMEA	Poland	LX.TW503.02 4	TM8472TG-5454G50Mnkk W7PR32TRPL1 MC XPP N11PGE11GBCFkk_3V3 2*2G/500_L/ BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_PL72
TM8472TG - 5454G50M nkk	EMEA	South Africa	LX.TW503.01 5	TM8472TG-5454G50Mnkk EM W7PR32EMTRZA2 MC XPP N11PGE11GBCFkk_3V3 2*2G/ 500_7.2K/BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472TG - 5454G64M nkk	EMEA	Czech	LX.TW403.13 0	TM8472TG-5454G64Mnkk W7PR32TRCZ2 MC XPP N11MGE1512CFkk_3V3 2*2G/640/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_SK12
TM8472TG - 5454G64M nkk	EMEA	Germany	LX.TW502.00 2	TM8472TG-5454G64Mnkk W7HP64TRDE1 MC N11PGE11GBCFkk_3V3 2*2G/640/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_DE61
TM8472TG - 5454G64M nkk	EMEA	South Africa	LX.TW403.11 8	TM8472TG-5454G64Mnkk EM W7PR32EMTRZA2 MC XPP N11MGE1512CFkk_3V3 2*2G/640/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472TG - 5454G64M nkk	EMEA	South Africa	LX.TW503.01 6	TM8472TG-5454G64Mnkk EM W7PR32EMTRZA2 MC XPP N11PGE11GBCFkk_3V3 2*2G/640/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472TG - 622G50Mn kk	AAP	Thailand	LX.TW503.01 2	TM8472TG-622G50Mnkk EM W7PR32EMTRTH1 MC N11PGE11GBCFkk_3V3 1*2G/500_L/ BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_TH41
TM8472TG - 624G50Mn kk	CHINA	China	LX.TW402.00 1	TM8472TG-624G50Mnkk W7HP64SCTRCN1 MC N11MGE1512CFkk_3V3 2*2G/500_L/ 6L3.0/5R/na_bgn_FP_1.3C_MA_SC12
TM8472TG - 624G50Mn kk	AAP	Singapore	LX.TW403.01 8	TM8472TG-624G50Mnkk W7PR32TRSG1 MC N11MGE1512CFkk_3V3 2*2G/500_L/ BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472TG - 624G50Mn kk	AAP	Singapore	LX.TW403.02 2	TM8472TG-624G50Mnkk W7PR32TRSG1 MC N11MGE1512CFkk_3V3 2*2G/500_L/ BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ZH31
TM8472TG - 624G50Mn kk	AAP	Singapore	LX.TW503.00 9	TM8472TG-624G50Mnkk W7PR32TRSG1 MC XPP N11PGE11GBCFkk_3V3 2*2G/500_L/ BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_ZH31
TM8472TG - 624G50Mn kk	AAP	Thailand	LX.TW403.01 5	TM8472TG-624G50Mnkk EM W7PR32EMTRTH1 MC N11MGE1512CFkk_3V3 2*2G/500_L/ BT/6L3.0/5R/ na_bgn_FP_1.3C_MA_TH41

Model	RO	Country	Acer Part No	Description
TM8472TG - 624G64Mn kk	WW	GCTWN	S2.TW503.00 7	TM8472TG-624G64Mnkk W7PR32TWW1 MC N11PGE11GBCFkk_3V3 2*2G/640/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472TG - 624G64Mn kk	AAP	Singapore	LX.TW403.02 0	TM8472TG-624G64Mnkk W7PR32TRSG1 MC N11MGE1512CFkk_3V3 2*2G/640/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ES61
TM8472TG - 624G64Mn kk	AAP	Singapore	LX.TW403.02 1	TM8472TG-624G64Mnkk W7PR32TRSG1 MC N11MGE1512CFkk_3V3 2*2G/640/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ZH31
TM8472TG - 624G64Mn kk	AAP	Singapore	LX.TW503.01 0	TM8472TG-624G64Mnkk W7PR32TRSG1 MC XPP N11PGE11GBCFkk_3V3 2*2G/640/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ZH31
TM8472TG - 624G64Mn kk	WW	WW	S2.TW503.00 8	TM8472TG-624G64Mnkk W7PR32TWW1 MC N11PGE11GBCFkk_3V3 2*2G/640/BT/ 6L3.0/5R/na_bgn_FP_1.3C_MA_ES62

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472TG - 332G16Mn kk	GCTWN	S2.TW403. 001	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci3330M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 332G16Mn kk	GCTWN	S2.TW503. 001	TM8472TG _N11PGE1 1GBCFkk_ 3V3	Ci3330M	N11PGE1	1G-DDR3 (64*16*8)
TM8472TG - 332G16Mn kk	GCTWN	S2.TWE03. 001	TM8472TG _N11MGE 1512Ckk_3 V3	Ci3330M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 332G16Mn kk	WW	S2.TW403. 002	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci3330M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 332G16Mn kk	WW	S2.TW503. 002	TM8472TG _N11PGE1 1GBCFkk_ 3V3	Ci3330M	N11PGE1	1G-DDR3 (64*16*8)
TM8472TG - 332G16Mn kk	WW	S2.TWE03. 002	TM8472TG _N11MGE 1512Ckk_3 V3	Ci3330M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 332G32Mn kk	Middle East	LX.TW403. 016	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci3330M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 332G50Mn kk	GCTWN	LX.TW403. 008	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci3330M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 334G32Mn kk	Hong Kong	LX.TWE02. 001	TM8472TG _N11MGE 1512Ckk_3 V3	Ci3330M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 334G32Mn kk	South Africa	LX.TW403. 001	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci3330M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 334G32Mn kk	South Africa	LX.TW503. 001	TM8472TG _N11PGE1 1GBCFkk_ 3V3	Ci3330M	N11PGE1	1G-DDR3 (64*16*8)
TM8472TG - 334G50Mn kk	South Africa	LX.TW403. 002	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci3330M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 334G50Mn kk	South Africa	LX.TW503. 002	TM8472TG _N11PGE1 1GBCFkk_ 3V3	Ci3330M	N11PGE1	1G-DDR3 (64*16*8)

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472TG - 334G64Mn kk	South Africa	LX.TW403. 003	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci3330M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 334G64Mn kk	South Africa	LX.TW503. 003	TM8472TG _N11PGE1 1GBCFkk_ 3V3	Ci3330M	N11PGE1	1G-DDR3 (64*16*8)
TM8472TG - 352G16Mn kk	South Africa	LX.TW403. 111	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci3350M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 352G32Mn kk	GCTWN	LX.TW403. 009	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci3350M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 352G32Mn kk	Thailand	LX.TW403. 011	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci3350M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 352G64Mn kk	South Africa	LX.TW403. 110	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci3350M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 353G32Mn kk	Poland	LX.TW403. 131	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci3350M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 354G32Mn kk	Germany	LX.TW502. 001	TM8472TG _N11PGE1 1GBCFkk_ 3V3	Ci3350M	N11PGE1	1G-DDR3 (64*16*8)
TM8472TG - 354G32Mn kk	Poland	LX.TW503. 023	TM8472TG _N11PGE1 1GBCFkk_ 3V3	Ci3350M	N11PGE1	1G-DDR3 (64*16*8)
TM8472TG - 354G64Mn kk	South Africa	LX.TW403. 112	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci3350M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 432G50Mn kk	GCTWN	LX.TW403. 007	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5430M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 434G25Mn kk	GCTWN	S2.TW403. 003	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5430M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 434G25Mn kk	GCTWN	S2.TW403. 005	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5430M	N11MGE1	512M- DDR3 (64*16*4)

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472TG - 434G25Mn kk	WW	S2.TW403. 004	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5430M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 434G32Mn kk	Middle East	LX.TW403. 017	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5430M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 434G32Mn kk	South Africa	LX.TW403. 004	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5430M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 434G32Mn kk	South Africa	LX.TW503. 004	TM8472TG _N11PGE1 1GBCFkk_ 3V3	Ci5430M	N11PGE1	1G-DDR3 (64*16*8)
TM8472TG - 434G50Mik k	Russia	LX.TW403. 010	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5430M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 434G50Mn kk	South Africa	LX.TW403. 005	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5430M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 434G50Mn kk	South Africa	LX.TW503. 005	TM8472TG _N11PGE1 1GBCFkk_ 3V3	Ci5430M	N11PGE1	1G-DDR3 (64*16*8)
TM8472TG - 434G64Mn kk	South Africa	LX.TW403. 006	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5430M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 434G64Mn kk	South Africa	LX.TW503. 006	TM8472TG _N11PGE1 1GBCFkk_ 3V3	Ci5430M	N11PGE1	1G-DDR3 (64*16*8)
TM8472TG - 522G32Mn kk	Thailand	LX.TW403. 012	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5520M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 522G50Mn kk	GCTWN	LX.TW403. 013	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5520M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 524G16Mn kk	South Africa	LX.TW403. 120	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5520M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 524G16Mn kk	South Africa	LX.TW503. 018	TM8472TG _N11PGE1 1GBCFkk_ 3V3	Ci5520M	N11PGE1	1G-DDR3 (64*16*8)

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472TG - 524G25Mn kk	South Africa	LX.TW503. 022	TM8472TG _N11PGE1 1GBCFkk_ 3V3	Ci5520M	N11PGE1	1G-DDR3 (64*16*8)
TM8472TG - 524G32Mn kk	Australia/ New Zealand	LX.TW503. 013	TM8472TG _N11PGE1 1GBCFkk_ 3V3	Ci5520M	N11PGE1	1G-DDR3 (64*16*8)
TM8472TG - 524G32Mn kk	Singapore	LX.TW403. 019	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5520M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 524G32Mn kk	Singapore	LX.TW403. 093	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5520M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 524G32Mn kk	Singapore	LX.TW403. 094	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5520M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 524G32Mn kk	South Africa	LX.TW503. 021	TM8472TG _N11PGE1 1GBCFkk_ 3V3	Ci5520M	N11PGE1	1G-DDR3 (64*16*8)
TM8472TG - 524G50Mn kk	Singapore	LX.TW503. 007	TM8472TG _N11PGE1 1GBCFkk_ 3V3	Ci5520M	N11PGE1	1G-DDR3 (64*16*8)
TM8472TG - 524G50Mn kk	South Africa	LX.TW503. 020	TM8472TG _N11PGE1 1GBCFkk_ 3V3	Ci5520M	N11PGE1	1G-DDR3 (64*16*8)
TM8472TG - 524G64Mn kk	Singapore	LX.TW503. 011	TM8472TG _N11PGE1 1GBCFkk_ 3V3	Ci5520M	N11PGE1	1G-DDR3 (64*16*8)
TM8472TG - 524G64Mn kk	South Africa	LX.TW403. 121	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5520M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 524G64Mn kk	South Africa	LX.TW503. 019	TM8472TG _N11PGE1 1GBCFkk_ 3V3	Ci5520M	N11PGE1	1G-DDR3 (64*16*8)
TM8472TG - 542G32Mn kk	Thailand	LX.TW403. 014	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5540M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 542G50Mn kk	Thailand	LX.TW403. 025	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5540M	N11MGE1	512M- DDR3 (64*16*4)

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472TG - 544G16Mn kk	GCTWN	S2.TW403. 007	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5540M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 544G16Mn kk	WW	S2.TW403. 008	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5540M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 544G50Mn kk	Singapore	LX.TW403. 099	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5540M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 544G50Mn kk	Singapore	LX.TW403. 101	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5540M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 544G50Mn kk	Singapore	LX.TW503. 008	TM8472TG _N11PGE1 1GBCFkk_ 3V3	Ci5540M	N11PGE1	1G-DDR3 (64*16*8)
TM8472TG - 5452G32M nkk	Thailand	LX.TW403. 125	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5452G50M nkk	Malaysia	LX.TW403. 133	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Algeria	LX.TW403. 046	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Algeria	LX.TW403. 090	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Austria	LX.TW403. 052	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Baltic	LX.TW403. 038	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Baltic	LX.TW403. 039	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Baltic	LX.TW403. 067	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472TG - 5453G32M nkk	Belgium	LX.TW403. 042	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Cyprus	LX.TW403. 062	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Czech	LX.TW403. 050	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Denmark	LX.TW403. 037	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Finland	LX.TW403. 051	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	France	LX.TW403. 056	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Germany	LX.TW403. 069	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Greece	LX.TW403. 057	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Holland	LX.TW403. 071	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Hungary	LX.TW403. 058	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Israel	LX.TW403. 066	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Israel	LX.TW403. 068	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Italy	LX.TW403. 055	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472TG - 5453G32M nkk	Luxembourg	LX.TW403. 074	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 026	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 027	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 029	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 031	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 036	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 044	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 045	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 047	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 048	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 077	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 078	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 080	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 082	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 087	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 088	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 089	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 091	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 092	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Norway	LX.TW403. 043	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Norway	LX.TW403. 075	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Poland	LX.TW403. 073	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Portugal	LX.TW403. 049	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	South Africa	LX.TW403. 028	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	South Africa	LX.TW403. 030	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	South Africa	LX.TW403. 032	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci5450M	N11MGE1	512M- DDR3 (64*16*4)

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472TG - 5453G32M nkk	South Africa	LX.TW403.033	TM8472TG_N11MGE 1512CFkk_3V3	Ci5450M	N11MGE1	512M-DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	South Africa	LX.TW403.035	TM8472TG_N11MGE 1512CFkk_3V3	Ci5450M	N11MGE1	512M-DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	South Africa	LX.TW403.079	TM8472TG_N11MGE 1512CFkk_3V3	Ci5450M	N11MGE1	512M-DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	South Africa	LX.TW403.081	TM8472TG_N11MGE 1512CFkk_3V3	Ci5450M	N11MGE1	512M-DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	South Africa	LX.TW403.083	TM8472TG_N11MGE 1512CFkk_3V3	Ci5450M	N11MGE1	512M-DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	South Africa	LX.TW403.084	TM8472TG_N11MGE 1512CFkk_3V3	Ci5450M	N11MGE1	512M-DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	South Africa	LX.TW403.086	TM8472TG_N11MGE 1512CFkk_3V3	Ci5450M	N11MGE1	512M-DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Spain	LX.TW403.054	TM8472TG_N11MGE 1512CFkk_3V3	Ci5450M	N11MGE1	512M-DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Sweden	LX.TW403.070	TM8472TG_N11MGE 1512CFkk_3V3	Ci5450M	N11MGE1	512M-DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Switzerland	LX.TW403.072	TM8472TG_N11MGE 1512CFkk_3V3	Ci5450M	N11MGE1	512M-DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Turkey	LX.TW403.034	TM8472TG_N11MGE 1512CFkk_3V3	Ci5450M	N11MGE1	512M-DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	Turkey	LX.TW403.085	TM8472TG_N11MGE 1512CFkk_3V3	Ci5450M	N11MGE1	512M-DDR3 (64*16*4)
TM8472TG - 5453G32M nkk	UK	LX.TW403.061	TM8472TG_N11MGE 1512CFkk_3V3	Ci5450M	N11MGE1	512M-DDR3 (64*16*4)

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472TG - 5454G16M nkk	South Africa	LX.TW403.119	TM8472TG_N11MGE1512CFkk_3V3	Ci5450M	N11MGE1	512M-DDR3 (64*16*4)
TM8472TG - 5454G16M nkk	South Africa	LX.TW503.017	TM8472TG_N11PGE11GBCFkk_3V3	Ci5450M	N11PGE1	1G-DDR3 (64*16*8)
TM8472TG - 5454G32M nkk	Singapore	LX.TW403.102	TM8472TG_N11MGE1512CFkk_3V3	Ci5450M	N11MGE1	512M-DDR3 (64*16*4)
TM8472TG - 5454G32M nkk	Singapore	LX.TW403.103	TM8472TG_N11MGE1512CFkk_3V3	Ci5450M	N11MGE1	512M-DDR3 (64*16*4)
TM8472TG - 5454G32M nkk	South Africa	LX.TW503.014	TM8472TG_N11PGE11GBCFkk_3V3	Ci5450M	N11PGE1	1G-DDR3 (64*16*8)
TM8472TG - 5454G50M nkk	China	LX.TW402.002	TM8472TG_N11MGE1512CFkk_3V3	Ci5450M	N11MGE1	512M-DDR3 (64*16*4)
TM8472TG - 5454G50M nkk	Denmark	LX.TW403.132	TM8472TG_N11MGE1512CFkk_3V3	Ci5450M	N11MGE1	512M-DDR3 (64*16*4)
TM8472TG - 5454G50M nkk	Indonesia	LX.TW403.124	TM8472TG_N11MGE1512CFkk_3V3	Ci5450M	N11MGE1	512M-DDR3 (64*16*4)
TM8472TG - 5454G50M nkk	Poland	LX.TW503.024	TM8472TG_N11PGE11GBCFkk_3V3	Ci5450M	N11PGE1	1G-DDR3 (64*16*8)
TM8472TG - 5454G50M nkk	South Africa	LX.TW503.015	TM8472TG_N11PGE11GBCFkk_3V3	Ci5450M	N11PGE1	1G-DDR3 (64*16*8)
TM8472TG - 5454G64M nkk	Czech	LX.TW403.130	TM8472TG_N11MGE1512CFkk_3V3	Ci5450M	N11MGE1	512M-DDR3 (64*16*4)
TM8472TG - 5454G64M nkk	Germany	LX.TW502.002	TM8472TG_N11PGE11GBCFkk_3V3	Ci5450M	N11PGE1	1G-DDR3 (64*16*8)
TM8472TG - 5454G64M nkk	South Africa	LX.TW403.118	TM8472TG_N11MGE1512CFkk_3V3	Ci5450M	N11MGE1	512M-DDR3 (64*16*4)

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472TG - 5454G64M nkk	South Africa	LX.TW503. 016	TM8472TG _N11PGE1 1GBCFkk_ 3V3	Ci5450M	N11PGE1	1G-DDR3 (64*16*8)
TM8472TG - 622G50Mn kk	Thailand	LX.TW503. 012	TM8472TG _N11PGE1 1GBCFkk_ 3V3	Ci7620M	N11PGE1	1G-DDR3 (64*16*8)
TM8472TG - 624G50Mn kk	China	LX.TW402. 001	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci7620M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 624G50Mn kk	Singapore	LX.TW403. 018	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci7620M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 624G50Mn kk	Singapore	LX.TW403. 022	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci7620M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 624G50Mn kk	Singapore	LX.TW503. 009	TM8472TG _N11PGE1 1GBCFkk_ 3V3	Ci7620M	N11PGE1	1G-DDR3 (64*16*8)
TM8472TG - 624G50Mn kk	Thailand	LX.TW403. 015	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci7620M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 624G64Mn kk	GCTWN	S2.TW503. 007	TM8472TG _N11PGE1 1GBCFkk_ 3V3	Ci7620M	N11PGE1	1G-DDR3 (64*16*8)
TM8472TG - 624G64Mn kk	Singapore	LX.TW403. 020	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci7620M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 624G64Mn kk	Singapore	LX.TW403. 021	TM8472TG _N11MGE 1512CFkk_ 3V3	Ci7620M	N11MGE1	512M- DDR3 (64*16*4)
TM8472TG - 624G64Mn kk	Singapore	LX.TW503. 010	TM8472TG _N11PGE1 1GBCFkk_ 3V3	Ci7620M	N11PGE1	1G-DDR3 (64*16*8)
TM8472TG - 624G64Mn kk	WW	S2.TW503. 008	TM8472TG _N11PGE1 1GBCFkk_ 3V3	Ci7620M	N11PGE1	1G-DDR3 (64*16*8)

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472TG - 332G16Mn kk	GCTWN	S2.TW403. 001	SO2GBIII1 0	N	N160GB5. 4KS	NSM8XS
TM8472TG - 332G16Mn kk	GCTWN	S2.TW503. 001	SO2GBIII1 0	N	N160GB5. 4KS	NSM8XS
TM8472TG - 332G16Mn kk	GCTWN	S2.TWE03. 001	SO2GBIII1 0	N	N160GB5. 4KS	NSM8XS
TM8472TG - 332G16Mn kk	WW	S2.TW403. 002	SO2GBIII1 0	N	N160GB5. 4KS	NSM8XS
TM8472TG - 332G16Mn kk	WW	S2.TW503. 002	SO2GBIII1 0	N	N160GB5. 4KS	NSM8XS
TM8472TG - 332G16Mn kk	WW	S2.TWE03. 002	SO2GBIII1 0	N	N160GB5. 4KS	NSM8XS
TM8472TG - 332G32Mn kk	Middle East	LX.TW403. 016	SO2GBIII1 0	N	N320GB5. 4KS	NSM8XS
TM8472TG - 332G50Mn kk	GCTWN	LX.TW403. 008	SO2GBIII1 0	N	N500GB5. 4KS	NSM8XS
TM8472TG - 334G32Mn kk	Hong Kong	LX.TWE02. 001	SO2GBIII1 0	SO2GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 334G32Mn kk	South Africa	LX.TW403. 001	SO2GBIII1 0	SO2GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 334G32Mn kk	South Africa	LX.TW503. 001	SO2GBIII1 0	SO2GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 334G50Mn kk	South Africa	LX.TW403. 002	SO2GBIII1 0	SO2GBIII1 0	N500GB5. 4KS	NSM8XS
TM8472TG - 334G50Mn kk	South Africa	LX.TW503. 002	SO2GBIII1 0	SO2GBIII1 0	N500GB5. 4KS	NSM8XS

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472TG - 334G64Mn kk	South Africa	LX.TW403. 003	SO2GBIII1 0	SO2GBIII1 0	N640GB5. 4KS	NSM8XS
TM8472TG - 334G64Mn kk	South Africa	LX.TW503. 003	SO2GBIII1 0	SO2GBIII1 0	N640GB5. 4KS	NSM8XS
TM8472TG - 352G16Mn kk	South Africa	LX.TW403. 111	SO2GBIII1 0	N	SSD25160	NSM8XS
TM8472TG - 352G32Mn kk	GCTWN	LX.TW403. 009	SO2GBIII1 0	N	N320GB5. 4KS	NSM8XS
TM8472TG - 352G32Mn kk	Thailand	LX.TW403. 011	SO2GBIII1 0	N	N320GB5. 4KS	NSM8XS
TM8472TG - 352G64Mn kk	South Africa	LX.TW403. 110	SO2GBIII1 0	N	N640GB5. 4KS	NSM8XS
TM8472TG - 353G32Mn kk	Poland	LX.TW403. 131	SO2GBIII1 0	SO1GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 354G32Mn kk	Germany	LX.TW502. 001	SO2GBIII1 0	SO2GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 354G32Mn kk	Poland	LX.TW503. 023	SO2GBIII1 0	SO2GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 354G64Mn kk	South Africa	LX.TW403. 112	SO2GBIII1 0	SO2GBIII1 0	N640GB5. 4KS	NSM8XS
TM8472TG - 432G50Mn kk	GCTWN	LX.TW403. 007	SO2GBIII1 0	N	N500GB5. 4KS	NSM8XS
TM8472TG - 434G25Mn kk	GCTWN	S2.TW403. 003	SO2GBIII1 0	SO2GBIII1 0	N250GB5. 4KS	NSM8XS
TM8472TG - 434G25Mn kk	GCTWN	S2.TW403. 005	SO2GBIII1 0	SO2GBIII1 0	N250GB5. 4KS	NSM8XS

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472TG - 434G25Mnkk	WW	S2.TW403.004	SO2GBIII10	SO2GBIII10	N250GB5.4KS	NSM8XS
TM8472TG - 434G32Mnkk	Middle East	LX.TW403.017	SO2GBIII10	SO2GBIII10	N320GB5.4KS	NSM8XS
TM8472TG - 434G32Mnkk	South Africa	LX.TW403.004	SO2GBIII10	SO2GBIII10	N320GB5.4KS	NSM8XS
TM8472TG - 434G32Mnkk	South Africa	LX.TW503.004	SO2GBIII10	SO2GBIII10	N320GB5.4KS	NSM8XS
TM8472TG - 434G50Mikk	Russia	LX.TW403.010	SO2GBIII10	SO2GBIII10	N500GB5.4KS	NSM8XS
TM8472TG - 434G50Mnkk	South Africa	LX.TW403.005	SO2GBIII10	SO2GBIII10	N500GB5.4KS	NSM8XS
TM8472TG - 434G50Mnkk	South Africa	LX.TW503.005	SO2GBIII10	SO2GBIII10	N500GB5.4KS	NSM8XS
TM8472TG - 434G64Mnkk	South Africa	LX.TW403.006	SO2GBIII10	SO2GBIII10	N640GB5.4KS	NSM8XS
TM8472TG - 434G64Mnkk	South Africa	LX.TW503.006	SO2GBIII10	SO2GBIII10	N640GB5.4KS	NSM8XS
TM8472TG - 522G32Mnkk	Thailand	LX.TW403.012	SO2GBIII10	N	N320GB5.4KS	NSM8XS
TM8472TG - 522G50Mnkk	GCTWN	LX.TW403.013	SO2GBIII10	N	N500GB5.4KS	NSM8XS
TM8472TG - 524G16Mnkk	South Africa	LX.TW403.120	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472TG - 524G16Mnkk	South Africa	LX.TW503.018	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472TG - 524G25Mnkk	South Africa	LX.TW503.022	SO2GBIII10	SO2GBIII10	N250GB7.2KS	NSM8XS
TM8472TG - 524G32Mnkk	Australia/ New Zealand	LX.TW503.013	SO2GBIII10	SO2GBIII10	N320GB5.4KS	NSM8XS
TM8472TG - 524G32Mnkk	Singapore	LX.TW403.019	SO2GBIII10	SO2GBIII10	N320GB5.4KS	NSM8XS
TM8472TG - 524G32Mnkk	Singapore	LX.TW403.093	SO2GBIII10	SO2GBIII10	N320GB5.4KS	NSM8XS
TM8472TG - 524G32Mnkk	Singapore	LX.TW403.094	SO2GBIII10	SO2GBIII10	N320GB5.4KS	NSM8XS
TM8472TG - 524G32Mnkk	South Africa	LX.TW503.021	SO2GBIII10	SO2GBIII10	N320GB7.2KS	NSM8XS
TM8472TG - 524G50Mnkk	Singapore	LX.TW503.007	SO2GBIII10	SO2GBIII10	N500GB5.4KS	NSM8XS
TM8472TG - 524G50Mnkk	South Africa	LX.TW503.020	SO2GBIII10	SO2GBIII10	N500GB7.2KS	NSM8XS
TM8472TG - 524G64Mnkk	Singapore	LX.TW503.011	SO2GBIII10	SO2GBIII10	N640GB5.4KS	NSM8XS
TM8472TG - 524G64Mnkk	South Africa	LX.TW403.121	SO2GBIII10	SO2GBIII10	N640GB5.4KS	NSM8XS
TM8472TG - 524G64Mnkk	South Africa	LX.TW503.019	SO2GBIII10	SO2GBIII10	N640GB5.4KS	NSM8XS
TM8472TG - 542G32Mnkk	Thailand	LX.TW403.014	SO2GBIII10	N	N320GB5.4KS	NSM8XS
TM8472TG - 542G50Mnkk	Thailand	LX.TW403.025	SO2GBIII10	N	N500GB5.4KS	NSM8XS

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472TG - 544G16Mnkk	GCTWN	S2.TW403.007	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472TG - 544G16Mnkk	WW	S2.TW403.008	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472TG - 544G50Mnkk	Singapore	LX.TW403.099	SO2GBIII10	SO2GBIII10	N500GB5.4KS	NSM8XS
TM8472TG - 544G50Mnkk	Singapore	LX.TW403.101	SO2GBIII10	SO2GBIII10	N500GB5.4KS	NSM8XS
TM8472TG - 544G50Mnkk	Singapore	LX.TW503.008	SO2GBIII10	SO2GBIII10	N500GB5.4KS	NSM8XS
TM8472TG - 5452G32Mnkk	Thailand	LX.TW403.125	SO2GBIII10	N	N320GB5.4KS	NSM8XS
TM8472TG - 5452G50Mnkk	Malaysia	LX.TW403.133	SO2GBIII10	N	N500GB5.4KS	NSM8XS
TM8472TG - 5453G32Mnkk	Algeria	LX.TW403.046	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472TG - 5453G32Mnkk	Algeria	LX.TW403.090	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472TG - 5453G32Mnkk	Austria	LX.TW403.052	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472TG - 5453G32Mnkk	Baltic	LX.TW403.038	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472TG - 5453G32Mnkk	Baltic	LX.TW403.039	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472TG - 5453G32Mnkk	Baltic	LX.TW403.067	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472TG - 5453G32M nkk	Belgium	LX.TW403. 042	SO2GBIII1 0	SO1GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 5453G32M nkk	Cyprus	LX.TW403. 062	SO2GBIII1 0	SO1GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 5453G32M nkk	Czech	LX.TW403. 050	SO2GBIII1 0	SO1GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 5453G32M nkk	Denmark	LX.TW403. 037	SO2GBIII1 0	SO1GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 5453G32M nkk	Finland	LX.TW403. 051	SO2GBIII1 0	SO1GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 5453G32M nkk	France	LX.TW403. 056	SO2GBIII1 0	SO1GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 5453G32M nkk	Germany	LX.TW403. 069	SO2GBIII1 0	SO1GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 5453G32M nkk	Greece	LX.TW403. 057	SO2GBIII1 0	SO1GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 5453G32M nkk	Holland	LX.TW403. 071	SO2GBIII1 0	SO1GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 5453G32M nkk	Hungary	LX.TW403. 058	SO2GBIII1 0	SO1GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 5453G32M nkk	Israel	LX.TW403. 066	SO2GBIII1 0	SO1GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 5453G32M nkk	Israel	LX.TW403. 068	SO2GBIII1 0	SO1GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 5453G32M nkk	Italy	LX.TW403. 055	SO2GBIII1 0	SO1GBIII1 0	N320GB5. 4KS	NSM8XS

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472TG - 5453G32M nkk	Luxembourg	LX.TW403. 074	SO2GBIII1 0	SO1GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 026	SO2GBIII1 0	SO1GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 027	SO2GBIII1 0	SO1GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 029	SO2GBIII1 0	SO1GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 031	SO2GBIII1 0	SO1GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 036	SO2GBIII1 0	SO1GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 044	SO2GBIII1 0	SO1GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 045	SO2GBIII1 0	SO1GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 047	SO2GBIII1 0	SO1GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 048	SO2GBIII1 0	SO1GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 077	SO2GBIII1 0	SO1GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 078	SO2GBIII1 0	SO1GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 080	SO2GBIII1 0	SO1GBIII1 0	N320GB5. 4KS	NSM8XS

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 082	SO2GBIII1 0	SO1GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 087	SO2GBIII1 0	SO1GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 088	SO2GBIII1 0	SO1GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 089	SO2GBIII1 0	SO1GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 091	SO2GBIII1 0	SO1GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 092	SO2GBIII1 0	SO1GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 5453G32M nkk	Norway	LX.TW403. 043	SO2GBIII1 0	SO1GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 5453G32M nkk	Norway	LX.TW403. 075	SO2GBIII1 0	SO1GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 5453G32M nkk	Poland	LX.TW403. 073	SO2GBIII1 0	SO1GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 5453G32M nkk	Portugal	LX.TW403. 049	SO2GBIII1 0	SO1GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 5453G32M nkk	South Africa	LX.TW403. 028	SO2GBIII1 0	SO1GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 5453G32M nkk	South Africa	LX.TW403. 030	SO2GBIII1 0	SO1GBIII1 0	N320GB5. 4KS	NSM8XS
TM8472TG - 5453G32M nkk	South Africa	LX.TW403. 032	SO2GBIII1 0	SO1GBIII1 0	N320GB5. 4KS	NSM8XS

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472TG - 5453G32M nkk	South Africa	LX.TW403.033	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472TG - 5453G32M nkk	South Africa	LX.TW403.035	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472TG - 5453G32M nkk	South Africa	LX.TW403.079	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472TG - 5453G32M nkk	South Africa	LX.TW403.081	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472TG - 5453G32M nkk	South Africa	LX.TW403.083	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472TG - 5453G32M nkk	South Africa	LX.TW403.084	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472TG - 5453G32M nkk	South Africa	LX.TW403.086	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472TG - 5453G32M nkk	Spain	LX.TW403.054	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472TG - 5453G32M nkk	Sweden	LX.TW403.070	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472TG - 5453G32M nkk	Switzerland	LX.TW403.072	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472TG - 5453G32M nkk	Turkey	LX.TW403.034	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472TG - 5453G32M nkk	Turkey	LX.TW403.085	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS
TM8472TG - 5453G32M nkk	UK	LX.TW403.061	SO2GBIII10	SO1GBIII10	N320GB5.4KS	NSM8XS

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472TG - 5454G16M nkk	South Africa	LX.TW403.119	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472TG - 5454G16M nkk	South Africa	LX.TW503.017	SO2GBIII10	SO2GBIII10	SSD25160	NSM8XS
TM8472TG - 5454G32M nkk	Singapore	LX.TW403.102	SO2GBIII10	SO2GBIII10	N320GB5.4KS	NSM8XS
TM8472TG - 5454G32M nkk	Singapore	LX.TW403.103	SO2GBIII10	SO2GBIII10	N320GB5.4KS	NSM8XS
TM8472TG - 5454G32M nkk	South Africa	LX.TW503.014	SO2GBIII10	SO2GBIII10	N320GB7.2KS	NSM8XS
TM8472TG - 5454G50M nkk	China	LX.TW402.002	SO2GBIII10	SO2GBIII10	N500GB5.4KS	NSM8XS
TM8472TG - 5454G50M nkk	Denmark	LX.TW403.132	SO2GBIII10	SO2GBIII10	N500GB5.4KS	NSM8XS
TM8472TG - 5454G50M nkk	Indonesia	LX.TW403.124	SO2GBIII10	SO2GBIII10	N500GB5.4KS	NSM8XS
TM8472TG - 5454G50M nkk	Poland	LX.TW503.024	SO2GBIII10	SO2GBIII10	N500GB5.4KS	NSM8XS
TM8472TG - 5454G50M nkk	South Africa	LX.TW503.015	SO2GBIII10	SO2GBIII10	N500GB7.2KS	NSM8XS
TM8472TG - 5454G64M nkk	Czech	LX.TW403.130	SO2GBIII10	SO2GBIII10	N640GB5.4KS	NSM8XS
TM8472TG - 5454G64M nkk	Germany	LX.TW502.002	SO2GBIII10	SO2GBIII10	N640GB5.4KS	NSM8XS
TM8472TG - 5454G64M nkk	South Africa	LX.TW403.118	SO2GBIII10	SO2GBIII10	N640GB5.4KS	NSM8XS

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472TG - 5454G64Mnkk	South Africa	LX.TW503.016	SO2GBIII10	SO2GBIII10	N640GB5.4KS	NSM8XS
TM8472TG - 622G50Mnkk	Thailand	LX.TW503.012	SO2GBIII10	N	N500GB5.4KS	NSM8XS
TM8472TG - 624G50Mnkk	China	LX.TW402.001	SO2GBIII10	SO2GBIII10	N500GB5.4KS	NSM8XS
TM8472TG - 624G50Mnkk	Singapore	LX.TW403.018	SO2GBIII10	SO2GBIII10	N500GB5.4KS	NSM8XS
TM8472TG - 624G50Mnkk	Singapore	LX.TW403.022	SO2GBIII10	SO2GBIII10	N500GB5.4KS	NSM8XS
TM8472TG - 624G50Mnkk	Singapore	LX.TW503.009	SO2GBIII10	SO2GBIII10	N500GB5.4KS	NSM8XS
TM8472TG - 624G50Mnkk	Thailand	LX.TW403.015	SO2GBIII10	SO2GBIII10	N500GB5.4KS	NSM8XS
TM8472TG - 624G64Mnkk	GCTWN	S2.TW503.007	SO2GBIII10	SO2GBIII10	N640GB5.4KS	NSM8XS
TM8472TG - 624G64Mnkk	Singapore	LX.TW403.020	SO2GBIII10	SO2GBIII10	N640GB5.4KS	NSM8XS
TM8472TG - 624G64Mnkk	Singapore	LX.TW403.021	SO2GBIII10	SO2GBIII10	N640GB5.4KS	NSM8XS
TM8472TG - 624G64Mnkk	Singapore	LX.TW503.010	SO2GBIII10	SO2GBIII10	N640GB5.4KS	NSM8XS
TM8472TG - 624G64Mnkk	WW	S2.TW503.008	SO2GBIII10	SO2GBIII10	N640GB5.4KS	NSM8XS

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472TG - 332G16Mn kk	GCTWN	S2.TW403. 001	3rd WiFi 2x2 BGN	N	SS801U	6CELL3.0
TM8472TG - 332G16Mn kk	GCTWN	S2.TW503. 001	3rd WiFi 2x2 BGN	N	SS801U	6CELL3.0
TM8472TG - 332G16Mn kk	GCTWN	S2.TWE03. 001	3rd WiFi 2x2 BGN	N	N	6CELL3.0
TM8472TG - 332G16Mn kk	WW	S2.TW403. 002	3rd WiFi 2x2 BGN	N	SS801U	6CELL3.0
TM8472TG - 332G16Mn kk	WW	S2.TW503. 002	3rd WiFi 2x2 BGN	N	SS801U	6CELL3.0
TM8472TG - 332G16Mn kk	WW	S2.TWE03. 002	3rd WiFi 2x2 BGN	N	N	6CELL3.0
TM8472TG - 332G32Mn kk	Middle East	LX.TW403. 016	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 332G50Mn kk	GCTWN	LX.TW403. 008	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 334G32Mn kk	Hong Kong	LX.TWE02. 001	3rd WiFi 2x2 BGN	BT 3.0	N	6CELL3.0
TM8472TG - 334G32Mn kk	South Africa	LX.TW403. 001	3rd WiFi 2x2 BGN	BT 2.1	SS801U	6CELL3.0
TM8472TG - 334G32Mn kk	South Africa	LX.TW503. 001	3rd WiFi 2x2 BGN	BT 2.1	SS801U	6CELL3.0
TM8472TG - 334G50Mn kk	South Africa	LX.TW403. 002	3rd WiFi 2x2 BGN	BT 2.1	SS801U	6CELL3.0
TM8472TG - 334G50Mn kk	South Africa	LX.TW503. 002	3rd WiFi 2x2 BGN	BT 2.1	SS801U	6CELL3.0

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472TG - 334G64Mnkk	South Africa	LX.TW403.003	3rd WiFi 2x2 BGN	BT 2.1	SS801U	6CELL3.0
TM8472TG - 334G64Mnkk	South Africa	LX.TW503.003	3rd WiFi 2x2 BGN	BT 2.1	SS801U	6CELL3.0
TM8472TG - 352G16Mnkk	South Africa	LX.TW403.111	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 352G32Mnkk	GCTWN	LX.TW403.009	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 352G32Mnkk	Thailand	LX.TW403.011	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 352G64Mnkk	South Africa	LX.TW403.110	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 353G32Mnkk	Poland	LX.TW403.131	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 354G32Mnkk	Germany	LX.TW502.001	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 354G32Mnkk	Poland	LX.TW503.023	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 354G64Mnkk	South Africa	LX.TW403.112	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 432G50Mnkk	GCTWN	LX.TW403.007	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 434G25Mnkk	GCTWN	S2.TW403.003	3rd WiFi 2x2 BGN	N	SS801U	6CELL3.0
TM8472TG - 434G25Mnkk	GCTWN	S2.TW403.005	3rd WiFi 2x2 BGN	BT 2.1	SS801U	6CELL3.0

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472TG - 434G25Mnkk	WW	S2.TW403.004	3rd WiFi 2x2 BGN	N	SS801U	6CELL3.0
TM8472TG - 434G32Mnkk	Middle East	LX.TW403.017	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 434G32Mnkk	South Africa	LX.TW403.004	3rd WiFi 2x2 BGN	BT 2.1	SS801U	6CELL3.0
TM8472TG - 434G32Mnkk	South Africa	LX.TW503.004	3rd WiFi 2x2 BGN	BT 2.1	SS801U	6CELL3.0
TM8472TG - 434G50Mikk	Russia	LX.TW403.010	3rd WiFi BG	BT 3.0	SS801U	6CELL3.0
TM8472TG - 434G50Mnkk	South Africa	LX.TW403.005	3rd WiFi 2x2 BGN	BT 2.1	SS801U	6CELL3.0
TM8472TG - 434G50Mnkk	South Africa	LX.TW503.005	3rd WiFi 2x2 BGN	BT 2.1	SS801U	6CELL3.0
TM8472TG - 434G64Mnkk	South Africa	LX.TW403.006	3rd WiFi 2x2 BGN	BT 2.1	SS801U	6CELL3.0
TM8472TG - 434G64Mnkk	South Africa	LX.TW503.006	3rd WiFi 2x2 BGN	BT 2.1	SS801U	6CELL3.0
TM8472TG - 522G32Mnkk	Thailand	LX.TW403.012	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 522G50Mnkk	GCTWN	LX.TW403.013	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 524G16Mnkk	South Africa	LX.TW403.120	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 524G16Mnkk	South Africa	LX.TW503.018	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472TG - 524G25Mnkk	South Africa	LX.TW503.022	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 524G32Mnkk	Australia/ New Zealand	LX.TW503.013	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 524G32Mnkk	Singapore	LX.TW403.019	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 524G32Mnkk	Singapore	LX.TW403.093	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 524G32Mnkk	Singapore	LX.TW403.094	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 524G32Mnkk	South Africa	LX.TW503.021	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 524G50Mnkk	Singapore	LX.TW503.007	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 524G50Mnkk	South Africa	LX.TW503.020	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 524G64Mnkk	Singapore	LX.TW503.011	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 524G64Mnkk	South Africa	LX.TW403.121	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 524G64Mnkk	South Africa	LX.TW503.019	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 542G32Mnkk	Thailand	LX.TW403.014	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 542G50Mnkk	Thailand	LX.TW403.025	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472TG - 544G16Mnkk	GCTWN	S2.TW403.007	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 544G16Mnkk	WW	S2.TW403.008	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 544G50Mnkk	Singapore	LX.TW403.099	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 544G50Mnkk	Singapore	LX.TW403.101	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 544G50Mnkk	Singapore	LX.TW503.008	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 5452G32Mnkk	Thailand	LX.TW403.125	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 5452G50Mnkk	Malaysia	LX.TW403.133	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 5453G32Mnkk	Algeria	LX.TW403.046	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32Mnkk	Algeria	LX.TW403.090	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32Mnkk	Austria	LX.TW403.052	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32Mnkk	Baltic	LX.TW403.038	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32Mnkk	Baltic	LX.TW403.039	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32Mnkk	Baltic	LX.TW403.067	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472TG - 5453G32M nkk	Belgium	LX.TW403. 042	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	Cyprus	LX.TW403. 062	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	Czech	LX.TW403. 050	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	Denmark	LX.TW403. 037	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	Finland	LX.TW403. 051	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	France	LX.TW403. 056	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	Germany	LX.TW403. 069	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	Greece	LX.TW403. 057	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	Holland	LX.TW403. 071	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	Hungary	LX.TW403. 058	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	Israel	LX.TW403. 066	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	Israel	LX.TW403. 068	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	Italy	LX.TW403. 055	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472TG - 5453G32M nkk	Luxembourg	LX.TW403. 074	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 026	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 027	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 029	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 031	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 036	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 044	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 045	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 047	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 048	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 077	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 078	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	Middle East	LX.TW403. 080	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472TG - 5453G32M nkk	Middle East	LX.TW403.082	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	Middle East	LX.TW403.087	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	Middle East	LX.TW403.088	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	Middle East	LX.TW403.089	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	Middle East	LX.TW403.091	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	Middle East	LX.TW403.092	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	Norway	LX.TW403.043	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	Norway	LX.TW403.075	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	Poland	LX.TW403.073	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	Portugal	LX.TW403.049	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	South Africa	LX.TW403.028	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	South Africa	LX.TW403.030	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	South Africa	LX.TW403.032	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472TG - 5453G32M nkk	South Africa	LX.TW403.033	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	South Africa	LX.TW403.035	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	South Africa	LX.TW403.079	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	South Africa	LX.TW403.081	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	South Africa	LX.TW403.083	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	South Africa	LX.TW403.084	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	South Africa	LX.TW403.086	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	Spain	LX.TW403.054	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	Sweden	LX.TW403.070	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	Switzerland	LX.TW403.072	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	Turkey	LX.TW403.034	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	Turkey	LX.TW403.085	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0
TM8472TG - 5453G32M nkk	UK	LX.TW403.061	3rd WiFi 2x2 BGN	BT 3.0	SS801U	9CELL3.0

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472TG - 5454G16M nkk	South Africa	LX.TW403. 119	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 5454G16M nkk	South Africa	LX.TW503. 017	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 5454G32M nkk	Singapore	LX.TW403. 102	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 5454G32M nkk	Singapore	LX.TW403. 103	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 5454G32M nkk	South Africa	LX.TW503. 014	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 5454G50M nkk	China	LX.TW402. 002	3rd WiFi 2x2 BGN	N	SS801U	6CELL3.0
TM8472TG - 5454G50M nkk	Denmark	LX.TW403. 132	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 5454G50M nkk	Indonesia	LX.TW403. 124	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 5454G50M nkk	Poland	LX.TW503. 024	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 5454G50M nkk	South Africa	LX.TW503. 015	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 5454G64M nkk	Czech	LX.TW403. 130	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 5454G64M nkk	Germany	LX.TW502. 002	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 5454G64M nkk	South Africa	LX.TW403. 118	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472TG - 5454G64Mnkk	South Africa	LX.TW503.016	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 622G50Mnkk	Thailand	LX.TW503.012	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 624G50Mnkk	China	LX.TW402.001	3rd WiFi 2x2 BGN	N	SS801U	6CELL3.0
TM8472TG - 624G50Mnkk	Singapore	LX.TW403.018	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 624G50Mnkk	Singapore	LX.TW403.022	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 624G50Mnkk	Singapore	LX.TW503.009	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 624G50Mnkk	Thailand	LX.TW403.015	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 624G64Mnkk	GCTWN	S2.TW503.007	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 624G64Mnkk	Singapore	LX.TW403.020	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 624G64Mnkk	Singapore	LX.TW403.021	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 624G64Mnkk	Singapore	LX.TW503.010	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0
TM8472TG - 624G64Mnkk	WW	S2.TW503.008	3rd WiFi 2x2 BGN	BT 3.0	SS801U	6CELL3.0

Acer aspire 8472TZ

Model	RO	Country	Acer Part No	Description
TM8472TZ - P602G16M nkk	WW	GCTWN	S2.TXX02.001	TM8472TZ-P602G16Mnkk W7HP64TWW1 MC UMACFkk_3 1*2G/ 160/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472TZ - P602G16M nkk	WW	GCTWN	S2.TY10C.001	TM8472TZ-P602G16Mnkk LINPUSTWW1 UMACkk_3 1*2G/160/ 6L3.0/5R/na_bgn_1.3C_MA_ENX1
TM8472TZ - P602G16M nkk	WW	WW	S2.TXX02.002	TM8472TZ-P602G16Mnkk W7HP64TWW1 MC UMACFkk_3 1*2G/ 160/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES62
TM8472TZ - P602G16M nkk	WW	WW	S2.TY10C.002	TM8472TZ-P602G16Mnkk LINPUSTWW1 UMACkk_3 1*2G/160/ 6L3.0/5R/na_bgn_1.3C_MA_EN11
TM8472Z- P602G16M nkk	WW	GCTWN	S2.TYT02.001	TM8472Z-P602G16Mnkk W7HP64TWW1 MC UMACFkk_3 1*2G/ 160/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES61
TM8472Z- P602G16M nkk	WW	GCTWN	S2.TYU0C.00 2	TM8472Z-P602G16Mnkk LINPUSTWW1 UMACkk_3 1*2G/160/ 6L3.0/5R/na_bgn_1.3C_MA_ENX1
TM8472Z- P602G16M nkk	WW	WW	S2.TYT02.002	TM8472Z-P602G16Mnkk W7HP64TWW1 MC UMACFkk_3 1*2G/ 160/6L3.0/5R/ na_bgn_FP_1.3C_MA_ES62
TM8472Z- P602G16M nkk	WW	WW	S2.TYU0C.00 1	TM8472Z-P602G16Mnkk LINPUSTWW1 UMACkk_3 1*2G/160/ 6L3.0/5R/na_bgn_1.3C_MA_EN11

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472TZ - P602G16M nkk	GCTWN	S2.TXX02. 001	TM8472TZ _UMACFkk _3	PMDP6000	UMA	N
TM8472TZ - P602G16M nkk	GCTWN	S2.TY10C. 001	TM8472TZ _UMACkk_ 3	PMDP6000	UMA	N
TM8472TZ - P602G16M nkk	WW	S2.TXX02. 002	TM8472TZ _UMACFkk _3	PMDP6000	UMA	N
TM8472TZ - P602G16M nkk	WW	S2.TY10C. 002	TM8472TZ _UMACkk_ 3	PMDP6000	UMA	N

Model	Country	Acer Part No	BOM Name	CPU	VGA Chip	VRAM 1
TM8472Z-P602G16M nkk	GCTWN	S2.TYT02.001	TM8472Z_UMACFkk_3	PMDP6000	UMA	N
TM8472Z-P602G16M nkk	GCTWN	S2.TYU0C.002	TM8472Z_UMACkk_3	PMDP6000	UMA	N
TM8472Z-P602G16M nkk	WW	S2.TYT02.002	TM8472Z_UMACFkk_3	PMDP6000	UMA	N
TM8472Z-P602G16M nkk	WW	S2.TYU0C.001	TM8472Z_UMACkk_3	PMDP6000	UMA	N

Model	Country	Acer Part No	Memory 1	Memory 2	HDD 1(GB)	ODD
TM8472TZ - P602G16M nkk	GCTWN	S2.TXX02.001	SO2GBIII10	N	N160GB5.4KS	NSM8XS
TM8472TZ - P602G16M nkk	GCTWN	S2.TY10C.001	SO2GBIII10	N	N160GB5.4KS	NSM8XS
TM8472TZ - P602G16M nkk	WW	S2.TXX02.002	SO2GBIII10	N	N160GB5.4KS	NSM8XS
TM8472TZ - P602G16M nkk	WW	S2.TY10C.002	SO2GBIII10	N	N160GB5.4KS	NSM8XS
TM8472Z-P602G16M nkk	GCTWN	S2.TYT02.001	SO2GBIII10	N	N160GB5.4KS	NSM8XS
TM8472Z-P602G16M nkk	GCTWN	S2.TYU0C.002	SO2GBIII10	N	N160GB5.4KS	NSM8XS
TM8472Z-P602G16M nkk	WW	S2.TYT02.002	SO2GBIII10	N	N160GB5.4KS	NSM8XS
TM8472Z-P602G16M nkk	WW	S2.TYU0C.001	SO2GBIII10	N	N160GB5.4KS	NSM8XS

Model	Country	Acer Part No	Wireless LAN1	Bluetooth	Finger Print	Battery
TM8472TZ - P602G16M nkk	GCTWN	S2.TXX02. 001	3rd WiFi 2x2 BGN	N	SS801U	6CELL3.0
TM8472TZ - P602G16M nkk	GCTWN	S2.TY10C. 001	3rd WiFi 2x2 BGN	N	N	6CELL3.0
TM8472TZ - P602G16M nkk	WW	S2.TXX02. 002	3rd WiFi 2x2 BGN	N	SS801U	6CELL3.0
TM8472TZ - P602G16M nkk	WW	S2.TY10C. 002	3rd WiFi 2x2 BGN	N	N	6CELL3.0
TM8472Z- P602G16M nkk	GCTWN	S2.TYT02. 001	3rd WiFi 2x2 BGN	N	SS801U	6CELL3.0
TM8472Z- P602G16M nkk	GCTWN	S2.TYU0C. 002	3rd WiFi 2x2 BGN	N	N	6CELL3.0
TM8472Z- P602G16M nkk	WW	S2.TYT02. 002	3rd WiFi 2x2 BGN	N	SS801U	6CELL3.0
TM8472Z- P602G16M nkk	WW	S2.TYU0C. 001	3rd WiFi 2x2 BGN	N	N	6CELL3.0

Test Compatible Components

This computer's compatibility is tested and verified by Acer's internal testing department. All of its system functions are tested under Windows® 7 with backwards compatibility to Windows® XP.

Refer to the following lists for components, adapter cards, and peripherals which have passed these tests. Regarding configuration, combination and test procedures, please refer to the ZQ3 Compatibility Test Report released by the Acer Mobile System Testing Department.

Vendor	Type	Description
3G		
60027216 ERICSSON	F3307-900MHz	Ericsson F3307-900MHz
A cover		
9999995 ONE TIME VENDER	Mg-A	Mg-A
Adapter		
10001023 LITE-ON	65W	Adapter LITE-ON 65W 19V 1.7x5.5x11 Yellow PA-1650-22AC LV5 LED LF
10001023 LITE-ON	65W	Adapter LITE-ON 65W 19V 1.7x5.5x11 Yellow PA-1650-69AW, LV5, Low profile LED LF
10001023 LITE-ON	90W	Adapter LITE-ON 90W 19V 1.7x5.5x11 Blue PA-1900-34AR, LV5 LED LF
10001081 DELTA	65W	Adapter DELTA 65W 19V 1.7x5.5x11 Yellow ADP-65JH DB A, LV5 LED LF
10001081 DELTA	65W	Adapter DELTA 65W 19V 1.7x5.5x11 Yellow ADP-65VH BA, LV5, Low profile LED LF
10001081 DELTA	90W	Adapter DELTA 90W 19V 1.7x5.5x11 Blue ADP-90CD DB A, LV5 LED LF
60002015 HIPRO	65W	Adapter HIPRO 65W 19V 1.7x5.5x11 Yellow HP-A0652R3B 1LF, LV5 LED LF
60002015 HIPRO	90W	Adapter HIPRO 90W 19V 1.7x5.5x11 Blue HP-A0904A3 B1LF, LV5 LED LF
60016453 CHICONY POWER	65W	Adapter Chicony Power 65W 19V 1.7x5.5x11 Yellow CPA09-A065N1, LV5, low profile LED LF
Audio Codec		
PLM00004 Conexant	CX20672-11Z	Conexant CX20672-11Z
B cover		
9999995 ONE TIME VENDER	Normal w/ Camera	Normal w/Camera
Battery		
60001535 PANASONIC	6CELL2.2	Battery PANASONIC AS10D Li-Ion 3S2P PANASONIC 6 cell 4400mAh Main COMMON ID:AS10D51
60001535 PANASONIC	6CELL3.0	Battery PANASONIC AS10D Li-Ion 3S2P PANASONIC 6 cell 6000mAh Main COMMON ID:AS10D5E

Vendor	Type	Description
60001921 SANYO	6CELL2.2	Battery SANYO AS10D Li-Ion 3S2P SANYO 6 cell 4400mAh Main COMMON ID:AS10D31
60001921 SANYO	6CELL3.0	Battery SANYO AS10D Li-Ion 3S2P SANYO 6 cell 6000mAh Main COMMON ID:AS10D3E
60001921 SANYO	9CELL3.0	Battery SANYO AS10G Li-Ion 3S3P SANYO 9 cell 9000mAh Main COMMON ID:AS10G3E
60002162 SIMPLO	6CELL3.0	Battery SIMPLO AS10D Li-Ion 3S2P SAMSUNG 6 cell 6000mAh Main COMMON ID:AS10D7E
Bluetooth		
10001018 HON HAI	BT 3.0	Foxconn Bluetooth BRM 2046 BT3.0 (T60H928.33) f/w:861
10001018 HON HAI	BT 3.0	Foxconn Bluetooth ATH AR3011 (BT3.0)
10001018 HON HAI	BT 3.0	Foxconn Bluetooth BRM 2070 (T77H114.01) BT 3.0
23707801 FOXCONN TW	BT 2.1	Foxconn Bluetooth BRM 2046 BT2.1 (T60H928.33) f/w:861
23707801 FOXCONN TW	BT 2.1	Foxconn Bluetooth ATH AR3011
23707801 FOXCONN TW	BT 2.1	Foxconn Bluetooth BRM 2070 (T77H114.01)
Camera		
10001023 LITE-ON	1.3M	Liteon 1.3M LT9665AL (09P2SF119)
10001023 LITE-ON	1.3M	Liteon 1.3M LT6AASP(09P2BF127)
10001044 CHICONY	1.3M	Chicony 1.3M CH9665SN (CNF9157)
PLM00012 Suyin	1.3M	Suyin 1.3M SY9665SN
Card Reader		
PLM00014 ODM	5 in 1-Build in	5 in 1-Build in MS, MS Pro, SD, SC, XD
CPU		
10001067 INTEL	Ci3330M	CPU Intel Core i3 330M PGA 2.13G 35W Arrandale, TJ90, VT, 3M L3
10001067 INTEL	Ci3350M	CPU Intel Core i3 350M PGA 2.26G 35W Arrandale, TJ90, VT, 3M L3
10001067 INTEL	Ci3350M	CPU Intel Core i3 350M PGA 2.26G 35W K-0 TJ90, VT
10001067 INTEL	Ci3370M	CPU Intel Core i3 370M PGA 2.4G 35W K-0 TJ90, VT
10001067 INTEL	Ci5430M	CPU Intel Core i5 430M PGA 2.26G ARD, up to SC 2.53G, 3M L3
10001067 INTEL	Ci5450M	CPU Intel Core i5 450M PGA 2.4G 35W K-0 up to SC 2.66G
10001067 INTEL	Ci5520M	CPU Intel Core i5 520M 2.4G
10001067 INTEL	Ci5540M	CPU Intel Core i5 540M 2.53G 3M
10001067 INTEL	Ci7620M	CPU Intel Core i7 620M PGA 2.66G
10001067 INTEL	PMDP6000	CPU Intel Pentium Dual-Core P6000 1.86G 35W C2 DDR3-1066
Finger Print		
F0000599 EGIS	SS801U	LTT Finger Print SS801U

Vendor	Type	Description
HDD		
10001067 INTEL	SSD25160	Flash Disk INTEL SSD NAND 160GB SSDSA2MH160G2AC MM#908113 9.5mm LF+HF
60001922 TOSHIBA DIGI	N160GB5.4KS	HDD TOSHIBA 2.5" 5400rpm 160GB MK1665GSX, Capricorn BS, 320G/P SATA 8MB LF F/W:GJ002J
60001922 TOSHIBA DIGI	N250GB5.4KS	HDD TOSHIBA 2.5" 5400rpm 250GB MK2565GSX, Capricorn BS, 320G/P SATA 8MB LF F/W:GJ002J
60001922 TOSHIBA DIGI	N320GB5.4KS	HDD TOSHIBA 2.5" 5400rpm 320GB Capricorn BS ,MK3265GSX SATA 8MB LF F/W:GJ002J
60001922 TOSHIBA DIGI	N500GB5.4KS	HDD TOSHIBA 2.5" 5400rpm 500GB MK5065GSX,Capricorn BS, 320G/P SATA 8MB LF F/ W:GJ002J
60001922 TOSHIBA DIGI	N640GB5.4KS	HDD TOSHIBA 2.5" 5400rpm 640GB MK6465GSX,Capricorn BS,320G/P SATA 8MB LF F/ W:GJ002J
60001994 WD	N160GB5.4KS	HDD WD 2.5" 5400rpm 160GB WD1600BEVT-22A23T0 , WD, ML320S SATA 8MB LF F/W:01.01A01
60001994 WD	N250GB5.4KS	HDD WD 2.5" 5400rpm 250GB WD2500BEVT- 22A23T0, WD, ML320S SATA 8MB LF F/W:01.01A01.
60001994 WD	N320GB5.4KS	HDD WD 2.5" 5400rpm 320GB WD3200BEVT- 22A23T0,ML320S,WD SATA 8MB LF F/W:01.01A01
60001994 WD	N500GB5.4KS	HDD WD 2.5" 5400rpm 500GB WD5000BEVT- 22A0RT0, ML320M,WD SATA 8MB LF F/W:01.01A01
60001994 WD	N640GB5.4KS	HDD WD 2.5" 5400rpm 640GB WD6400BEVT- 22A0RT0, ML320 SATA 8MB LF F/W:01.01A01
60002005 HGST SG	N160GB5.4KS	HDD HGST 2.5" 5400rpm 160GB HTS545016B9A300 Panther B SATA LF F/W:C60F Disk imbalance criteria = 0.014g-cm
60002005 HGST SG	N250GB5.4KS	HDD HGST 2.5" 5400rpm 250GB HTS545025B9A300 Panther B SATA LF F/W:C60F Disk imbalance criteria = 0.014g-cm
60002005 HGST SG	N250GB7.2KS	HDD HGST 2.5" 7200rpm 250GB HTS723225L9A360 Falcon-C SATA LF F/W:C30F
60002005 HGST SG	N320GB5.4KS	HDD HGST 2.5" 5400rpm 320GB HTS545032B9A300 Panther B SATA LF F/W:C60F Disk imbalance criteria = 0.014g-cm
60002005 HGST SG	N320GB7.2KS	HDD HGST 2.5" 7200rpm 320GB HTS723232L9A360 Falcon-C SATA 16MB LF F/W:C30F
60002005 HGST SG	N500GB5.4KS	HDD HGST 2.5" 5400rpm 500GB HTS545050B9A300 Panther B SATA LF F/W:C60F Disk imbalance criteria = 0.014g-cm
60002005 HGST SG	N500GB7.2KS	HDD HGST 2.5" 7200rpm 500GB HTS725050A9A364 SATA 8MB LF F/W: C70E
60002036 SEAGATE	N160GB5.4KS	HDD SEAGATE 2.5" 5400rpm 160GB ST9160314AS Wyatt SATA LF F/W:0001SDM1
60002036 SEAGATE	N250GB5.4KS	HDD SEAGATE 2.5" 5400rpm 250GB ST9250315AS Wyatt SATA LF F/W:0001SDM1
60002036 SEAGATE	N250GB7.2KS	HDD SEAGATE 2.5" 7200rpm 250GB ST9250410AS Holiday SATA LF F/W:0002SDM1
60002036 SEAGATE	N320GB5.4KS	HDD SEAGATE 2.5" 5400rpm 320GB ST9320325AS Wyatt SATA LF F/W:0001SDM1

Vendor	Type	Description
60002036 SEAGATE	N320GB7.2KS	HDD SEAGATE 2.5" 7200rpm 320GB ST9320423AS Holiday SATA LF F/W:0002SDM1
60002036 SEAGATE	N500GB5.4KS	HDD SEAGATE 2.5" 5400rpm 500GB ST9500325AS Wyatt SATA LF F/W:0001SDM1
60002036 SEAGATE	N500GB7.2KS	HDD SEAGATE 2.5" 7200rpm 500GB ST9500420AS Holiday SATA LF F/W:0002SDM1
Keyboard		
60004864 DARFON	TM4T_A10B	Keyboard ACER TM4T_A10B TM4T Internal 14 Standard Black NONE Y2010 Acer Legend Texture
LAN		
610112 BROADCOM	BCM57760	Broadcom BCM57760
LCD		
60002215 SAMSUNG	NLED14WXGAS	LED LCD SAMSUNG 14" WXGA None Glare LTN140AT12-001 LF 200nit 16ms 500:1 power saving
60003089 LG	NLED14WXGAS	LED LCD LPL 14" WXGA None Glare LP140WH2-TLB1 LF 200nit 16ms 500:1
60003089 LG	NLED14WXGAS	LED LCD LPL 14" WXGA None Glare LP140WH2-TLM1 LF 200nit 16ms 400:1 (Power saving)
60003316 AUO	NLED14WXGAG S	LED LCD AUO 14" WXGA Glare B140XW03 V0 LF 200nit 8ms 500:1 (Power saving)
60003316 AUO	NLED14WXGAS	LED LCD AUO 14" WXGA None Glare B140XW02 V3 LF 200nit 8ms 500:1
60003316 AUO	NLED14WXGAS	LED LCD AUO 14" WXGA None Glare B140XW03 V1 LF 200nit 8ms 400:1 (power saving)
MEM		
60001993 NANYA	SO2GBIII13	Memory NANYA SO-DIMM DDRIII 1333 2GB NT2GC64B8HC0NS-CG LF 128*8 0.065um
60002045 HYNIX	SO1GBIII10	Memory HYNIX SO-DIMM DDRIII 1066 1GB HMT112S6BFR6C-G7 N0 LF 64*16 0.055um
60002045 HYNIX	SO1GBIII13	Memory HYNIX SO-DIMM DDRIII 1333 1GB HMT112S6TFR8C-H9 LF 128*8 0.055um
60002045 HYNIX	SO2GBIII13	Memory HYNIX SO-DIMM DDRIII 1333 2GB HMT125S6TFR8C-H9 LF 128*8 0.055um
60002215 SAMSUNG	SO1GBIII10	Memory SAMSUNG SO-DIMM DDRIII 1066 1GB M471B2873EH1-CF8 LF 64*16 0.055um
60002215 SAMSUNG	SO1GBIII13	Memory SAMSUNG SO-DIMM DDRIII 1333 1GB M471B2873FHS-CH9 LF 128*8 46nm
60002215 SAMSUNG	SO2GBIII13	Memory SAMSUNG SO-DIMM DDRIII 1333 2GB M471B5673FH0-CH9 LF 128*8 46nm
60002215 SAMSUNG	SO4GBIII10	Memory SAMSUNG SO-DIMM DDRIII 1066 4GB M471B5273BH1-CF8 LF 256*8 0.055um
60002215 SAMSUNG	SO4GBIII13	Memory SAMSUNG SO-DIMM DDRIII 1333 4GB M471B5273CH0-CH9 LF 256*8 46nm
60004668 ELPIDA	SO1GBIII10	Memory ELPIDA SO-DIMM DDRIII 1066 1GB EBJ10UE8BDS0-AE-F LF 128*8 0.065um
60004668 ELPIDA	SO1GBIII13	Memory ELPIDA SO-DIMM DDRIII 1333 1GB EBJ10UE8BDS0-DJ-F LF 128*8 0.065um

Vendor	Type	Description
60004668 ELPIDA	SO2GBIII10	Memory ELPIDA SO-DIMM DDRIII 1066 2GB EBJ21UE8BDS0-AE-F LF 128*8 0.065um
60004668 ELPIDA	SO2GBIII13	Memory ELPIDA SO-DIMM DDRIII 1333 2GB EBJ21UE8BDS0-DJ-F LF 128*8 0.065um
60004668 ELPIDA	SO4GBIII13	Memory ELPIDA SO-DIMM DDRIII 1333 4GB EBJ41UF8BAS0-DJ-F LF 256*8 0.055um
60024207 KINGSTON	SO2GBIII13	Memory KINGSTON SO-DIMM DDRIII 1333 2GB ACR256X64D3S1333C9 LF 128*8 0.065um
Modem		
10001023 LITE-ON	Lite+Con MC4Z 1.5_3.3V Aus	Lite-On Conexant -Unizion 1.5_3.3v AUS RD02-D330
NB Chipset		
10001067 INTEL	HM55	NB Chipset Intel CS BD82HM55
ODD		
10001063 SONY	NBDCB4XS	ODD SONY BD COMBO 12.7mm Tray DL 4X BC-5500H LF W/O bezel SATA (HF + Windows 7)
10001063 SONY	NSM8XS	ODD SONY Super-Multi DRIVE 12.7mm Tray DL 8X AD-7585H LF W/O bezel SATA (HF + Windows 7)
10001070 PHILIPS	NBDCB4XS	ODD PLDS BD COMBO 12.7mm Tray DL 4X DS-4E1S LF W/O bezel SATA (Windows 7)
10001070 PHILIPS	NSM8XS	ODD PLDS Super-Multi DRIVE 12.7mm Tray DL 8X DS-8A4SH LF W/O bezel SATA (HF + Windows 7)
60001922 TOSHIBA DIGI	NSM8XS	ODD TOSHIBA Super-Multi DRIVE 12.7mm Tray DL 8X TS-L633C LF W/O bezel SATA (HF + Windows 7)
610105 HLDS	NBDCB4XS	ODD HLDS BD COMBO 12.7mm Tray DL 4X CT21N LF W/O bezel 1.00 SATA (HF + Windows 7)
610105 HLDS	NSM8XS	ODD HLDS Super-Multi DRIVE 12.7mm Tray DL 8X GT30N LF W/O bezel SATA (HF + Windows 7)
610105 HLDS	NSM8XS	ODD HLDS Super-Multi DRIVE 12.7mm Tray DL 8X GT31N (R5-1) LF W/O bezel SATA with Renesas Solution (HF + Windows 7)
OS2		
10000981 MISC	XPP	Microsoft OS WinXP Pro
Software		
10000981 MISC	McAfee	Antivirus application McAfee
TPM		
610092 INFINEON	SLB9635TT1.2	Infineon SLB9635TT1.2 TPM 1.2
VGA Chip		
10001067 INTEL	UMA	UMA (Intel)
60001915 NVIDIA	N11MGE1	NVIDIA N11MGE1 A3 40nm 29mm*29mm GB1-128 package
60001915 NVIDIA	N11MGE1	NVIDIA N11MGE1 B1 40nm 29mm*29mm GB1-128 package
60001915 NVIDIA	N11PGE1	NVIDIA N11PGE1 A3 40nm 29mm*29mm GB1-128 package
60001915 NVIDIA	N11PGE1	NVIDIA N11PGE1 A2 40nm 29mm*29mm GB1-128 package

Vendor	Type	Description
10000981 MISC	1G-DDR3 (64*16*8)	1G-DDR3 64*16*8
10000981 MISC	512M-DDR3 (64*16*4)	512M-DDR3 64*16*4
60002045 HYNIX	VR1GbIII8	VRAM HYNIX Graphic DDRIII 800 1Gb H5TQ1G63BFR-12C LF
60002215 SAMSUNG	VR1GbIII8	VRAM SAMSUNG Graphic DDRIII 800 1Gb K4W1G1646E-HC12 LF
WiFi Antenna		
10000105 WNC	PIFA	PIFA
Wireless LAN		
10001023 LITE-ON	3rd WiFi 2x2 BGN	Liteon Wireless LAN Atheros HB93 2x2 BGN (HM) WN6602AH
10001023 LITE-ON	3rd WiFi 2x2 BGN	Liteon Wireless LAN Atheros HB97 2x2 BGN (HM) WN6603AH
23707801 FOXCONN TW	3rd WiFi 2x2 BGN	Foxconn Wireless LAN Atheros HB93 2x2 BGN (HM)
23707801 FOXCONN TW	3rd WiFi 2x2 BGN	Foxconn Wireless LAN Broadcomm 43225 2x2 BGN (HM) T77H103.00
23707801 FOXCONN TW	3rd WiFi 2x2 BGN	Foxconn Wireless LAN Atheros HB97 2x2 BGN (HM)
23707801 FOXCONN TW	3rd WiFi BG	Foxconn Wireless LAN Broadcom 4312H BG (HM)
23707801 FOXCONN TW	3rd WiFi BG	Foxconn Wirelss LAN Atheros HB95BG (HM) T77H121.10

Online Support Information

This section describes online technical support services available to help you repair your Acer Systems.

If you are a distributor, dealer, ASP or TPM, please refer your technical queries to your local Acer branch office. Acer Branch Offices and Regional Business Units may access our website. However some information sources will require a user i.d. and password. These can be obtained directly from Acer CSD Taiwan.

Acer's Website offers you convenient and valuable support resources whenever you need them.

In the Technical Information section you can download information on all of Acer's Notebook, Desktop and Server models including:

- Service guides for all models
- User's manuals
- Bios updates
- Software utilities
- Spare parts lists
- TABs (Technical Announcement Bulletin)

For these purposes, we have included an Acrobat File to facilitate the problem-free downloading of our technical material.

Also contained on this website are:

- Detailed information on Acer's International Traveler's Warranty (ITW)
- Returned material authorization procedures
- An overview of all the support services we offer, accompanied by a list of telephone, fax and email contacts for all your technical queries.

We are always looking for ways to optimize and improve our services, so if you have any suggestions or comments, please do not hesitate to communicate these to us.

B

Battery Pack 40, 122

BIOS

ROM type 17
vendor 17

BIOS Utility 21–29

Advanced 24
Boot 27
Exit 28
Navigating 21
Power 27
Save and Exit 28
Security 24
System Security 28

Board Layout

Top View 137

C

Camera Module 80, 89

Common Problems 124

D

DIMM Module 45, 118

Display 4

E

EasyTouch Failure 133

External Module Disassembly
Flowchart 39, 113

F

Features 1

FLASH Utility 29

Flash Utility 29

FRU (Field Replaceable Unit) List 141

H

Hard Disk Drive Module 43, 118

HDTV Switch Failure 133

Hot Keys 10

I

Intermittent Problems 134

Internal Microphone Failure 128

Internal Speaker Failure 127

J

Jumper and Connector Locations 137

K

Keyboard Failure 127

L

LCD Bezel 78, 89

LCD Failure 127

LCD Module Disassembly
Flowchart 77, 85

LCD Panel 81, 87

lower cover 42, 121

M

Main Unit Disassembly
Flowchart 52, 92

Mainboard 68, 97

media access
on indicator 6

Memory Check 124

Model Definition 154

N

No Display Issue 125

O

ODD Failure 130

Online Support Information 161

optical drive module 48, 114

P

Panel 5

Bottom 7
left 5

Power On Failure 124

R

RTC Battery 70, 97

S

SD Card 41, 122

System

Block Diagram 4

T

Test Compatible Components 155

Thermal Module 72, 95

Thermal Unit Failure 133

TouchPad Failure 127

Troubleshooting

Built-in KB Failure 127

EasyTouch Buttons 133

HDTV Switch 133

Internal Microphone 128

Internal Speakers 127

LCD Failure 127

No Display 125

ODD 130

Other Failures 133

Power On 124

Thermal Unit 133

TouchPad 127

WLAN 133

U

Undetermined Problems 134

utility

BIOS 21–29

W

Wireless Function Failure 133

WLAN Board 46